

RSAES

Version:
v1.0

Date:
13.06.2025



Contents

1	Introduction	3
1.1	Introduction to Industrial Managed Switch	3
1.2	Software Features	3
1.3	Introduction to the Document	4
2	Configuring with a Web Browser	5
2.1	System	6
2.2	Ports	21
2.3	ERPS	24
2.4	DHCPv4	28
2.5	Security	31
2.6	Aggregation	94
2.7	Spanning Tree	98
2.8	IPMC	108
2.9	LLDP	115
2.10	SyncE	117
2.11	MAC Table	121
2.12	VLANs	124
2.13	VCL	128
2.14	QoS	133
2.15	Mirroring	158
2.16	PTP	161
2.17	GVRP	165
2.18	DDMI	168
2.19	UDLD	169
2.20	SD Backup	171
2.21	Modbus Setting	172
2.22	Modbus Memory Map	180
3	Monitor	182
3.1	System	182
3.2	Ports	192
3.3	ERPS	198
3.4	DHCPv4	201
3.5	Security	204
3.6	Aggregation	228
3.7	Spanning Tree	235
3.8	IPMC	238
3.9	LLDP	246
3.10	PTP	249
3.11	MAC Table	251
3.12	VLANs	252
3.13	DDMI	255
3.14	UDLD	258
4	Diagnostics	260
4.1	Ping (IPv4)	260
4.2	Ping (IPv6)	262
4.3	Traceroute (IPv4)	264
4.4	Traceroute (IPv6)	267

5	Maintenance	269
5.1	Restart Device	269
5.2	Factory Defaults	270
5.3	Software	270
5.4	Configuration	271
6	OSS Clearings	276
6.1	License summary	276
6.2	Raw licenses	277
7		317
8		318
9		319
10		320

1 Introduction

1.1 Introduction to Industrial Managed Switch

Welotec's RSAES series are product lines of powerful industrial managed switch which are referred to as Open Systems Interconnection (OSI) Layer 2 bridging devices. Unlike an “unmanaged” switch, which is normally found in homes or in Small Office/Home Office (SOHO) environments and runs in “auto-negotiation” mode, each port on a “managed switch” can be configured for its link bandwidth, priority, security, and duplex settings. The managed switches can be managed by Simple Network Management Protocol (SNMP) software, web browsers, Telnet, or serial console. Since every single port can be configured to specific settings, network administrators can better control the network and maximize network functionality.

Welotec's managed switch is also an industrial switch and not a commercial switch. A commercial switch simply works in a comfortable office environment. However, an industrial switch is designed to perform in harsh industrial environments, i.e., extreme temperature, high humidity, dusty air, potential high impact, or the presence of potentially high static charges. Welotec's managed switch works fine even in these environments.

Welotec's managed switch is designed to provide faster, secure, and more stable network. Advantages that make it a powerful switch are that it supports security such as IP Source Guard, DHCP Snooping, ARP Inspection as well as Access Control List (ACL) and network redundancy protocols/technologies such as Ethernet Ring Protection Switching (ERPS), Rapid Spanning Tree Protocol (RSTP), and Multiple Spanning Tree Protocol (MSTP). These protocols provide better network reliability and decrease recovery time.

Welotec's managed switch supports a wide range of IEEE standard protocols. This switch is excellent for keeping systems running smoothly, reliable for preventing system damage or losses, and friendly to all levels of users. The goal of this innovative product is to bring users an enhanced network management experience.

Note: Throughout the manual, the symbol * indicates that more detailed information of the subject will be provided at the end of this book or as a footnote.

1.2 Software Features

Welotec's industrial Layer-2 managed switches come with a wide range of network protocols and software features. These protocols and software features allow the network administrator to implement security and reliability into their network. These features enable Welotec's switches to be used in safety applications, and factory and process automation. The followings are the list of protocols and software features.

- User Interfaces
 - Web browser
 - Telnet Console
 - Serial Console
- Dynamic Host Configuration Protocol (DHCP) Snooping/Relay/Client
- Time Synchronization
 - Network Time Protocol (NTP) Client
 - Simplified Network Time Protocol (SNTP)
 - IEEE 1588 Precision Clock Synchronization Protocol (PTP) v2 hw-E2E TC and hw-sw-Boundary ✕ hw-Boundary Clock
 - SyncE

- Port Mirroring
- Quality of Service (QoS) Traffic Regulation
- Link Aggregation Control Protocol (LACP)
- Medium Access Control (MAC) Filter
- GARP VLAN Registration Protocol (GVRP)
- Internet Group Management Protocol (IGMP)/ Multicast Listener Discovery (MLD)
- Simple Network Management Protocol (SNMP) v1/v2/v3
- SNMP Inform
- Spanning Tree Protocol (STP)/ Rapid Spanning Tree Protocol (RSTP)/ Multiple Spanning Tree Protocol (MSTP) / Virtual Local Area Network (VLAN)
- IEEE 802.1x/ Extensible Authentication Protocol (EAP) / Remote Authentication Dial-In User Service (RADIUS) / Terminal Access Controller Access-Control System (TACACS+)
- Security feature including Port Security/ IP Source Guard/ ARP Inspection/ Access Control List (ACL)
- Ring
 - Ethernet Ring Protection Switching (ERPS)
- Link Layer Discovery Protocol (LLDP)
- Alarm System (with E-mail Notification or Relay Output)
- Industrial Protocols
 - Modbus/TCP
- SD Backup

1.3 Introduction to the Document

There are total of five sections in this document: Introduction, Configuration, Monitor, Diagnostics, Maintenance. The first section introduces the device, the software features, and the document. The second section, configuration shows users the setting webpage and the meaning of each parameter. The third section, Monitor, allows user to see the current status of the device. The forth section, Diagnostics, allows user to identify problems and troubleshooting through ping and traceroute webpage. Lastly, the fifth section, Maintenance, will let user to restart the device, reset all settings to the default values, as well as, upload software version and save/download/upload/activate/delete the current configuration.

2 Configuring with a Web Browser

There are three ways to configure Welotec's Industrial Managed Ethernet Switch: Web browser, Telnet console, and Serial console. How to access the industrial managed switch through web browser is explained in Chapter 2 through Chapter 5. There are only a few differences among these three methods. The web browser and the telnet console methods allow users to access the switch over the Internet or the Ethernet LAN, while the serial console method requires a serial cable connection between the console and the switch. Users are recommended to configure the switch via a web browser because of its user-friendly interface.

Next, we will proceed to use a web browser to introduce the managed switch's functions. It is recommended to use Microsoft Edge 103, Firefox 44, Chrome 48 or later versions. Below is a list of default factory settings. This information will be used during the login process. Make sure that the computer accessing the switch are in the same subnet. That is the computer has an IP address and the subnet mask same as the switch. Please pay attention when inputting the username and password, as they are case sensitive.

IP Address: 192.168.2.1

Subnet Mask: 255.255.0.

Default Gateway: 0.0.0.0


User Name: admin

Password: RSAES@Welotec

Before users can access the configuration, they have to log in. This can simply be done in the following steps.

1. Launch a web browser.
2. Type in the switch IP address (default: `http://192.168.2.1`). As shown in Figure 2.1. another IP-Address (e.g. 10.0.50.1) may be used depending on your setup.

Note: When the user name and the password are left empty, the login prompt will not show.

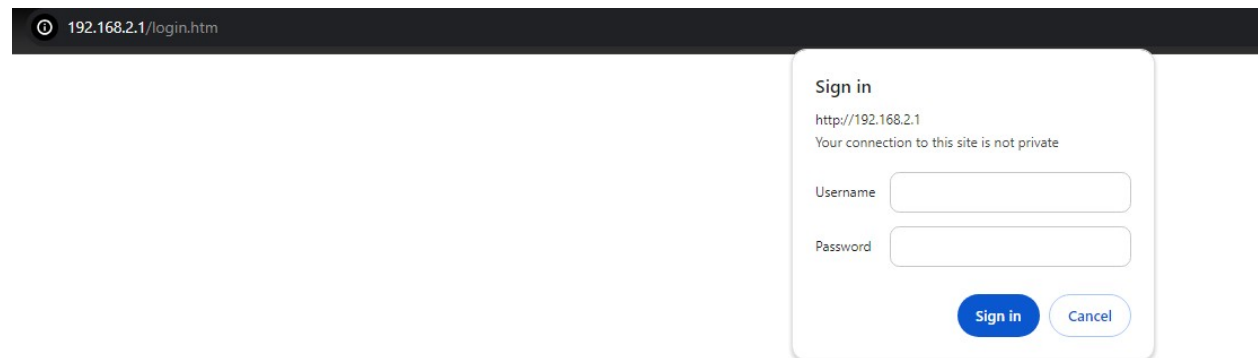

3. The user can enter a **Username** and a **Password** to access the managed switch. Then, clicking on the **Sign in** button.

Sign in

http://192.168.2.1

Your connection to this site is not private

Username

admin

Password

Sign in

Cancel

1. If the user entered wrong passwords, users can try to re-enter the new username and password again until it is correct. Or users can simply click the **Cancel** button to forfeit the process.
2. If the login process was success, the user will be presented with the Port State Overview webpage which shows the front panel of the managed switch as shown in Figure 2.3.

Managed Switch



[Configuration](#)
[Monitor](#)
[Diagnostics](#)
[Maintenance](#)

Port State Overview

Front panel



2.1 System

This section describes how users can configure system information in details. Figure 2.4 shows submenus under the **Configuration** > **System** main menu.



Configuration

System

Information

IP

NTP

Time

Log

DIP Switch

Alert

SMTP Setting

2.1.1 Information

This subsection describes how users can assign system's details to the Welotec's switch. There are three fields in this **System Information Configuration** webpage: **System Contact**, **System Name**, and **System Location**. By entering this unique and relevant system information, it will help identifying one specific switch among all the others in the network. However, the switch must support a SNMP protocol. Figure 2.5 shows the System Information Configuration Webpage to an RSAES managed switch model. Please click the "**Save**" button to update the information on the switch. Clicking on the Reset button will undo any changes made locally and revert to previously save values. Table 2.1 summarizes the device information setting descriptions and corresponding default factory settings.



Configuration

System

Information

IP

NTP

Time

Log

DIP Switch

Alert

SMTP Setting

System Information Configuration

System Contact	<input type="text"/>
System Name	<input type="text"/>
System Location	<input type="text"/>

<input type="button" value="Save"/>	<input type="button" value="Reset"/>
-------------------------------------	--------------------------------------


Table 2.1 Description of the System Information Configuration:




La- bel	Description	Fac- tory De- fault
Sys- tem Con- tact	Provides contact information for maintenance. Enter the name of whom to contact in case a problem occurs. The allowed string length is 0 to 255, and the allowed content is the ASCII characters from 32 to 126.	Null
Sys- tem Name	Specifies a particular role or application of different switches. The name entered here will also be shown in Welotec's Device Management Utility. By convention, this is the node's fully-qualified domain name. A domain name is a text string drawn from the alphabet (A-Za-z), digits (0-9), minus sign (-). No space characters are permitted as part of a name. The first character must be an alpha character. And the first or last character must not be a minus sign. The allowed string length is 0 to 255.	Null
Sys- tem Lo- ca- tion	The physical location of this node (e.g., telephone closet, 3rd floor). The allowed string length is 0 to 255, and the allowed content is the ASCII characters from 32 to 126.	Null

2.1.2 IP

In this subsection, the user may modify network settings on Internet Protocol (IP) for the managed switch. This subsection is divided into three parts: **IP Configuration**, **IP Interfaces**, and **IP Routes**, as shown in Table 2.7. First, the **IP Configuration** part is related to how the managed switch will be operated as Host. The **IP Interfaces** part is related to IP Address configuration and DHCP configuration for both IPv4 and IPv6. Finally, the **IP Routes** part contains the routing table that provides information about the network destination, gateway, next hop, and distance.

Managed Switch



Configuration

- System Information
- IP
- NTP
- Time
- Log
- DIP Switch
- Alert
- SMTP Setting
- Ports
- ERPS
- DHCPv4
- Security
- Aggregation
- Spanning Tree
- IPMAC
- LLDP
- SyncE
- MAC Table
- VLANs
- VCL
- QoS
- Mirroring
- PTP
- GVRP
- CDMI
- UDLD
- SD Backup
- Modbus Setting
- Monitor**
- Diagnostics
- Maintenance

IP Configuration

Mode: Host

DNS Server 0: No DNS server

DNS Server 1: No DNS server

DNS Server 2: No DNS server

DNS Server 3: No DNS server

DNS Proxy: ☐

IP Interfaces

Delete	IF	Enable	Type	Client ID			Hostname	Fallback	Current Lease	IPv4		DHCPv6		IPv6	
				iMac	ASCII	HEX				Address	Mask Length	Enable	Rapid Commit	Current Lease	Address
<input type="checkbox"/>	VLAN 1	<input type="checkbox"/>	Auto	Port 1				0		192.168.2.1	24	<input type="checkbox"/>	<input type="checkbox"/>		
<input type="checkbox"/>	VLAN 2	<input checked="" type="checkbox"/>	Auto	Port 1				0	192.168.130.141			<input type="checkbox"/>	<input type="checkbox"/>		

[Add Interface](#)

IP Routes

Delete	Network	Mask Length	Gateway	Next Hop VLAN (IPv6)	Distance
Add Route					

[Save](#) [Reset](#)

The first part as shown in Figure 2.6 allows the user to set the operating mode of the managed switch. The user can enter up to four DNS Servers. A **DNS** (domain name system) **proxy** allows clients to set up device as a DNS proxy server. A DNS proxy improves domain lookup performance by caching previous lookups. A typical DNS proxy processes DNS queries by issuing a new DNS resolution query to each name server that it has detected until the hostname is resolved. Table 2.2 provides detailed description of each option in this part which is also called basic setting.

IP Configuration

Mode	Host ▼	
DNS Server 0	No DNS server ▼	
DNS Server 1	No DNS server ▼	
DNS Server 2	No DNS server ▼	
DNS Server 3	No DNS server ▼	
DNS Proxy	<input type="checkbox"/>	

Table 2.2 Description of Basic Settings:

La- bel	Description
Mode	Configure the IP stack to act as a Host, where IP traffic between interfaces will not be routed.
DNS Server	This setting controls the DNS name resolution done by the switch. There are four servers available for configuration, and the index of the server presents the preference (less index has higher priority) in doing DNS name resolution. The following modes are supported: <ul style="list-style-type: none"> - No DNS server: No DNS Server will be used. - Configured IPv4: Explicitly provide the valid IPv4 unicast address of the DNS Server in dotted decimal notation. Make sure the configured DNS server could be reachable (e.g. via PING) for activating DNS service. - Configured IPv6: Explicitly provide the valid IPv6 unicast (except local link) address of the DNS Server. Make sure the configured DNS server could be reachable (e.g. via PING6) for activating DNS service. - From any DHCPv4 interfaces: The first DNS server offered from a DHCPv4 lease to a DHCPv4-enabled interface will be used. - From this DHCPv4 interface: Specify from which DHCPv4-enabled interface a provided DNS server should be preferred. - From any DHCPv6 interfaces: The first DNS server offered from a DHCPv6 lease to a DHCPv6-enabled interface will be used. - From this DHCPv6 interface: Specify from which DHCPv6-enabled interface a provided DNS server should be preferred.
DNS Proxy	When DNS proxy is enabled, system will relay DNS requests to the currently configured DNS server, and reply as a DNS resolver to the client devices on the network. Only IPv4 DNS proxy is now supported.

The second part of IP Setting section is the **IP Interface** part as shown in Figure 2.8. The user can choose to enable **DHCP** (Dynamic Host Configuration Protocol) for DHCPv4 and/or DHCPv6 by checking the box behind it. That is the IP address and related information can be automatically obtained from a DHCP server in the local network thus reducing the work for an administrator. By disabling this function (DHCP's box is unchecked), the user has an option to setup the static IP address and related fields manually. If DHCP is disabled, the user should enter the IP addresses and Max Length (subnet mask) under IPv4 and/or IPv6 columns. Table 2.3 provides detailed description of each option in this part of IP Interfaces.

IP Interfaces

Delete	IF	DHCPv4							IPv4		DHCPv6			IPv6		
		Enable	Type	IMac	ASCo	HEX	Hostname	Fallback	Current Lease	Address	Mask Length	Enable	Rapid Commit	Current Lease	Address	Mask Length
<input type="checkbox"/>	VLAN1	<input type="checkbox"/>	Auto	Port 1				0		10.0.0.1	24	<input type="checkbox"/>	<input type="checkbox"/>			

Add Interface

Table 2.3 Description of IP Interfaces' Options:

La- bel	Description
Delete	Select this option to delete an existing IP interface.
IF	The VLAN associated with the IP interface. Only ports in this VLAN will be able to access the IP interface. This field is only available for input when creating a new interface
DHCPv4 En- abled	Enable the DHCPv4 client by checking this box. If this option is enabled, the system will configure the IPv4 address and mask of the interface using the DHCPv4 protocol.
DHCPv4 Client ID Type	This specified which of the three types below, i.e. IfMac, ASCII or HEX, shall be used for the Client Identifier. See RFC-2132 section 9.14.
DHCPv4 Client ID if- Mac	The interface name of DHCP client identifier. When DHCPv4 client is enabled and the client identifier type is 'ifmac', the configured interface's hardware MAC address will be used in the DHCP option 61 field.
DHCPv4 Client ID ASCII	The ASCII string of DHCP client identifier. When DHCPv4 client is enabled and the client identifier type is 'ascii', the ASCII string will be used in the DHCP option 61 field.
DHCPv4 Client ID HEX	The hexadecimal string of DHCP client identifier. When DHCPv4 client is enabled and the client identifier type 'hex', the hexadecimal value will be used in the DHCP option 61 field.
DHCPv4 Host- name	The hostname of DHCP client. If DHCPv4 client is enabled, the configured hostname will be used in the DHCP option 12 field. When this value is empty string, the field use the configured system name plus the latest three bytes of system MAC addresses as the hostname.
DHCPv4 Fall- back	The number of seconds for trying to obtain a DHCP lease. After this period expires, a configured IPv4 address will be used as IPv4 interface address. A value of zero disables the fall-back mechanism, such that DHCP will keep retrying until a valid lease is obtained. Legal values are 0 to 4294967295 seconds.
DHCPv4 Cur- rent Lease	For DHCP interfaces with an active lease, this column shows the current interface address, as provided by the DHCP server.
IPv4 Ad- dress	The IPv4 address of the interface in dotted decimal notation. If DHCP is enabled, this field configures the fall-back address. The field may be left blank if IPv4 operation on the interface is not desired - or no DHCP fall-back address is desired.
IPv4 Mask Length	The IPv4 network mask, in number of bits (prefix length). Valid values are between 0 and 30 bits for an IPv4 address. If DHCP is enabled, this field configures the fall-back address network mask. The field may be left blank if IPv4 operation on the interface is not desired - or no DHCP fallback address is desired.
DHCPv6 En- able	Enable the DHCPv6 client by checking this box. If this option is enabled, the system will configure the IPv6 address of the interface using the DHCPv6 protocol.
DHCPv6 Rapid Com- mit	Enable the DHCPv6 Rapid-Commit option by checking this box. If this option is enabled, the DHCPv6 client terminates the waiting process as soon as a Reply message with a Rapid Commit option is received. This option is only manageable when DHCPv6 client is enabled.
DHCPv6 Cur- rent Lease	For DHCPv6 interface with an active lease, this column shows the interface address provided by the DHCPv6 server.
IPv6 Ad- dress	The IPv6 address of the interface. An IPv6 address is in 128-bit records represented as eight fields of up to four hexadecimal digits with a colon separating each field (:). For example, fe80::215:c5ff:fe03:4dc7. The symbol :: is a special syntax that can be used as a shorthand way of representing multiple 16-bit groups

The third part of IP Setting section is the **IP Routes** part as shown in Figure 2.9. Description of each field or option is summarized in Table 2.4. Please click on the **Save** button to update the IP configuration on the switch. A system reboot is required after each update, so the new network settings can take effect. The user will need to manually update the new IP address in the URL field of the web browser if the IP address of the managed switch is changed.

IP Routes

Delete	Network	Mask Length	Gateway	Next Hop VLAN (IPv6)	Distance
<input type="button" value="Add Route"/>					

Table 2.4 Description of IP Routes' Options:

Label	Description
Delete	Select this option to delete an existing IP route.
Net-work	The destination IP network or host address of this route. Valid format is dotted decimal notation or a valid IPv6 notation. A default route can use the value 0.0.0.0 or IPv6 :: notation.
Mask Length	The destination IP network or host mask, in number of bits (prefix length). It defines how much of a network address that must match, in order to qualify for this route. Valid values are between 0 and 32 bits respectively 128 for IPv6 routes. Only a default route will have a mask length of 0 (as it will match anything).
Gate-way	The IP address of the IP gateway. Valid format is dotted decimal notation or a valid IPv6 notation. Gateway and Network must be of the same type.
Next Hop VLAN (IPv6)	The VLAN ID (VID) of the specific IPv6 interface associated with the gateway. - The give VID ranges from 1 to 4095 and will be effective only when the corresponding IPv6 interface is valid. - If the IPv6 gateway address is link-local, it must specify the next hop VLAN for the gateway. - If the IPv6 gateway address is not link-local, system ignores the next hop VLAN for the gateway.
Dis-tance	The distance value of the route entry is used to provide the priority information routing protocols to routers. When two or more different routing protocols are involved and have the same destination, the distance value can be used to select the best path.

2.1.3 NTP

Welotec's industrial managed switch has internal calendar (date) and clock (or system time) which can be set manually or automatically. Figure 2.10 shows the Network Time Protocol (**NTP**) configuration webpage. Here, users can automatically set the device's time by first selecting **Enabled** from the drop-down menu of **Mode** field. Then, users must enter the IP or Domain address of up to the total of five NTP servers: Server1, Server2, Server3, Server4, and Server 5. This allows the device to synchronise date and time with one of the NTP server. First, it will be synchronized with the Server 1. If it failed to respond, the device will select the second priority server or Server 2 to synchronize time with. If the Server 2 failed to respond, the device will then contact the third priority server or Server 3. This goes on until the device gets the respond from the NTP server, or none of them is respond. If any field is NULL, the device will not contact that server and continue contacting other lower priority servers instead.

Configuration

- System
- Information
- IP
- NTP
- Time
- Log
- DIP Switch
- Alert
- SMTP Setting
- Ports
- ERPS
- DHCPv4
- Security

NTP Configuration

Mode	Disabled ▼
Server 1	
Server 2	
Server 3	
Server 4	
Server 5	

The detailed description of each field is provided in Table 2.5.

Table 2.5 Descriptions of the NTP Settings:

La- bel	Description	Fac- tory De- fault
Mode	Select to enable or disable an automatically setting of the device time. This option will disable or enable network time protocol (NTP) daemon inside the managed switch which allows this managed device to synchronize its clock with other NTP servers.	Dis- abled
Server 1	Sets the first IP or Domain address of NTP Server ; e.g., time.nist.gov.	NULL
Server 2	Sets the second IP or Domain address of NTP Server. Switch will locate the 2nd NTP Server if the 1st NTP Server fails to connect; e.g., time-A.timefreq.bldrdoc.gov	NULL
Server 3	Sets the third IP or Domain address of NTP Server. Switch will locate the 3rd NTP Server if the 2nd NTP Server fails to connect.	NULL
Server 4	Sets the fourth IP or Domain address of NTP Server. Switch will locate the 4th NTP Server if the 3rd NTP Server fails to connect.	NULL
Server 5	Sets the fifth IP or Domain address of NTP Server. Switch will locate the 5th NTP Server if the 4th NTP Server fails to connect.	NULL

2.1.4 Time

This **Time** webpage allows the user to configure the time zone and daylight saving for the managed switch. There are three setting parts within this webpage: **System Time Configuration**, **Time Zone Configuration**, and **Daylight Saving Time Configuration**.

The first part : **System Time Configuration**, users are allowed to set the device's system time by manual. Table 2.6 summarizes the descriptions of options in system time configuration.

The second part : **Time Zone Configuration**, users are allowed to set the device's time zone. By clicking the drop-down list of **Time Zone** field, users can select the device's local time zone or **Manual Setting** option*. In the **Hours** and **Minutes** fields, users can enter the number of hours and minutes of the device's time that is offset from the

local time zone when users selected **Manual Setting** option. Table 2.7 summarizes the descriptions of options in time zone configuration.

The third part: **Daylight-Saving Time Configuration**, if the switch is deployed in a region where daylight saving time is practiced (see note below for explanation), please select the **Recurring** or **Non-Recurring** options for **Daylight Saving Time** field within the **Daylight-Saving Time Configuration** box. Then, users will have to enter the **Start Time settings**, **End Time settings**, and **Offset settings** in minute(s). Note that the **Start Time settings** and **End Time setting** will be different between the **Recurring** and **Non-Recurring** options. Recurring option means that the configuration of daylight saving will be repeated every year. On the other hand, non-recurring option means that the daylight saving will be repeated only on the specified years. Table 2.8 summarizes the descriptions of options in daylight saving time configuration.

Note:

- **Daylight Saving Time:** In certain regions (e.g., US), local time is adjusted during the summer season in order to provide an extra hour of daylight in the afternoon, and one hour is usually shifted forward or backward.
- **NTP:** Network Time Protocol is used to synchronize the computer systems' clocks with a standard NTP server: Examples of two NTP servers are *time.nist.gov* and *time-A.timefreq.bldrdoc.gov*.

Configuration

- System
 - Information
 - IP
 - NTP
 - Time
 - Log
 - DIP Switch
 - Alert
 - SMTP Setting
- Ports
- ERPS
- DHCPv4
- Security
- Aggregation
- Spanning Tree
- IPMC
- LLDP
- SyncE
- MAC Table
- VLANs
- VCL
- QoS
- Mirroring
- PTP
- GVRP
- DDMI
- UDLD
- SD Backup
- Modbus Setting

Monitor

Diagnostics

Maintenance

System Time Configuration

System Time settings	
Month	Jan ▼
Date	1 ▼
Year	2000 ▼
Hours	0 ▼
Minutes	0 ▼
Seconds	31 ▼

Time Zone Configuration

Time Zone Configuration	
Time Zone	(UTC+01:00) Amsterdam, Berlin, Bern, Rome, Stockholm, Vienna ▼
Hours	1 ▼
Minutes	0 ▼
Acronym	<input type="text"/> (0 - 16 characters)

Daylight Saving Time Configuration

Daylight Saving Time Mode	
Daylight Saving Time	Disabled ▼

Start Time settings	
Month	Jan ▼
Date	1 ▼
Year	2014 ▼
Hours	0 ▼
Minutes	0 ▼

End Time settings	
Month	Jan ▼
Date	1 ▼
Year	2037 ▼
Hours	0 ▼
Minutes	0 ▼

Offset settings	
Offset	1 (1 - 1439) Minutes

Table 2.6 Description of System Time Configuration:

Label	Description
Month	Select the month of system time
Date	Select the date of system time
Year	Select the year of system time
Hours	Select the starting hour of system time
Minutes	Select the starting minute of system time
Seconds	Select the starting second of system time

Table 2.7 Description of Time Zone Configuration:

La- bel	Description
Time Zone	Lists various Time Zones worldwide. Select appropriate Time Zone from the drop down and click Save to set. The 'Manual Setting' options is used for the specific time zone which is excluded from the options list.
Hours	Number of hours offset from UTC. The field only available when Time Zone is set to Manual Setting.
Min- utes	Number of minutes offset from UTC. The field only available when Time Zone is set to Manual Setting .
Acronym	User can set the acronym of the time zone. This is a User configurable acronym to identify the time zone. (Range: Up to 16 characters) Notice the string " is a special syntax that is reserved for null input.

Table 2.8 Description of Daylight-Saving Time Configuration:

Label	Description
Daylight Saving Time	This is used to set the clock forward or backward according to the configurations set below for a defined Daylight-Saving Time duration. - Select ' Disable ' to disable the Daylight-Saving Time configuration. - Select ' Recurring ' and configure the Daylight-Saving Time duration to repeat the configuration every year. - Select ' Non-Recurring ' and configure the Daylight-Saving Time duration for single time configuration. (Default: Disabled)
Recurring Configuration	
Start Time settings	Week - Select the starting week number. Day - Select the starting day. Month - Select the starting month. Hours - Select the starting hour. Minutes - Select the starting minute.
End time settings	Week - Select the ending week number. Day - Select the ending day. Month - Select the ending month. Hours - Select the ending hour. Minutes - Select the ending minute.
Offset settings	Offset - Enter the number of minutes to add during Daylight Saving Time. (Range: 1 to 1439)
Non-Recurring Configuration	
Start Time settings	Month - Select the starting month. Date - Select the starting date. Year - Select the starting year. Hours - Select the starting hour. Minutes - Select the starting minute.
End time settings	Month - Select the ending month. Date - Select the ending date. Year - Select the ending year. Hours - Select the ending hour. Minutes - Select the ending minute.
Offset settings	Offset - Enter the number of minutes to add during Daylight Saving Time. (Range: 1 to 1439)

2.1.5 Log

Figure 2.12 shows **System Log configuration** setting webpage. System Log or syslog keeps records of messages or events that are related to the overall functionalities of the managed switch. Here the users can enable how the log will be delivered to other system. It can be sent to a remote log server. Select **Enabled** from the drop-down list of the **Server Mode** field if users want the system log to be saved in the remote log server, or select **Disabled** to disable server mode operation. The users need to select the log level and provide the IP address of a remote log server. Please click on the **Save** button after finishing the setup or **Reset** button to disregard all changes made locally and revert to previously saved values. Table 2.9 describes the details of parameters setting for the system log. Type of syslog level include: Error, Warning, Notice, and Informational.

Configuration

System
Information
IP
NTP
Time
Log
DIP Switch
Alert
SMTP Setting

System Log Configuration

Server Mode	Disabled
Server Address	
Syslog Level	Informational

Save Reset

Table 2.9 Descriptions of the System Zone Configuration:

Field	Detailed description of mode
Server Mode	Indicates the server mode operation. When the mode is enabled, the syslog message will send out to syslog server. The syslog protocol is based on UDP communication and received on UDP port 514 and the syslog server will not send acknowledgments back sender since UDP is a connectionless protocol and it does not provide acknowledgments. The syslog packet will always send out even if the syslog server does not exist. Possible modes are: Enabled : Enable server mode operation. Disabled : Disable server mode operation.
Server Address	Indicates the IPv4 host address of syslog server. If the switch provides DNS feature, it also can be a domain name.
Syslog Level	Indicates what kind of message will send to syslog server. Possible modes are: - Error : Send the specific messages which severity code is less or equal than Error(3). - Warning : Send the specific messages which severity code is less or equal than Warning(4). - Notice : Send the specific messages which severity code is less or equal than Notice(5). - Informational : Send the specific messages which severity code is less or equal than Informational(6).

2.1.6 DIP Switch

This section describes the **DIP Switch Configuration**. Click the **Enable DIP Switch Control** box to enable it. The DIP switch 1 on/off means Ring is activated/deactivated. The DIP switch 2 on/off means Master is selected/deselected, and Slave is deselected/selected. When the DIP Switch 3 and 4 are on, nothing (N/A) is selected. When the DIP switch 3 and 4 are off, ERPS is selected. Webpage for configuring the system DIP switch is shown in Figure 2.13. Click **Save** button to update the **DIP Switch Configuration**.



Configuration

- System
- Information
- IP
- NTP
- Time
- Log
- DIP Switch
- Alert
- SMTP Setting
- Ports
- ERPS
- DHCPv4
- Security

DIP Switch Configuration

☒ Enable DIP Switch Control

DIP Switch	Status	Description
1	Off	Ring is deactivate
2	Off	Slave is selected
3	Off	ERPS is selected
4	Off	

Save

2.1.7 Alert

This webpage allows the users to configure how each type of the power status alarm events will be sent or notify the users. Power Status Alarms keep track of power status of the switch based on the available input connectors.

RSAES supports two to three power sources. In the example, **Power1** and **Power2** are illustrated as shown in Figure 2.14. Users can enable a notification of each power source separately. Also, they can get notifications through many methods including **Relay**, **Alarm LED**, and **E-mail** by selecting **Enabled** in any of these fields. Click **Save** button to let the setting take effect, or click **Reset** button to change back to the previously saved values.



Configuration

- System
- Information
- IP
- NTP
- Time
- Log
- DIP Switch
- Alert
- SMTP Setting
- Ports
- ERPS
- DHCPv4
- Security

Power Status Alert

Power	Relay	Alarm LED	E-mail
Power 1	Disabled ▼	Disabled ▼	Disabled ▼
Power 2	Disabled ▼	Disabled ▼	Disabled ▼
Power 3	Disabled ▼	Disabled ▼	Disabled ▼

Save

Reset

Table 2.10 summarizes the Power Status Alarm event selection.

Table 2.10 Descriptions of Power Status Alarm Event Selection:

Label	Description	Factory Default
Power	Indicate specific power supply such as Power 1 and Power 2	-
Relay	Options: Disabled, Power On, or Power Off	Disabled
Alarm LED	Options: Disabled, Power On, or Power Off	Disabled
E-mail	Options: Disabled, Power On, or Power Off	Disabled

2.1.8 SMTP Setting

Simple Mail Transfer Protocol (SMTP) is an internet standard for e-mail transmission across IP networks. In case any warning events occur, the system can send an alarm message (e.g., Link Status and System Log) to users by e-mail. As shown in Figure 2.15, users can enable/disable server's authentication, input user name and password if enabled, and edit email address of the sender and four recipients. The total of four recipients are allowed to receive an e-mail.



Configuration

- System
 - Information
 - IP
 - NTP
 - Time
 - Log
 - DIP Switch
 - Alert
 - SMTP Setting
- Ports
- ERPS
- DHCPv4
- Security
- Aggregation
- Spanning Tree
- IPMC
- LLDP
- SyncE
- MAC Table
- VLANs
- VCL
- QoS

SMTP Setting

SMTP Server	<input type="text"/>
Authentication	<input type="checkbox"/>
TLS/SSL	<input type="checkbox"/>
User Name	<input type="text"/>
Change Password	<input type="checkbox"/>
Password	<input type="password"/>
E-mail address of Sender	<input type="text"/>
Subject of Mail	<input type="text"/>
E-mail Address of 1st Recipient	<input type="text"/>
E-mail address of 2nd Recipient	<input type="text"/>
E-mail address of 3rd Recipient	<input type="text"/>
E-mail address of 4th Recipient	<input type="text"/>

An example of SMTP Setting is shown in Figure 2.16. When users select the box behind the **Authentication** field, **TLS** field as well as **User Name** and **Change Password** fields are enabled. Users can configure e-mail address of sender, so that the recipient can reply back to the correct person in charge. Also, users can configure the subject of email, so that it can be easily distinguishable from the other e-mails. At last, users can edit e-mail addresses of all four recipients in the order shown in the e-mail. After entering all the necessary fields, please click on the **Save** button to allow the setting to take effect. Note that users can test sending an e-mail by simply clicking on the **Send Test E-mail** button. The description of each SMTP Setting parameter is summarized in Table 2.11.

Configuration

System

Information

IP

NTP

Time

Log

DIP Switch

Alert

SMTP Setting

Ports

ERPS

DHCPv4

Security

Aggregation

Spanning Tree

IPMC

LLDP

SyncE

MAC Table

VLANs

VCL

QoS

Mirroring

PTP

GVRP

DDMI

UDLD

SD Backup

Modbus Setting

Monitor

Diagnostics

Maintenance

SMTP Setting

SMTP Server	smtp.servername.com
Authentication	<input checked="" type="checkbox"/>
TLS/SSL	<input checked="" type="checkbox"/>
User Name	user
Change Password	<input checked="" type="checkbox"/>
Password	*****
E-mail address of Sender	user@example.com
Subject of Mail	Switch #1 Alarm is occurred!
E-mail Address of 1st Recipient	user2@example.com
E-mail address of 2nd Recipient	user3@example.com
E-mail address of 3rd Recipient	user4@example.com
E-mail address of 4th Recipient	user5@example.com

Save

Send Test E-mail

Table 2.11 Descriptions of SMTP Setting:

Label	Description	Factory Default
SMTP Server	Configure the IP address of an out-going e-mail server	NULL
Authentication	By checking on the box, users Enable or disable an authentication login. If enabled, users need an authentication to access the SMTP server. Thus, the users will also need to setup User Name and Password to connect to the SMTP server	Disable (Unchecked)
TLS/SSL	Enable or disable Transport Layer Security (TLS)/ Secure SocketsLayer (SSL) which is an encryption mechanism for communication with the SMTP Server	Disable(Unchecked)
User Name	Set the user name (or account name) to login for authentication. Max. 31 characters.	NULL
Change Password	Enable the checkbox if user need to set or change account password. If the checkbox is disabled, the account password will remain the old one. (If the password has not be set before, it will be NULL)	Disable (Unchecked)
Password	Set the account password for login/authentication. Max. 31 characters.	NULL
E-mail Address of Sender	Configure the sender E-mail address	NULL
Subject of Mail	Type the subject of this warning message. Max. 63 characters.	NULL
E-mail Address of 1st Recipient	Set the first receiver's E-mail address.	NULL
E-mail Address of 2nd Recipient	Set the second receiver's E-mail address.	NULL
E-mail Address of 3rd Recipient	Set the third receiver's E-mail address.	NULL
E-mail Address of 4th Recipient	Set the fourth receiver's E-mail address.	NULL
Save	Save these modifications on the managed switch.	-
Send Test E-mail	Send a test email to recipient(s) above to check accuracy.	-

2.2 Ports

Port Setting webpage is shown in Figure 2.17. The users can check the state of each port through **Link** column. Red color means port is down while green color means port is up. Users can also check the **Warning** status of the port. In the speed column, users can check the **Current** speed and configure a new speed through **Configured** column. The possible physical layer connections of each port are listed on the **Adv Duplex** and **Adv speed** column. The port's duplexing (**Duplex**) can be either **Full duplex (Fdx)** or **Half duplex (Hdx)**. The **Half duplex** option allows one-way communication at a time, while the **Full duplex** option allows simultaneous two-way communication. The transmission **Speed** of each port can be chosen from the dropdown list which could be **10**, **100**, and **1000** Mbps.

On the next column, user can select to enable/disable **Flow Control** for each port. The Flow Control mechanism can be enabled to avoid packet loss when congestion occurs. Within this column, there are **Curr Rx** and **Curr Tx**

sub-columns, where users can check the status of flow control on the receiving and transmitting link, respectively.



Configuration

- System
- Information
- IP
- NTP
- Time
- Log
- DIP Switch
- Alert
- SMTP Setting
- Ports
- ERPS
- DHCPv4
- Security
- Aggregation
- Spanning Tree
- IPMC
- LLDP
- SyncE
- MAC Table
- VLANs
- VCL
- QoS
- Mirroring
- PTP

Port Configuration



Port	Link	Warning	Speed		Adv Duplex		Adv speed			Flow Control		
			Current	Configured	Fdx	Hdx	10M	100M	1G	Enable	Curr Rx	Curr Tx
*			Down	<>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>		
1			Down	Automatic	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>		
2			Down	Automatic	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>		
3			Down	Automatic	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>		
4			100fdx	Automatic	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>		
5			Down	Automatic	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>		
6			Down	Automatic	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>		
7			Down	Automatic	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>		
8			Down	Automatic	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>		
9			Down	Automatic	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>		
10			Down	Automatic	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>		
11			Down	Automatic	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>		

Save Reset

Table 2.12 Descriptions of Port Configuration:

Field Label	Sub-field Label	Description	Factory Default
Port		Indicate port number. e.g., ranging from 1 to 11. In the first row, port * will show all possible configurable options for the device.	-
Link		Show link status. Red colour for port down, and green colour for port up.	-
Warning		Indicate a warning when there is a problem with the port. Different colours are used to indicate the severity of port problem. grey colour: No warnings yellow colour: There are warnings, use tooltip to see.	Grey colour
SpeedCurrent		Show current speed of the port. e.g., 100 fdx for 100 Mbps full duplex. If port is currently down, this field will show "down".	-
SpeedConfigured		Select any available link speed for the given switch port. Only speeds supported by the specific port is shown. Possible speeds are: - Disabled - Disables the switch port operation. - Automatic - Port auto negotiating speed and duplex with the link partner and selects the highest speed that is compatible with the link partner. - 10Mbps HDX - Forces the port in 10Mbps half-duplex mode. - 10Mbps FDX - Forces the port in 10Mbps full-duplex mode. - 100Mbps HDX - Forces the port in 100Mbps half-duplex mode. - 100Mbps FDX - Forces the port in 100Mbps full-duplex mode. - 1Gbps FDX - Forces the port in 1Gbps full-duplex mode.	Automatic
Adv Duplex	Auto	When duplex is set as auto i.e. auto negotiation, the port will only advertise the specified duplex as either Fdx or Hdx to the link partner. By default, port will advertise all the supported duplexes if the Duplex is Auto.	
Adv Duplex	Fdx	Full-duplex mode of the link. Click a checkbox to enable the option.	-
Adv Duplex	Hdx	Half-duplex mode of the link. Click a checkbox to enable the option.	-
Adv Speed	Auto	When speed is set as auto i.e. auto negotiation, the port will only advertise the specified speeds (10M, 100M, 1G) to the link partner. By default, port will advertise all supported speeds if speed is set as Auto.	
Adv Speed	10M	Click to enable 10 Mbps link speed for this port.	-
Adv Speed	100M	Click to enable 100 Mbps link speed for this port.	-
Adv Speed	1G	Click to enable 1 Gbps link speed for this port.	-
Flow Control	Auto	When Auto speed is selected on a port, this section indicates the flow control capability that is advertised to the link partner. When a fixed-speed setting is selected, that is what is used. The Current Rx column indicates whether pause frames on the port are obeyed, and the Current Tx column indicates whether pause frames on the port are transmitted. The Rx and Tx settings are determined by the result of the last Auto Negotiation. Check the configured column to use flow control. This setting is related to the configured setting for Configured Link Speed. NOTICE: The 100FX standard does not support Auto Negotiation, so when in 100FX mode the flow control capabilities will always be shown as "disabled".	
Flow Control	Enable	The Flow Control mechanism can be enabled to avoid packet loss when congestion occurs.	
Flow Control	Curr Rx	Symbol ✓ for showing that flow control is active on the receiving traffic. Symbol ✗ for showing that flow control is not active on the receiving traffic.	✗
Flow Control	Curr Tx	Symbol ✓ for showing that flow control is active on the transmitting traffic. Symbol ✗ for showing that flow control is not active on the transmitting traffic.	✗

Label	Description
ERPS	The ID of ERPS. Valid range 1 - 64.
RPL Mode	Ring Protection Link mode. Possible values: None : This switch doesn't have the RPL port in the ring. Owner : This switch doesn't have the RPL port in the ring. Neighbor : This switch is RPL neighbor for the ring.
RPL Port	Indicates whether it is port0 or port1 that is the Ring Protection Link. Not used if RPL Mode is None .
Ver	ERPS protocol version. v1 and v2 are supported.
Type	Type of ring. Possible values: Major : ERPS major ring (G.8001-2016, clause 3.2.39) Sub : ERPS sub-ring (G.8001-2016, clause 3.2.66) InterSub : ERPS sub-ring on an interconnection node (G.8001-2016, clause 3.2.66)
VC	Controls whether to use a Virtual Channel with a sub-ring.
Inter-connect Instance	For a sub-ring on an interconnection node, this must reference the instance ID of the ring to which this sub-ring is connected.
Interconnect Prop	Controls whether the ring referenced by Interconnect Instance shall propagate R-APS flush PDUs whenever this sub-ring's topology changes.
Port0/Port1 Interface	Interface index of ring protection Port0/Port1.
Port0/Port1 SF	Selects whether Signal Fail (SF) comes from the link state of a given interface, or from a Down-MEP. Possible values: MEP : Down-MEP Link : Link
Ring Id	The Ring ID is used - along with the control VLAN - to identify R-APS PDUs as belonging to a particular ring.
Node Id	The Node ID is used inside the R-APS specific PDU to uniquely identify this node (switch) on the ring.
Level	MD/MEG Level of R-APS PDUs we transmit.
Control VLAN	The VLAN on which R-APS PDUs are transmitted and received on the ring ports.
Control PCP	The PCP value used in the VLAN tag of the R-APS PDUs.
Rev	Revertive (true) or Non-revertive (false) mode.
Guard	Guard time in ms. Valid range is 10 - 2000 ms.
WTR	Wait-to-Restore time (WTR) in seconds. Valid range 1 - 720 sec.
Hold Off	Hold off time in ms. Value is rounded down to 100ms precision. Valid range is 0 - 10000 ms.
Enable	The administrative state of this APS ERPS. Check to make it function normally and uncheck to make it cease functioning.
Oper	The operational state of ERPS instance. green colour: Active red colour: Disabled or Internal error.
Warning	Operational warnings of ERPS instance. grey colour: No warnings yellow colour: There are warnings, use tooltip to see.

Please click  to start configuring the ERPS. After clicking the , Figure 2.20 below will be appeared.

ERPS Configuration

Configuration

ERPS #	Version	Type	VC	Interconnect		Port If		RingId	NodeId	Level	Control		Rev	Guard	WTR	HoldOff	Enable
Instance	Prop	Port0	Port1									VLAN	PCP				
0	v2	Major	<input checked="" type="checkbox"/>	0	<input type="checkbox"/>	1	1	1	00 00 00 00 00 00	7	1	7	<input checked="" type="checkbox"/>	500	300	0	<input type="checkbox"/>

Signal Fail Trigger

Port0				Port1			
Type	Domain	Service	MEPiD	Type	Domain	Service	MEPiD
Link			0	Link			0

Protected VLANs

VLAN ID	
---------	--

Ring Protection Link

RPL Mode	RPL Port
None	RingPort0

Save	Reset	Cancel
------	-------	--------

Table 2.14 shows the descriptions of each field and subfields in the ERPs configuration webpage in details.

Table 2.14 Descriptions of ERPS Configuration Webpage:

Field Label	Sub-field Label	Description	Factory Default
ERPS		Configure ERPS number to indicate a ring. Ranging from 1 to 64.	0
Version		Indicate the version that ERPS protocol is using. Two options are available: v1 and v2.	V2
Type		Indicate type of ERPS ring. There are three options: Major, Sub, Intersub.	Major
VC		Controls whether to use a Virtual Channel with a sub-ring. The Virtual Channel that's used to pass through R-APS message packet of subring. User must add control VLAN of sub-ring to each ring ports of Major-ring. If selected, the virtual channel is enabled.	Clicked
Inter-connect	Instance	For a sub-ring on an interconnection node, this must reference the instance ID of the ring to which this sub-ring is connected. Ethernet Ring Protection (ERP) Instance to forwards or blocks the VLAN packets based on blocking rules.	0
Inter-connect	Prop	Controls whether the ring referenced by Interconnect Instance shall propagate R-APS flush PDUs whenever this sub-ring's topology changes.	Unclicked
Port If	Port0	Select which port on the managed switch will be on Ring Port0. Ranging from 1 to maximum number of ports.	1
Port If	Port1	Select which port on the managed switch will be on Ring Port1. Ranging from 1 to maximum number of ports.	1
RingID		Indicate ring identification number, ranging from 1 to 9999. The Ring ID is used - along with the control VLAN - to identify R-APS PDUs as belonging to a particular ring.	1
NodeID		The Node ID is used inside the R-APS specific PDU to uniquely identify this node (switch) on the ring. Enter a MAC address manually.	00:00:00:00:00:00
Level		MD/MEG Level of R-APS PDUs we transmit. Ranging from 0 to 7.	7
Control	VLAN	The VLAN on which R-APS PDUs are transmitted and received on the ring ports. Specify the virtual local area network that this static MAC belongs to, ranging from 1 to 4096.	1
Control	PCP	The PCP value used in the VLAN tag of the R-APS PDUs. Priority Code Point within the Ethernet frame header. PCP 0 is the lowest priority and 7 is the highest priority.	7
Rev		Revertive (true) or Non-revertive (false) mode. Click/Unclick to enable the revertive/non-revertive switching.	Clicked
Guard		Set the guard time of the ring. Range is from 10 to 2000 ms.	500
WTR		Set the wait-to-restore (WTR) time of the ring in seconds. Lower value has lower protection time. Range of the WTR Timer is from 1 to 720 seconds.	300
Hold-Off		Set the holdoff time of the ring. Range is from 0 to 10000 ms.	0
Enable		The administrative state of this ERPS. Check to make it function normally and uncheck to make it cease functioning.	Unclicked
VLAN ID		Indicate Identification number of VLAN (Virtual Local Area Network). VLANs which are protected by this ring instance. At least one VLAN must be protected. Specify as a comma separated list of vlan numbers or vlan ranges. Ex.: 1,4,7,30-70.	NULL
RPL Mode		There are three types of Ring Protection Link (RPL0 mode: None, Owner, Neighbour) where: - None is RPL common port. This switch doesn't have the RPL port in the ring. - Owner is RPL owner port. This switch is RPL owner for the ring. - Neighbour is RPL neighbour port (only in ERPSv2). This switch is RPL neighbour for the ring.	None
RPL Port		Indicates whether it is port0 or port1 that is the Ring Protection Link. Not used if RPL Mode is None.	Ring-Port0

Click **Save** button to save changes. Click **Reset** button to undo any changes made locally and revert to previously saved values. Click **Cancel** button to return to the previous page; any changes made locally will be undone.

2.4 DHCPv4

Welotec's RSAES managed switch can act as a DHCPv4 (Dynamic Host Configuration Protocol over IP version 4) server in the local network. By enabling this function in the managed switch, an IPv4 addresses and related fields will be automatically assigned and delivered by the DHCPv4 server running inside the managed switch to other network devices connected to the managed switch. Under this Configuration\DHCPv4 menu, there are two sub-menus, Snooping and Relay as shown in Figure 2.21. The following subsections will describe them in more details.



Configuration

- System
- Ports
- ERPS
- DHCPv4
 - Snooping
 - Relay
- Security

2.4.1 Snooping

A rogue DHCP (Dynamic Host Control Protocol) server may be set up by an attacker in the network to provide falsify network configuration to a DHCP client such as wrong IP address, in-correct subnet mask, malicious gateway, and malicious DNS server. The purpose of DHCP spoofing attack may be to redirect the traffic of the DHCP client to a malicious domain and try to eavesdrop the traffic or simply try to prevent a successful network connection establishment. To protect against a network security attack of rogue DHCP server or DHCP spoofing attack, Welotec's RSAES provide DHCP Snooping feature. When this feature is enabled on specific port(s) of RSAES managed switch, the RSAES will allow the DHCP messages from trusted ports to pass through while it will discard or filter the DHCP messages from untrusted ports. To enable the DHCP Snooping feature, select the **Enabled** option from the drop-down menu behind the **Snooping Mode** option under the **DHCP Snooping Configuration** webpage as shown in Figure 2.22. By default, all interfaces of RSAES are untrusted for DHCP Snooping. To configure specific port(s) as trusted port(s), simply select the **Trusted** option under the **Mode** column for that particular Port(s). Finally, click the **Save** button at the bottom of the webpage to activate the DHCP Snooping on the selected port(s). Click Reset button to undo any change made locally and revert to previously saved values. Table 2.15 describes the options of DHCP Snooping Configuration.

Configuration

- System
- Ports
- ERPS
- DHCPv4
 - Snooping
 - Relay
- Security
- Aggregation
- Spanning Tree
- IPMC
- LLDP
- SyncE
- MAC Table
- VLANs
- VCL
- QoS
- Mirroring
- PTP
- GVRP
- DDMI
- UDLD
- SD Backup
- Modbus Setting

Monitor

Diagnostics

Maintenance

DHCP Snooping Configuration

Snooping Mode	Disabled ▼
---------------	------------

Port Mode Configuration

Port	Mode
*	<> ▼
1	Trusted ▼
2	Trusted ▼
3	Trusted ▼
4	Trusted ▼
5	Trusted ▼
6	Trusted ▼
7	Trusted ▼
8	Trusted ▼
9	Trusted ▼
10	Trusted ▼
11	Trusted ▼

Save	Reset
------	-------

Table 2.15 Description of DHCP Snooping Configuration:

Field Label	Description	Factory Default
Snooping Mode	Indicates the DHCP snooping mode operation. Possible modes are: Enabled : Enable DHCP snooping mode operation. When DHCP snooping mode operation is enabled, the DHCP request messages will be forwarded to trusted ports and only allow reply packets from trusted ports. Disabled : Disable DHCP snooping mode operation.	Disabled
Port Mode Configuration	Indicates the DHCP snooping port mode. Possible port modes are: Trusted : Configures the port as trusted source of the DHCP messages. Untrusted : Configures the port as untrusted source of the DHCP messages.	Trusted

2.4.2 Relay

A DHCP relay agent is a small program that relays DHCP/BOOTP messages between clients and servers on different subnets. DHCP/BOOTP relay agents are parts of the DHCP and BOOTP standards and function according to the Request for Comments (RFCs). It stores the incoming interface IP address in the GIADDR field of the DHCP packet. The DHCP server can use the value of GIADDR field to determine the assigned subnet. For such condition, please make sure the switch configuration of VLAN interface IP address and PVID (Port VLAN ID) correctly.

A relay agent relays DHCP/BOOTP messages that are broadcast on one of its connected physical interfaces, such as a network adapter, to other remote subnets to which it is connected by other physical interfaces. Figure 2.23 shows the **DHCP Relay** configuration webpage. Users can enable the DHCP Relay by selecting the **Enabled** box behind the **Relay Mode** option. Then, users can enter a Relay server's IP address in the **Relay Server** field.

Users also have a choice to enable the DHCP Relay Information Mode. If it is enabled, the switch will insert information about the client's network location into the packet header of the DHCP request, which is coming from the client on an untrusted interface. Then, the switch will send the modified request to the DHCP server. The DHCP server will inspect the information in the packet header and use it to generate the IP address or other parameters for the client. When the DHCP server returns the response to the switch, the switch will have an option to Replace, Keep, and Drop the information from the response packet and forward it to the client. After finishing the DHCP Relay setup, please click on the **Save** button to allow the change to take effect.



Configuration

- System
- Ports
- ERPS
- DHCPv4
 - Snooping
 - Relay
- Security
- Aggregation
- Spanning Tree
- IPMC
- LLDP

DHCP Relay Configuration

Relay Mode	Disabled ▼
Relay Server	0.0.0.0
Relay Information Mode	Disabled ▼
Relay Information Policy	Keep ▼

Table 2.16 Description of DHCP Relay Configuration:

Field Label	Description	Factory Default
Relay Mode	There are two modes here: Disabled or Enabled. Click the dropdown box to deactivate or activate the relay mode. Enabled: Enable DHCP relay mode operation. When DHCP relay mode operation is enabled, the agent forwards and transfers DHCP messages between the clients and the server when they are not in the same subnet domain. And the DHCP broadcast message won't be flooded for security considerations. Disabled: Disable DHCP relay mode operation.	Disabled
Relay server	Enter an IPv4 address of the DHCP relay server.	0.0.0.0
Relay Information Mode	There are two modes here: Disabled and Enabled. Click the dropdown list to deactivate or activate the information mode of the DHCP relay server. Enabled: Enable DHCP relay information mode operation. When DHCP relay information mode operation is enabled, the agent inserts specific information (option 82) into a DHCP message when forwarding to DHCP server and removes it from a DHCP message when transferring to DHCP client. It only works when DHCP relay operation mode is enabled. Disabled: Disable DHCP relay information mode operation.	Disabled
Relay Information Policy	Set the information policy for the DHCP relay server. There are three modes here: Replace, Keep, and Drop. When DHCP relay information mode operation is enabled, if the agent receives a DHCP message that already contains relay agent information it will enforce the policy. The 'Replace' policy is invalid when relay information mode is disabled. Replace: Replace the original relay information when a DHCP message that already contains it is received. Keep: Keep the original relay information when a DHCP message that already contains it is received. Drop: Drop the package when a DHCP message that already contains relay information is received.	Keep

2.5 Security

Security Configuration of Welotec's RSAES managed switch consists of three main parts: **Switch**, **Network**, and **AAA**. There are a number of submenus for each of these main security configuration parts as shown in Figure 2.24.



```

Security
Switch
  Users
  Privilege Levels
  Auth Method
  SSH
  HTTPS
  SNMP
    System
    Trap
    Communities
    Users
    Groups
    Views
    Access
  RMON
    Statistics
    History
    Alarm
    Event
Network
  Port Security
    Configuration
    MAC Addresses
  NAS
  ACL
    Ports
    Rate Limiters
    Access Control List
  IP Source Guard
  ARP Inspection
AAA
  RADIUS
  TACACS+
  
```

2.5.1 Switch

The first submenu under Configuration → Security is the Switch menu as shown in Figure 2.25. There are other sub-menus under this Switch menu which are Users, Privilege Levels, Auth Method, SSH, HTTPS, SNMP, and RMON. The following subsections will explain each of these menus in more details.

Configuration

- System
- Ports
- ERPS
- DHCPv4
 - Snooping
 - Relay
- Security
 - Switch
 - Users
 - Privilege Levels
 - Auth Method
 - SSH
 - HTTPS
 - SNMP
 - System
 - Trap
 - Communities
 - Users
 - Groups
 - Views
 - Access
 - RMON
 - Statistics
 - History
 - Alarm
 - Event

Users Configuration

User Name	Privilege Level
admin	15

Add New User

Switch Users

A simple way of providing terminal access control in your network device (managed switch) is to use passwords and assign privilege levels. Password protection restricts access to a network or network device. Privilege levels define what commands users can enter after they have logged into a network device. RSAES managed switch uses privilege levels to provide password security for different levels of switch operation. The privilege level of the user is ranging from 0 to 15. If the user has the privilege level value of 15, it means that the user is granted the full control of the device, which is being an administrator. The system maintenance, such as software upload and factory defaults, need a user privilege level of 15. Guest account usually is assigned with the privilege level 5, and has the read-only access. Whereas, a standard user usually is assigned with the privilege level of 10 and has the read-write access.

When users first enter this **Users Configuration** webpage, users will see an overview of the current users. The user overview webpage consists of **User Name** and **Privilege Level** columns, as shown in Figure 2.26. Currently the only way to login as another user on the web server of the managed switch is to close and reopen the web browser. Table 2.17 provides explanation for the User Configuration webpage.



User Name	Privilege Level
admin	15


Add New User

Table 2.17 Description of Users Configuration:

Field Label	Description
User Name	The name identifying the user. This is also a link to Add/Edit User.
Privilege Level	The privilege level of the user. The allowed range is 0 to 15. If the privilege level value is 15, it can access all groups, i.e., that is granted the fully control of the device. But other values need to refer to each group privilege level. User's privilege should be same or greater than the group privilege level to have the access of that group. By default setting, most groups privilege level 5 has the read-only access and privilege level 10 has the read-write access. And the system maintenance (software upload, factory defaults and etc.) need user privilege level 15. Generally, the privilege level 15 can be used for an administrator account, privilege level 10 for a standard user account and privilege level 5 for a guest account.

There is also a hyperlink to Add/Edit User in each username. Users can also click **Add New User** button to add a new user. After clicked, the webpage in Figure 2.27 will be shown. Table 2.18 summarizes the descriptions of the Add User webpage. Figure 2.28 shows an example of Edit User webpage.

Managed Switch

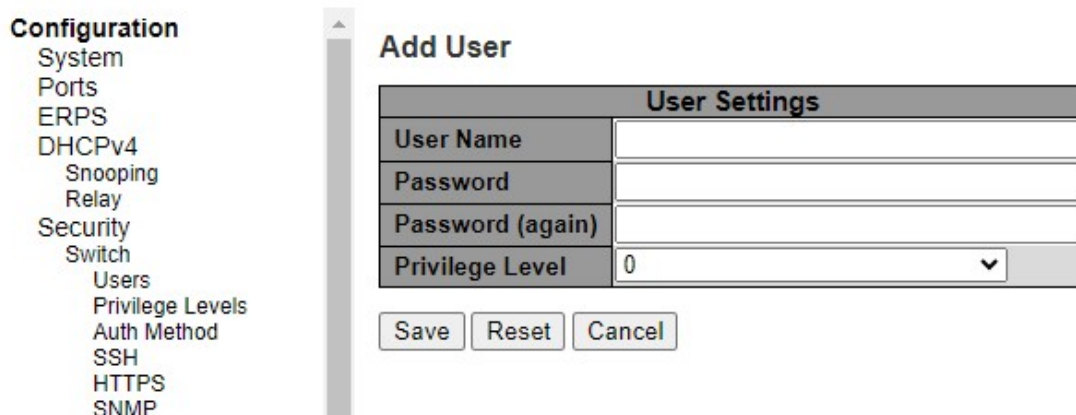

User Settings	
User Name	<input type="text"/>
Password	<input type="password"/>
Password (again)	<input type="password"/>
Privilege Level	0 <input type="button" value="v"/>

Save Reset Cancel

Table 2.18 Descriptions of Users Configuration – After Clicked **Add New User** Button:

La- bel	Description	Fac- tory De- fault
User- name	A string identifying the user name that this entry should belong to. The allowed string length is 1 to 31. The valid username allows letters, numbers and underscores.	NULL
Pass- word	The password of the user. The allowed string length is 0 to 31. Any printable characters including space is accepted.	NULL
Pass- word (again)	Re-enter the password for the user.	NULL
Priv- i- lege Level	The privilege level of the user. The allowed range is 0 to 15. If the privilege level value is 15, it can access all groups, i.e., that is granted the fully control of the device. But other values need to refer to each group privilege level. User`s privilege should be same or greater than the group privilege level to have the access of that group. By default setting, most groups privilege level 5 has the read-only access and privilege level 10 has the read-write access. And the system maintenance (software upload, factory defaults and etc.) need user privilege level 15. Generally, the privilege level 15 can be used for an administrator account, privilege level 10 for a standard user account and privilege level 5 for a guest account.	0

Managed Switch



Configuration

- System
- Ports
- ERPS
- DHCPv4
- Snooping
- Relay
- Security
- Switch
- Users
- Privilege Levels

Edit User

User Settings	
User Name	admin
Change Password	No
Privilege Level	15

Switch Privilege Levels

This subsection describes on the Privilege Level Configuration webpage as shown in Figure 2.29. The user can customize the privilege level in the table on this webpage.

Group Name is the name identifying the privilege group. In most cases, a privilege level group consists of a single module (e.g., LACP, RSTP or QoS), but a few of them contains more than one. Table 2.19 shows examples of some group name in details:

Table 2.19 Examples of Group Name:

Label	Description
Sys-tem	Contact, Name, Location, Time zone, Daylight Saving Time, Log.
Secu- rity	Authentication, System Access Management, Port (contains Dot1x port, MAC based and the MAC Address Limit), ACL, HTTPS, SSH, ARP Inspection, IP source guard.
IP	Everything except 'ping'.
Port	Everything except 'VeriPHY'.
Diag- nos- tics	'ping' and 'VeriPHY'.
Main- te- nance	CLI- System Reboot, System Restore Default, System Password, Configuration Save, Configuration Load and Firmware Load. Web- Users, Privilege Levels and everything in Maintenance.
Debug	Only present in CLI.

Privilege Levels in every group has an authorization Privilege level for the following sub groups: **Configuration Read only, Configuration/Execute Read-Write, Status/Statistics Read-only, Status/Statistics Read-Write** (e.g., for clearing of statistics). User Privilege should be the same or greater than the authorization Privilege level to have the access to that group.

Configuration

- System
- Ports
- ERPS
- DHCPv4
- Snooping
- Relay
- Security
- Switch
 - Users
 - Privilege Levels
 - Auth Method
 - SSH
 - HTTPS
 - SNMP
 - RMON
- Network
- AAA
- Aggregation
- Spanning Tree
- IPMC
- LLDP
- SyncE
- MAC Table
- VLANs
- VCL
- QoS
- Mirroring
- PTP
- GVRP
- DDMI
- UDLD
- SD Backup
- Modbus Setting

Monitor
Diagnostics
Maintenance
Privilege Level Configuration

Group Name	Privilege Levels			
	Configuration Read-only	Configuration/Execute Read/write	Status/Statistics Read-only	Status/Statistics Read/write
Aggregation	5 ▼	10 ▼	5 ▼	10 ▼
Alarm	5 ▼	10 ▼	5 ▼	10 ▼
DDMI	5 ▼	10 ▼	5 ▼	10 ▼
Debug	15 ▼	15 ▼	15 ▼	15 ▼
DHCP	5 ▼	10 ▼	5 ▼	10 ▼
Diagnostics	5 ▼	10 ▼	5 ▼	10 ▼
ERPS	5 ▼	10 ▼	5 ▼	10 ▼
Firmware	5 ▼	10 ▼	5 ▼	10 ▼
Green_Ethernet	5 ▼	10 ▼	5 ▼	10 ▼
IP	5 ▼	10 ▼	5 ▼	10 ▼
IPMC_Snooping	5 ▼	10 ▼	5 ▼	10 ▼
LACP	5 ▼	10 ▼	5 ▼	10 ▼
LLDP	5 ▼	10 ▼	5 ▼	10 ▼
MAC_Table	5 ▼	10 ▼	5 ▼	10 ▼
Mirror	5 ▼	10 ▼	5 ▼	10 ▼
Miscellaneous	15 ▼	15 ▼	15 ▼	15 ▼
NTP	5 ▼	10 ▼	5 ▼	10 ▼
POE	5 ▼	10 ▼	5 ▼	10 ▼
Ports	5 ▼	10 ▼	1 ▼	10 ▼
PTP	5 ▼	10 ▼	5 ▼	10 ▼
QoS	5 ▼	10 ▼	5 ▼	10 ▼
Security(access)	10 ▼	10 ▼	5 ▼	10 ▼
Security(network)	5 ▼	10 ▼	5 ▼	10 ▼
Spanning_Tree	5 ▼	10 ▼	5 ▼	10 ▼
System	5 ▼	10 ▼	1 ▼	10 ▼
UDLD	5 ▼	10 ▼	5 ▼	10 ▼
uFDMA_AIL	5 ▼	10 ▼	5 ▼	10 ▼
uFDMA_CIL	5 ▼	10 ▼	5 ▼	10 ▼
VCL	5 ▼	10 ▼	5 ▼	10 ▼
VLANs	5 ▼	10 ▼	5 ▼	10 ▼
XXRP	5 ▼	10 ▼	5 ▼	10 ▼

Switch Auth Method

The authentication section allows you to configure how a user is authenticated when he/she logs into the switch via one of the management client interfaces. Note that management client interfaces are console, telnet, ssh, and http. There are three separated tables in this webpage: **Authentication Method Configuration**, **Command Authorization Method configuration**, and **Accounting Method Configuration** webpage, as shown in Figure 2.30. In the **Authentication Method Configuration**, users can configure how a user is authenticated when he/she logs into the switch via one of the management client interfaces. In **Command Authorization Method configuration**, users can configure the limitation of the CLI commands available to a user. In the **Accounting Method Configuration** webpage, users can configure command and exec (login) accounting. Table 2.20 shows descriptions of these methods in details. Please click **Save** button for a change to take effect, or click **Reset** button to undo any changes made locally and revert to previously saved values.

Managed Switch



Configuration

- System
- Ports
- ERPS
- DHCPv4
 - Snooping
 - Relay
- Security
 - Switch
 - Users
 - Privilege Levels
 - Auth Method
 - SSH
 - HTTPS
 - SNMP
 - RMON
 - Network
 - AAA
- Aggregation
- Spanning Tree
- IPMC
- LLDP
- SyncE
- MAC Table
- VLANs
- VCL
- QoS
- Mirroring
- PTP
- GVRP

Authentication Method Configuration

Client	Methods		
console	local ▼	no ▼	no ▼
telnet	local ▼	no ▼	no ▼
ssh	local ▼	no ▼	no ▼
http	local ▼	no ▼	no ▼

Command Authorization Method Configuration

Client	Method	Cmd Lvl	Cfg Cmd
console	no ▼	0	<input type="checkbox"/>
telnet	no ▼	0	<input type="checkbox"/>
ssh	no ▼	0	<input type="checkbox"/>

Accounting Method Configuration


Client	Method	Cmd Lvl	Exec
console	no ▼		<input type="checkbox"/>
telnet	no ▼		<input type="checkbox"/>
ssh	no ▼		<input type="checkbox"/>

Table 2.20 Descriptions of Switch Authentication Method:

Label	Description	Factory Default
Authentication Method Configuration		
Client	The management client for which the configuration below applies, which consists of console, telnet, ssh.	-
Methods	Set to one of the following values:- No: Authentication is disabled and login is not possible.- Local: Use the local user database on the switch for authentication.Radius: Use remote RADIUS server(s) for authentication.- Tacacs: Use remote TACACS+ server(s) for authentication.Methods that involve remote servers are timed out if the remote servers are offline. In this case the next method is tried. Each method is tried from left to right and continues until a method either approves or rejects a user. If a remote server is used for primary authentication it is recommended to configure secondary authentication as 'local'. This will enable the management client to login via the local user database if none of the configured authentication servers are alive.	local, no, no
Command Authorization Method configuration		
Client	The management client for which the configuration below applies.	-
Method	Method can be set to one of the following values:- No: Command authorization is disabled. User is granted access to CLI commands according to his privilege level.- Tacacs: Use remote TACACS+ server(s) for command authorization. If all remote servers are offline, the user is granted access to CLI commands according to his privilege level.	no
Cmd Lvl	Authorize all commands with a privilege level higher than or equal to this level. Valid values are in the range 0 to 15.	0
Cfg Cmd	Also authorize configuration commands.	Unclicked
Accounting Method Configuration web-page		
Client	The management client for which the configuration below applies.	-
Method	Method can be set to one of the following values:- No: Accounting is disabled.- Tacacs: Use remote TACACS+ server(s) for accounting.	no
Cmd	Enable accounting of all commands with a privilege level higher than or equal to this level. Valid	NULL

Switch SSH

Users can enabled/disabled SSH (Secure Shell) mode through **SSH Configuration** webpage, as shown in Figure 2.31. Here, users can select **Enabled/Disabled** from the drop-down list of **Mode** field. Please click **Save** button for a change to take effect or **Reset** button to undo any changes made locally and revert to previously saved values.

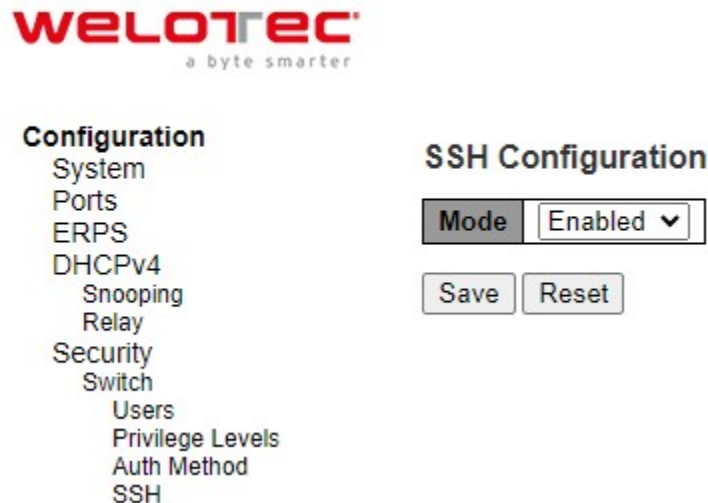

HTTPS

Users can enabled/disabled HTTPS (Hypertext Transfer Protocol over Secure Socket Layer) mode through **HTTPS Configuration** Webpage, as shown in Figure 2.32. HTTPS provide authentication and encrypted communication and is widely used on the World Wide Web for security-sensitive communication such as payment transactions and corporate logons. HTTPS is really just the use of Secure Socket Layer (SSL) as a sublayer under its regular HTTP application layering. (HTTPS uses port 443 instead of HTTP port 80 in its interactions with the lower layer, TCP/IP.) SSL uses a 40-bit key size for the RC4 stream encryption algorithm, which is considered an adequate degree of encryption for commercial exchange.

There are total of four fields: **Mode**, **Automatic Redirect**, **Certificate Maintain**, and **Certificate Status**. In the **Mode** field, users can select **Enabled/Disabled** the HTTPS mode. In the **Automatic Redirect** field, users can select to **Enabled/Disabled** this mode. When it is enabled, a HTTP connection will be automatically redirected to be a HTTPS connection. Note here that the browser may not allow to redirection if the browser does not trust the switch certificate. In such case, users need to initialize the HTTPS connection manually. For the **Certificate Maintain** field, users can choose type of operation whether to do nothing (**None**), delete the current certificate (**Delete**), upload a new certificate (**Upload**), and generate a new certificate (**Generate**). In the last field, **Certificate Status**, it displays the current status of certificate on the switch. Please click **Save** button for a change to take effect or **Reset** button to undo any changes made locally and revert to previously saved values.

If the user selects the **Upload** option for **Certificate Maintain** field, the webpage will be updated with additional fields which are **Certificate Pass Phrase**, **Certificate Upload**, and **File Upload** as shown in Figure 2.33. Table 2.21 summarizes the descriptions of fields in HTTPS Configuration webpage.

Note that to upload a certificate PEM file into the switch, the file should contain the certificate and private key together. If users have two separated files for saving certificate and private key, users can use the Linux cat command to combine them into a single PEM file. For example, cat my.cert my.key > my.pem. The RSAES certificate is recommended since most of the new version of browsers has removed support for DSA in certificate

Managed Switch



Configuration

- System
- Ports
- ERPS
- DHCPv4
 - Snooping
 - Relay
- Security
 - Switch
 - Users
 - Privilege Levels
 - Auth Method
 - SSH
 - HTTPS

HTTPS Configuration

Mode	Disabled
Automatic Redirect	Disabled
Certificate Maintain	None
Certificate Status	Switch secure HTTP certificate is presented

Save Reset

Managed Switch



Configuration

- System
- Ports
- ERPS
- DHCPv4
 - Snooping
 - Relay
- Security
 - Switch
 - Users
 - Privilege Levels
 - Auth Method
 - SSH
 - HTTPS
 - SNMP
 - RMON
 - Network

HTTPS Configuration

Refresh

Mode	Disabled
Automatic Redirect	Disabled
Certificate Maintain	Upload
Certificate Pass Phrase	
Certificate Upload	Web Browser
File Upload	Choose file No file chosen
Certificate Status	Switch secure HTTP certificate is presented

Save Reset

Table 2.21 Description of HTTPS Configuration Webpage:

La- bel	Description	Fac- tory De- fault
Mode	Indicate the HTTPS mode operation. Enabled: Enable HTTPS mode operation. Disabled: Disable HTTPS mode operation.	Dis- abled
Auto- matic Redirect	Indicate the HTTPS redirect mode operation. It is only significant when “HTTPS Mode Enabled” is selected. When the redirect mode is enabled, the HTTP connection will be redirected to HTTPS connection automatically. Note that the browser may not allow the redirect operation due to the security consideration unless the switch certificate is trusted to the browser. You need to initialize the HTTPS connection manually for this case. Possible Modes are: Enabled: Enable HTTPS redirect mode operation. Disabled: Disable HTTPS redirect mode operation.	Dis- abled
Cer- tifi- cate Main- tain	Indicate the operation of certificate maintenance. None: No operation. Delete: Delete the current certificate. Upload: Upload a certificate PEM file. Possible methods are: Web Browser or URL. Generate: Generate a new self-signed RSAES certificate.	None
Cer- tifi- cate Pass Phrase	Enter the pass phrase in this field if your uploading certificate is protected by a specific passphrase.	-
Cer- tifi- cate Up- load	Upload a certificate PEM file into the switch. The file should contain the certificate and private key together. If you have two separated files for saving certificate and private key. Use the Linux cat command to combine them into a single PEM file. For example, cat my.cert my.key > my.pem. Note that the RSAES certificate is recommended since most of the new version of browsers has removed support for DSA in certificate, e.g. Firefox v37 and Chrome v39. Possible modes are: Web Browser: Upload a certificate via Web browser. URL: Upload a certificate via URL, the supported protocols are HTTP, HTTPS, TFTP and FTP. The URL format is ://[[:@]][:[/]]/<file_name>. For example, tftp://10.10.10.10/new_image_path/new_image.dat. A valid file name is a text string drawn from alphabet (A-Za-z), digits (0-9), dot (.), hyphen (-), underscore (_). The maximum length is 63 and hyphen must not be first character. The file name content that only contains ‘ ’ is not allowed.	
Cer- tifi- cate Sta- tus	Display the current status of certificate on the switch. Possible statuses are: Switch secure HTTP certificate is presented. Switch secure HTTP certificate is not presented. Switch secure HTTP certificate is generating...	Switch se- cure HTTP cer- tifi- cate is pre- sented.

SNMP System

Simple Network Management Protocol (SNMP) is a protocol for managing devices on IP networks. It exposes management data in the form of variables on the managed systems which describe the system configuration. These variables can then be queried or defined by the users. The SNMP is used by network management system or third-party software to monitor devices such as managed switches in a network to retrieve network status information and to configure network parameters. The Welotec's managed switch support SNMP and can be configured in this section.

In this submenu, SNMP system can be configured as shown in Figure 2.34. There are two fields here: **Mode** and **Engine ID**. In **Mode**, users can select **Enabled/Disabled** from the dropdown list to enable SNMP mode operation. In **Engine ID**, it indicates the SNMPv3 engine ID. The string must contain an even number (in hexadecimal format) with number of digits between 10 and 64, but all-zeros and all-'F's are not allowed. Change of the Engine ID will clear all original local users. The default setting is 80000eab03787052000079.

Please click **Save** button for a change to take effect or **Reset** button to undo any changes made locally and revert to previously saved values.

Managed Switch



Configuration

- System
- Ports
- ERPS
- DHCPv4
- Snooping
- Relay
- Security
- Switch
- Users
- Privilege Levels
- Auth Method
- SSH
- HTTPS
- SNMP
- System

SNMP System Configuration

Mode	Enabled ▼
Engine ID	80000eab03787052000079

SNMP Trap Destinations

The managed switch provides a trap function that allows switch to send notification to agents with SNMP traps or inform. The notifications are based on the status changes of the switch such as link up, link down, warm start, and cold start. For inform mode, after sending SNMP inform requests, switch will resends inform request if it does not receive response within 10 seconds. The switch will try re-send three times. This option allows users to configure SNMP Trap Setting by setting the destination IP Address of the Trap server, Port Number of the Trap server, and SNMP version for authentication. Figure 2.35 shows these Trap Setting's options. Please click on the **Add New Entry** button to input new entry as shown in Figure 2.36. Table 2.22 summarizes the descriptions of trap destination settings. Please click on the **Save** button afterwards for a change to take effect, or **Reset** button to undo any changes made locally and revert to previously saved values.

Managed Switch



Configuration

- System
- Ports
- ERPS
- DHCPv4
- Snooping
- Relay
- Security
- Switch
- Users
- Privilege Levels
- Auth Method
- SSH
- HTTPS
- SNMP
- System
- Trap
- Destinations

Trap Configuration

Trap Destination Configurations

Delete	Name	Enable	Version	Destination Address	Destination Port
--------	------	--------	---------	---------------------	------------------

Add New Entry

Save

Reset

SNMP Trap Configuration

Trap Config Name	<input type="text"/>
Trap Mode	Disabled
Trap Version	SNMP v2c
Trap Community	public
Trap Destination Address	<input type="text"/>
Trap Destination Port	162
Trap Inform Mode	Disabled
Trap Inform Timeout (seconds)	3
Trap Inform Retry Times	5
Trap Security Engine ID	80000eab030200c14df2e0
Trap Security Name	None

Save

Reset

Table 2.22 Descriptions of SNMP Trap Destination Configurations

La- bel	Description
Mode	Users are allowed to delete each entry separately.
Name	Indicates the trap Configuration's name. Indicates the trap destination's name.
En- able	Indicates the trap destination mode operation. Possible modes are:Enabled: Enable SNMP trap mode operation.Disabled: Disable SNMP trap mode operation.
Ver- sion	Indicates the SNMP trap supported version. Possible versions are:SNMPv1: Set SNMP trap supported version 1. SNMPv2c: Set SNMP trap supported version 2c. SNMPv3: Set SNMP trap supported version 3.
Des- ti- na- tion Ad- dress	Indicates the SNMP trap destination address. It allows a valid IPv4 address in dotted decimal notation ('x.y.z.w'). It also allows a valid hostname. A valid hostname is a string drawn from the alphabet (AZa-z), digits (0-9), dot (.), dash (-). Spaces are not allowed, the first character must be an alpha character, and the first and last characters must not be a dot or a dash. Indicates the SNMP trap destination IPv6 address. IPv6 address is in 128-bit records represented as eight fields of up to four hexadecimal digits with a colon separating each field (:). For example, 'fe80::215:c5ff:fe03:4dc7'. The symbol '::' is a special syntax that can be used as a shorthand way of representing multiple 16-bit groups of contiguous zeros; but it can appear only once. It can also represent a legally valid IPv4 address. For example, '::192.1.2.34'.
Des- ti- na- tion Port	Indicates the SNMP trap destination port. SNMP Agent will send SNMP message via this port. The port range is 1~65535.

SNMP Trap Sources

This page provides **SNMP Trap Source configurations**. A trap is sent for the given trap source if at least one filter with filter type included matches the filter, and no filters with filter type excluded matches. Figure 2.37 shows the webpage when there is no entry in the trap source configurations. When users click on the Add New Entry button, the webpage will be updated to Figure 2.38. The users can select Name for trap source from the drop-down list and select the type from the second drop-down list. Then, enter the **Subset OID** in the text field. Click on the **Save** button to save the changes or click on the **Reset** button to undo any changes made locally and revert to previously saved values. Table 2.23 provides descriptions of the SNMP Trap Source Configurations.



Configuration

- System
- Ports
- ERPS
- DHCPv4
 - Snooping
 - Relay
- Security
 - Switch
 - Users
 - Privilege Levels
 - Auth Method
 - SSH
 - HTTPS
 - SNMP
 - System
 - Trap
 - Destinations
 - Sources

Trap Configuration

Trap Source Configurations

Delete	Name	Type	Subset OID
No entry exists			

Add New Entry

Save Reset

Trap Configuration

Trap Source Configurations

Delete	Name	Type	Subset OID
Delete	coldStart	included	

Add New Entry

Save Reset

Table 2.23 Description of SNMP Trap Source Configurations:

La- bel	Description
Delete	Check to delete the entry. It will be deleted during the next save. Users are allowed to delete each entry separately.
Name	Indicates the name for the entry. Selectable from the following list.- coldStart - warmStart - linkUp - linkDown - newRoot - topologyChange - psecTrapInterfaces
Type	The filter type for the entry. Possible types are:included: An optional flag to indicate a trap is sent for the given trap source is matched.excluded: An optional flag to indicate a trap is not sent for the given trap source is matched.
Sub- set OID	The subset OID for the entry. The value should depend on the want kind of trap name. For example, the ifldex is the subset OID of linkUp and linkDown. A valid subset OID is one or more digital number (0-4294967295) or asterisk (*) which are separated by dots (.). The first character must not begin with asterisk (*) and the maximum of OID count must not exceed 128.

SNMP Communities

This submenu allows users to configure SNMP community table as shown in Figure 2.39. The entry index key is **Community**. This community string option allows the users to set a community string (**Community name** and **Community secret**) for authentication by adding new entry to the table. The users can remove existing community string from the list by clicking on the checkbox of **Delete** column at the beginning of each community string item***. The users can specify the string names on the **Community Name** field by clicking **Add New Entry** button, as shown in Figure 2.40. Table 2.24 briefly provides descriptions of SNMP's community setting.

Please click on the **Save** button afterwards for a change to take effect, or click **Reset** button to undo any changes made locally and revert to previously saved values.

Typically, an SNMP agent, which is a network management software module residing on the managed switch, can access all objects with read-all-only permissions using the string *public*. Another setting example is that the string *private* has permission of read-write-all.

Managed Switch



Configuration

- System
- Ports
- ERPS
- DHCPv4
- Snooping
- Relay
- Security
- Switch
 - Users
 - Privilege Levels
 - Auth Method
 - SSH
 - HTTPS
 - SNMP
 - System
 - Trap
 - Destinations
 - Sources
 - Communities

SNMPv3 Community Configuration

Delete	Community name	Community secret	Source IP	Source Prefix
<input type="checkbox"/>	public	public	0.0.0.0	0
<input type="checkbox"/>	private	private	0.0.0.0	0

SNMPv3 Community Configuration

Delete	Community name	Community secret	Source IP	Source Prefix
<input type="checkbox"/>	public	public	0.0.0.0	0
<input type="checkbox"/>	private	private	0.0.0.0	0
<input type="button" value="Delete"/>				




Table 2.24 Descriptions of SNMP Community Configurations:


Label	Description
Delete	Check to delete the entry. It will be deleted during the next save.
Community Name	Indicates the community access string to permit access to SNMPv3 agent. The allowed string length is 1 to 32, and the allowed content is ASCII characters from 33 to 126. The community string will be treated as security name and map a SNMPv1 or SNMPv2c community string.
Community Secret	Indicates the community secret (access string) to permit access using SNMPv1 and SNMPv2c to the SNMP agent. The allowed string length is 1 to 32, and the allowed content is ASCII characters from 33 to 126.
Source IP	Indicates the SNMP access source address. A particular range of source addresses can be used to restrict source subnet when combined with source mask.
Source Prefix	Indicates the SNMP access source address mask.

SNMP Users

This submenu allows users to configure SNMPv3 user table on this page. The entry index keys are **Engine ID** and **User Name**. As mentioned earlier, SNMPv3 is a more secure SNMP protocol than earlier versions. In this part, the users will be able to set a password and an encryption key to enhance the data security. When choosing this option, the users can configure SNMPv3's authentication and encryption. MD5 (Message-Digest algorithm 5) is used for authentication password and DES (Data Encryption Standard) is used for data encryption algorithm. Figure 2.41 shows the SNMPv3 Authentication Setting's options. The users can view existing SNMPv3 users' setting on the upper table where it provides information about user name, authentication type, and data encryption (or privacy protocol). The users have an option to remove existing SNMPv3 user by clicking on the **Delete** button under the **Delete** column of each entry. To add a new SNMPv3 user, the users have to click **Add New Entry** button, and enter **Engine ID**, **User Name**, **Security Level**, **Authentication Protocol**, **Authentication Password**, **Privacy Protocol**, and **Privacy Password**. The authentication password has the maximum length of 31 characters. Note that if no password is provided, there will be no authentication for SNMPv3. Table 2.25 lists the descriptions of SNMPv3 User settings.

Managed Switch



Configuration

- System
- Ports
- ERPS
- DHCPv4
- Snooping
- Relay
- Security
- Switch
- Users
- Privilege Levels
- Auth Method
- SSH
- HTTPS
- SNMP
- System
- Trap
- Destinations
- Sources
- Communities
- Users

SNMPv3 User Configuration

Delete	Engine ID	User Name	Security Level	Authentication Protocol	Authentication Password	Privacy Protocol	Privacy Password
<div style="display: flex; justify-content: space-around; margin-top: 10px;"> Add New Entry Save Reset </div>							

Table 2.25 Descriptions of SNMP Users:

La- bel	Description	Fac- tory De- fault
Delete	Check to delete the entry. It will be deleted during the next save.	
En- gine ID	An octet string identifying the engine ID that this entry should belong to. The string must contain an even number (in hexadecimal format) with number of digits between 10 and 64, but all-zeros and all-'F's are not allowed. The SNMPv3 architecture uses the User-based Security Model (USM) for message security and the View-based Access Control Model (VACM) for access control. For the USM entry, the usmUserEngineID and usmUserName are the entry's keys. In a simple agent, usmUserEngineID is always that agent's own snmpEngineID value. The value can also take the value of the snmpEngineID of a remote SNMP engine with which this user can communicate. In other words, if user engine ID equal system engine ID then it is a local user; otherwise it is a remote user.	Fol- low DUT's MAC ad- dress to cre- ate En- gine ID
User Name	A string identifying the user name that this entry should belong to. The allowed string length is 1 to 32, and the allowed content is ASCII characters from 33 to 126.	
Se- cu- rity Level	Indicates the security model that this entry should belong to. Possible security models are: NoAuth, NoPriv: No authentication and no privacy. Auth, NoPriv: Authentication and no privacy. Auth, Priv: Authentication and privacy. The value of security level cannot be modified if entry already exists. That means it must first be ensured that the value is set correctly.	Auth, Priv
Au- then- ti- ca- tion Pro- to- col	Indicates the authentication protocol that this entry should belong to. Possible authentication protocols are: None: No authentication protocol. MD5: An optional flag to indicate that this user uses MD5 authentication protocol. SHA: An optional flag to indicate that this user uses SHA authentication protocol. The value of security level cannot be modified if entry already exists. That means must first ensure that the value is set correctly.	
Au- then- ti- ca- tion Pass- word	A string identifying the authentication password phrase. For MD5 authentication protocol, the allowed string length is 8 to 32. For SHA authentication protocol, the allowed string length is 8 to 40. The allowed content is ASCII characters from 33 to 126.	Null
Pri- vacy Pro- to- col	Indicates the privacy protocol that this entry should belong to. Possible privacy protocols are: None: No privacy protocol. DES: An optional flag to indicate that this user uses DES authentication protocol AES: An optional flag to indicate that this user uses AES authentication protocol	DES
Pri- vacy Pass- word	A string identifying the privacy password phrase. The allowed string length is 8 to 32, and the allowed content is ASCII characters from 33 to 126.	Null

SNMP Groups

Figure 2.42 shows SNMPv3 Group Configuration webpage. It contains SNMPv3 group table. The entry index keys are **Security Model** and **Security Name**. Click **Add New Entry** button to add a new group entry to the table. Table 2.26 describes the column labels of the SNMPv3 group table.

Managed Switch



Configuration

- System
- Ports
- ERPS
- DHCPv4
- Snooping
- Relay
- Security
- Switch
- Users
- Privilege Levels
- Auth Method
- SSH
- HTTPS
- SNMP
 - System
 - Trap
 - Destinations
 - Sources
 - Communities
 - Users
 - Groups

SNMPv3 Group Configuration

Delete	Security Model	Security Name	Group Name
<input type="checkbox"/>	v1	public	default_ro_group
<input type="checkbox"/>	v1	private	default_rw_group
<input type="checkbox"/>	v2c	public	default_ro_group
<input type="checkbox"/>	v2c	private	default_rw_group

Table 2.26 Descriptions of SNMP Groups:

Label	Description	Factory Default
Delete	Check to delete the entry. It will be deleted during the next save.	
Security Model	Indicates the security model that this entry should belong to. Possible security models are: v1: Reserved for SNMPv1. v2c: Reserved for SNMPv2c. usm: SNMPv3, User-based Security Model (USM).	v1
Security Name	A string identifying the security name that this entry should belong to. The allowed string length is 1 to 32, and the allowed content is ASCII characters from 33 to 126.	public
Group Name	A string identifying the security name that this entry should belong to. The allowed string length is 1 to 32, and the allowed content is ASCII characters from 33 to 126.	Null

SNMP Views

Figure 2.43 shows SNMPv3 View Configuration webpage. It contains SNMPv3 view table. The entry index keys are **View Name** and **OID Subtree**. Click **Add New Entry** button to add a new view entry to the table. Table 2.27 describes the column labels of the SNMPv3 view table. Please click on the **Save** button afterwards for a change to take effect, or click **Reset** button to undo any changes made locally and revert to previously saved values.



Configuration

- System
- Ports
- ERPS
- DHCPv4
- Snooping
- Relay
- Security
 - Switch
 - Users
 - Privilege Levels
 - Auth Method
 - SSH
 - HTTPS
 - SNMP
 - System
 - Trap
 - Destinations
 - Sources
 - Communities
 - Users
 - Groups
 - Views

SNMPv3 View Configuration

Delete	View Name	View Type	OID Subtree
<input type="checkbox"/>	default_view	included ▼	.1




Table 2.27 Descriptions of SNMP Views:


La- bel	Description	Fac- tory De- fault
Delete	Check to delete the entry. It will be deleted during the next save.	
View Name	A string identifying the view name that this entry should belong to. The allowed string length is 1 to 32, and the allowed content is ASCII characters from 33 to 126.	Null
View Type	Indicates the view type that this entry should belong to. Possible view types are: included: An optional flag to indicate that this view subtree should be included. excluded: An optional flag to indicate that this view subtree should be excluded.	in- cluded
OID Sub- tree	The OID defining the root of the subtree to add to the named view. The allowed OID length is 1 to 128. The allowed string content is digital number or asterisk (*).	Null

SNMP Access

Figure 2.44 shows SNMPv3 Access Configuration webpage. It contains SNMPv3 access table. The entry index keys are **Group Name**, **Security Model** and **Security Level**. Click **Add New Entry** button to add a new access entry to the table. Table 2.28 describes the column labels of the SNMPv3 access table. Please click on the **Save** button afterwards for a change to take effect, or click **Reset** button to undo any changes made locally and revert to previously saved values.

Managed Switch



Configuration

- System
- Ports
- ERPS
- DHCPv4
- Snooping
- Relay
- Security
 - Switch
 - Users
 - Privilege Levels
 - Auth Method
 - SSH
 - HTTPS
 - SNMP
 - System
 - Trap
 - Destinations
 - Sources
 - Communities
 - Users
 - Groups
 - Views
 - Access

SNMPv3 Access Configuration

Delete	Group Name	Security Model	Security Level	Read View Name	Write View Name
<input type="checkbox"/>	default_ro_group	any	NoAuth, NoPriv	default_view ▼	None ▼
<input type="checkbox"/>	default_rw_group	any	NoAuth, NoPriv	default_view ▼	default_view ▼

Add New Entry
Save
Reset

Table 2.28 Descriptions of SNMP Access Configuration:

Label	Description	Factory Default
Delete	Check to delete the entry. It will be deleted during the next save.	
Group Name	A string identifying the group name that this entry should belong to.	De-fault_ro_group
Security Model	Indicates the security model that this entry should belong to. Possible security models are: v1: Reserved for SNMPv1. v2c: Reserved for SNMPv2c. usm: SNMPv3, User-based Security Model (USM).	any
Security Level	Indicates the security model that this entry should belong to. Possible security models are: NoAuth, NoPriv: No authentication and no privacy. Auth, NoPriv: Authentication and no privacy. Auth, Priv: Authentication and privacy.	NoAuth, NoPriv
Read View Name	The name of the MIB view defining the MIB objects for which this request may request the current values.	None
Group Name	The name of the MIB view defining the MIB objects for which this request may potentially set the new values.	None

RMON Statistics

Figure 2.45 shows **RMON** (Remote Network Monitoring) **Statistics** Configuration. Welotec's managed switch can monitoring network traffic on remote Ethernet segment to detect problem inside the network. The entry index key is **ID** for RMON Statistics table. Click **Add New Entry** button to add a new RMON Statistics entry to the table as shown in Figure 2.46. Table 2.29 describes the column labels of the RMON Statistics table. Please click on the **Save** button afterwards for a change to take effect, or click **Reset** button to undo any changes made locally and revert to previously saved values.

Managed Switch



Configuration

- System
- Ports
- ERPS
- DHCPv4
- Snooping
- Relay
- Security
- Switch
- Users
- Privilege Levels
- Auth Method
- SSH
- HTTPS
- SNMP
- System
- Trap
- Destinations
- Sources
- Communities
- Users
- Groups
- Views
- Access
- RMON
- Statistics
- History
- Alarm
- Event

RMON Statistics Configuration

Delete	ID	Data Source
--------	----	-------------



Configuration

- System
- Ports
- ERPS
- DHCPv4
- Security
- Switch
- Users
- Privilege Levels
- Auth Method
- SSH
- HTTPS
- SNMP
- RMON

RMON Statistics Configuration

Delete	ID	Data Source
Delete		.1.3.6.1.2.1.2.2.1.1. 0
Delete		.1.3.6.1.2.1.2.2.1.1. 0

Table 2.29 Descriptions of RMON Statistics:

Label	Description	Factory Default
Delete	Check to delete the entry. It will be deleted during the next save.	
ID	Indicates the index of the entry. The range is from 1 to 65535.	Null
Data Source	Indicates the port ID which wants to be monitored. If in stacking switch, the value must add 1000000*(switch ID-1), for example, if the port is switch 3 port 5, the value is 2000005.	.1.3.6.1.2.1.2.2.1.1.0

RMON History

Figure 2.47 shows **RMON (Remote Network Monitoring) History** Configuration. It displays RMON history table. The entry index key is **ID** for RMON history table. Click **Add New Entry** button to add a new RMON history entry to the table as shown in Figure 2.48. Table 2.30 describes the column labels of the RMON Statistics table. Please click on the **Save** button afterwards for a change to take effect, or click **Reset** button to undo any changes made locally and revert to previously saved values.

Managed Switch



Configuration

- System
- Ports
- ERPS
- DHCPv4
- Snooping
- Relay
- Security
- Switch
- Users
- Privilege Levels
- Auth Method
- SSH
- HTTPS
- SNMP
 - System
 - Trap
 - Destinations
 - Sources
 - Communities
 - Users
 - Groups
 - Views
 - Access
- RMON
 - Statistics
 - History

RMON History Configuration

Delete	ID	Data Source	Interval	Buckets	Buckets Granted
<div> <input type="button" value="Add New Entry"/> <input type="button" value="Save"/> <input type="button" value="Reset"/> </div>					

RMON History Configuration

Delete	ID	Data Source	Interval	Buckets	Buckets Granted
<input type="checkbox"/>		.1.3.6.1.2.1.2.2.1.1.	0	1800	50
<div> <input type="button" value="Add New Entry"/> <input type="button" value="Save"/> <input type="button" value="Reset"/> </div>					




Table 2.30 Descriptions of RMON History:


Label	Description	Factory Default
Delete	Check to delete the entry. It will be deleted during the next save.	
ID	Indicates the index of the entry. The range is from 1 to 65535.	Null
Data Source	Indicates the port ID which wants to be monitored. If in stacking switch, the value must add 1000000*(switch ID-1), for example, if the port is switch 3 port 5, the value is 2000005.	.1.3.6.1.2.1.2.2.1.1.0
Interval	Indicates the interval in seconds for sampling the history statistics data. The range is from 1 to 3600, default value is 1800 seconds.	1800
Buckets	Indicates the maximum data entries associated this History control entry stored in RMON. The range is from 1 to 3600, default value is 50.	50
Buckets Granted	The number of data shall be saved in the RMON.	

RMON Alarm

Figure 2.49 shows **RMON Alarm** Configuration. It displays RMON alarm table. The entry index key is ID for RMON alarm table. Click **Add New Entry** button to add a new RMON alarm entry to the table as shown in Figure 2.49. Table 2.31 describes the column labels of the RMON alarm table. Please click on the **Save** button afterwards for a change to take effect, or click **Reset** button to undo any changes made locally and revert to previously saved values.

Managed Switch



Configuration

- System
- Ports
- ERPS
- DHCPv4
- Snooping
- Relay
- Security
- Switch
 - Users
 - Privilege Levels
 - Auth Method
 - SSH
 - HTTPS
 - SNMP
 - System
 - Trap
 - Destinations
 - Sources
 - Communities
 - Users
 - Groups
 - Views
 - Access
- RMON
 - Statistics
 - History
 - Alarm

RMON Alarm Configuration

Delete	ID	Interval	Variable	Sample Type	Value	Startup Alarm	Rising Threshold	Rising Index	Falling Threshold	Falling Index
<div style="display: flex; justify-content: space-around; margin-top: 10px;"> Add New Entry Save Reset </div>										

Table 2.31 Descriptions of RMON Alarm:

La- bel	Description	Fac- tory De- fault
Delete	Check to delete the entry. It will be deleted during the next save.	
ID	Indicates the index of the entry. The range is from 1 to 65535.	Null
In- ter- val	Indicates the interval in seconds for sampling the history statistics data. The range is from 1 to 3600, default value is 1800 seconds.	30
Variable	Indicates the port ID which wants to be monitored. If in stacking switch, the value must add 1000000*(switch ID-1), for example, if the port is switch 3 port 5, the value is 2000005.	.1.3.6.1.2.1.2.2.1.0.0
Buck- ets	Indicates the particular variable to be sampled, the possible variables are: InOctets: The total number of octets received on the interface, including framing characters. InUcastPkts: The number of uni-cast packets delivered to a higher-layer protocol. InNUcastPkts: The number of broadcast and multi-cast packets delivered to a higher layer protocol. InDiscards: The number of inbound packets that are discarded even the packets are normal. InErrors: The number of inbound packets that contained errors preventing them from being deliverable to a higher-layer protocol. InUnknownProtos: The number of the inbound packets that were discarded because of the unknown or un-supported protocol. OutOctets: The number of octets transmitted out of the interface, including framing characters. OutUcastPkts: The number of uni-cast packets that request to transmit. OutNUcastPkts: The number of broad-cast and multi-cast packets that request to transmit. OutDiscards: The number of outbound packets that are discarded even the packets are normal. OutErrors: The number of outound packets that could not be transmitted because of errors. OutQLen: The length of the output packet queue (in packets).	
Sam- ple Type	The method of sampling the selected variable and calculating the value to be compared against the thresholds, possible sample types are: Absolute: Get the sample directly. Delta: Calculate the difference between samples (default).	Delta
Value	The value of the statistic during the last sampling period.	0
Start- up Alarm	The method of sampling the selected variable and calculating the value to be compared against the thresholds, possible sample types are: Rising: Trigger alarm when the first value is larger than the rising threshold. Falling: Trigger alarm when the first value is less than the falling threshold. RisingOrFalling: Trigger alarm when the first value is larger than the rising threshold or less than the falling threshold (default).	Ris- ing- Or- Falling
Ris- ing Thresh- old	Rising threshold value (-2147483648-2147483647).	0
Ris- ing In- dex	Rising event index (0-65535). If this value is zero, no associated event will be generated, as zero is not a valid event index.	0
Falling Thresh- old	Falling threshold value (-2147483648-2147483647).	0
Falling In- dex	Falling event index (0-65535). If this value is zero, no associated event will be generated, as zero is not a valid event index.	0

RMON Event

Figure 2.50 shows **RMON Event Configuration**. It displays RMON event table. The entry index key is ID for RMON event table. Click **Add New Entry** button to add a new RMON event entry to the table as shown in Figure 2.50. Table 2.32 describes the column labels of the RMON alarm table. Please click on the **Save** button afterwards for a change to take effect, or click **Reset** button to undo any changes made locally and revert to previously saved values.

Managed Switch



Configuration

- System
- Ports
- ERPS
- DHCPv4
- Snooping
- Relay
- Security
- Switch
- Users
- Privilege Levels
- Auth Method
- SSH
- HTTPS
- SNMP
- System
- Trap
- Destinations
- Sources
- Communities
- Users
- Groups
- Views
- Access
- RMON
- Statistics
- History
- Alarm
- Event

RMON Event Configuration


Delete	ID	Desc	Type	Event Last Time
<div> <input type="button" value="Add New Entry"/> <input type="button" value="Save"/> <input type="button" value="Reset"/> </div>				

Table 2.32 Descriptions of RMON Event:

La- bel	Description	Fac- tory De- fault
Delete	Check to delete the entry. It will be deleted during the next save.	
ID	Indicates the index of the entry. The range is from 1 to 65535.	Null
Desc	Indicates this event, the string length is from 0 to 127, default is a null string.	Null
Type	Indicates the notification of the event, the possible types are: none: No SNMP log is created, no SNMP trap is sent. log: Create SNMP log entry when event is triggered. snmptrap: Send SNMP trap when the event is triggered. logandtrap: Create SNMP log entry and sent SNMP trap when the event is triggered.	None
Event Last Time	Indicates the value of sysUpTime at the time this event entry last generated an event.	0

2.5.2 Network

Under this **Security**▢**Network** submenus, the users can configure network security for the RSAES managed switch. Figure 2.51 shows list of menus under the **Security**▢**Network**. Under this section, the users can setup security for port, network access server (NAS), access control list (ACL), IP source guard, and ARP (Address Resolution Protocol) inspection.

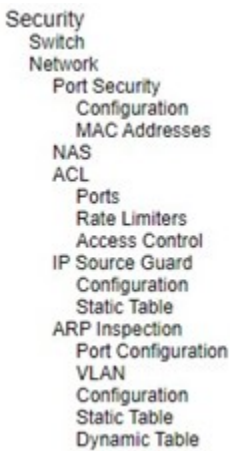

Port Security Configuration

Global and per-port security of the managed switch can be configured in this webpage as shown in Figure 2.52. **Port Security** allows for limiting the number of users on a given port. A user is identified by a MAC address and VLAN ID. If **Port Security** is enabled on a port, the limit specifies the maximum number of users on the port. If this number is exceeded, an action is taken depending on violation mode. The violation mode can be one of the four different described below. The **Port Security Configuration** on this page consists of two sections: **Global Configuration** and **Port Configuration**. Table 2.33 summarizes the description of options for global and per-port configuration settings.

Please click on the **Save** button afterwards for a change to take effect, or click **Reset** button to undo any changes made locally and revert to previously saved values.

Managed Switch



Configuration

- System
- Ports
- ERPS
- DHCPv4
- Snooping
- Relay
- Security
- Switch
 - Users
 - Privilege Levels
 - Auth Method
 - SSH
 - HTTPS
 - SNMP
 - System
 - Trap
 - Destinations
 - Sources
 - Communities
 - Users
 - Groups
 - Views
 - Access
- RMON
 - Statistics
 - History
 - Alarm
 - Event
- Network
 - Port Security
 - Configuration
 - MAC Addresses
 - NAS
 - ACL
 - IP Source Guard
 - ARP Inspection

Port Security Configuration

Global Configuration

Aging Enabled	<input type="checkbox"/>
Aging Period	3600 seconds
Hold Time	300 seconds

Port Configuration

Port	Mode	Limit	Violation Mode	Violation Limit	Sticky	State
*	<>	4	<>	4	<input type="checkbox"/>	
1	Disabled	4	Protect	4	<input type="checkbox"/>	Disabled
2	Disabled	4	Protect	4	<input type="checkbox"/>	Disabled
3	Disabled	4	Protect	4	<input type="checkbox"/>	Disabled
4	Disabled	4	Protect	4	<input type="checkbox"/>	Disabled
5	Disabled	4	Protect	4	<input type="checkbox"/>	Disabled
6	Disabled	4	Protect	4	<input type="checkbox"/>	Disabled
7	Disabled	4	Protect	4	<input type="checkbox"/>	Disabled
8	Disabled	4	Protect	4	<input type="checkbox"/>	Disabled
9	Disabled	4	Protect	4	<input type="checkbox"/>	Disabled
10	Disabled	4	Protect	4	<input type="checkbox"/>	Disabled
11	Disabled	4	Protect	4	<input type="checkbox"/>	Disabled

Table 2.33 Descriptions of Port Security Configuration:

La- bel	Description	Fac- tory De- fault
Port	The port number to which the configuration below applies.	Port no. 1 ~ 11
Mode	Controls whether Port Security is enabled on this port. Notice that other modules may still use the underlying port security features without enabling Port Security on a given port.	Dis- abled
Limit	The maximum number of MAC addresses that can be secured on this port. This number cannot exceed 1023. Default is 4. If the limit is exceeded, an action is taken corresponding to the violation mode. The switch is “born” with a total number of MAC addresses from which all ports draw whenever a new MAC address is seen on a Port Security-enabled port. Since all ports draw from the same pool, it may happen that a configured maximum cannot be granted, if the remaining ports have already used all available MAC addresses.	4
Vi- o- la- tion Mode	If Limit is reached, the switch can take one of the following actions: Protect: Do not allow more than Limit MAC addresses on the port, but take no further action. Restrict: If Limit is reached, subsequent MAC addresses on the port will be counted and marked as violating. Such MAC addresses are removed from the MAC table when the hold time expires. At most Violation Limit MAC addresses can be marked as violating at any given time. Shutdown: If Limit is reached, one additional MAC address will cause the port to be shut down. This implies that all secured MAC addresses be removed from the port, and no new addresses be learned. There are three ways to re-open the port: 1) In the “Configuration>Ports” page’s “Configured” column, first disable the port, then restore the original mode. 2) Make a Port Security configuration change on the port. 3) Boot the switch.	Pro- tect
Vi- o- la- tion Limit	The maximum number of MAC addresses that can be marked as violating on this port. This number cannot exceed 1023. Default is 4. It is only used when Violation Mode is Restrict.	4
Sticky	Enables sticky learning of MAC addresses on this port. When the port is in sticky mode, all MAC addresses that would otherwise have been learned as dynamic are learned as sticky. Sticky MAC addresses are part of the running-config and can therefore be saved to start-up-config. Sticky MAC addresses survive link changes (in contrast to Dynamic, which will have to be learned again). They also survive reboots if running-config is saved to startup-config. A port can be Sticky-enabled whether or not Port Security is enabled on that interface. In that way, it is possible to add sticky MAC addresses managementwise before enabling Port Security. To do that, use the “Configuration>Security>Port Security>MAC Addresses” page	Un- clicked
State	This column shows the current Port Security state of the port. The state takes one of four values: Disabled: Port Security is disabled at the port. Ready: The limit is not reached. This can be shown for all violation modes. Disabled: Indicates that the limit is reached on this port. This can be shown for all violation modes. Shutdown: Indicates that the port is shut down by Port Security. This state can only be shown if violation mode is set to Shutdown.	Dis- abled

Port Security MAC Addresses

In this webpage as shown in Figure 2.53, the users may add and delete static and sticky MAC addresses managed by Port Security. The port security defines three types of MAC addresses, of which static and sticky can be added and removed on this page:

- **Static:** A MAC address added by end-user through management. Static MAC addresses are not subject to aging and will be added to the MAC address table once Port Security gets enabled on the interface. Static entries are part of the running-config and will survive interface link state changes and reboots if saved to startupconfig. Static entries can be added to the running-config at any time whether or not Port Security is enabled.
- **Sticky:** When the interface is in sticky mode, all entries that would otherwise have been learned as dynamic are learned as sticky. Like static entries, sticky entries are part of the running-config and will survive interface link state changes and reboots if saved to the startup-config. Though not the intention with Sticky entries, they can be added by management to the running-config at any time whether or not Port Security is enabled on the interface, as long as the interface is in Sticky mode. Sticky entries will disappear if the interface is taken out of Sticky mode.

To add a new entry to the table of **Port Security Static and Sticky MAC Addresses**, click on **Add New MAC Entry** button. The new entry as shown in Figure 2.53 allows for adding static or sticky MAC address to a particular interface. When adding is finished, click the **Save** button to save the changes to running-config. Notice that sticky entries are normally added automatically through learning on the interface. Table 2.34 provides descriptions of the fields for Port Security Static and Sticky MAC Addresses.

Managed Switch



Configuration

- System
- Ports
- ERPS
- DHCPv4
- Security
 - Switch
 - Network
 - Port Security
 - Configuration
 - MAC Addresses

Port Security Static and Sticky MAC Addresses

Delete	Port	VLAN ID	MAC Address	Type
Delete	Select ... ▼	1	00:00:00:00:00:00	Static ▼

Table 2.34 Descriptions of RMON Event:

La- bel	Description	Fac- tory De- fault	
Delete	Press this button to remove the entry from the MAC address table (if present) and the running-config. Notice that dynamic entries may be removed all-together on an interface through “Monitor->Security->Port Security->Switch” and one-by-one through “Monitor->Security->Port Security->Port”		
Port	The port number to which this MAC address is bound.	Se- lect...	
VLAN ID	The VLAN ID in question.	1	
MAC Ad- dress	The MAC address in question.	00:00:00:00:00:00	
Type	Indicates the type of entry and may be either Static or Sticky (see description above).	Static	

NAS

NAS is an acronym for Network Access Server. The NAS is meant to act as a gateway to guard access to a protected source. A client connects to the NAS, and the NAS connects to another resource asking whether the client’s supplied credentials are valid. Based on the answer, the NAS then allows or disallows access to the protected resource. An example of a NAS implementation is IEEE 802.1X.

The IEEE 802.1X standard defines a port-based access control procedure that prevents unauthorized access to a network by requiring users to first submit credentials for authentication. One or more central servers, the backend servers, determine whether the user is allowed access to the network. These backend (RADIUS) servers are configured on the “**Configuration** → **Security** → **AAA**” webpage. The IEEE802.1X standard defines port-based operation, but non-standard variants overcome security limitations.

MAC-based authentication allows for authentication of more than one user on the same port, and doesn’t require the user to have special 802.1X supplicant software installed on his/her system. The switch uses the user’s MAC address to authenticate against the backend server. Intruders can create counterfeit MAC addresses, which makes MAC-based authentication less secure than 802.1X authentication.

This feature provides access control on a port basis. There are two types of authentications: **IEEE 802.1X** and **MAC-based**. The 802.1X supports **Port-based 802.1X** authentication type. The following three terms are used in the 802.1X context: *Supplicant*, *Authenticator*, and the *Authentication server*. The Supplicant is the client (PC) with some 801.1X software, where the Authenticator is the switch, and the Authentication server is such as a RADIUS server. The supplicant/client is connected to the authenticator/switch on some port, and the authenticator can reach an authentication server. The idea is that the supplicant wants access to the port, so it sends an **Extensible Authentication Protocol over LAN** (EAPoL) message to the authenticator, which in turn asks the authenticator server if this supplicant can be accepted. Then the authenticator opens the port for the supplicant, and communication can begin. Depending on how the authenticator is configured, this process bRSASaves in different ways.

In **Port-based 802.1X**, if the supplicant S is on network N (connected to the authenticator on Port A) and S opens Port A, then everyone on network N will have access. However, only the supplicant that opened the port on the authenticator is allowed to transmit and receive packets. This is done through the MAC address of the supplicant.

A supplicant can be seen as a combination of a client and a supplicant component (that takes care of negotiating the port opening when the client transmits the first packet). This embedded supplicant component then uses the MAC address of the client as the username and password in the form aa-bb-cc-dd-ee-ff. This has the advantage that the client does not need to have supplicant software.

The **Configuration** → **Security** → **Network** → **NAS** (Network Access Server) webpage as shown in Figure 2.54 allows

the user to configure the IEEE 802.1X and MAC-based authentication system and port settings. The NAS configuration consists of two sections: a system- (**System Configuration**) and a port-wide (**Port Configuration**). Table 2.35 provides detailed descriptions of options for both System Configuration and Port Configuration.

Managed Switch

Configuration

- System
- Ports
- ERPs
- DHCPv4
- Security
- Switch
- Network
- Port Security
- Configuration
- MAC-Addresses
- NAS
- ACL
- IP Source Guard
- ARP Inspection
- AAA
- Aggregation
- Spanning Tree
- STP
- LLDP
- SNMP
- MAC Table
- VLANs
- VCL
- QoS
- Mirroring
- FTP
- OSPF
- UDLD
- SS Backup
- Modbus Setting
- Monitor
- Diagnostics
- Maintenance

Network Access Server Configuration

System Configuration

Mode	Disabled
Reauthentication Enabled	<input type="checkbox"/>
Reauthentication Period	30 seconds
EAPOL Timeout	30 seconds
Aging Period	30 seconds
Hold Time	10 seconds
RADIUS Assigned QoS Enabled	<input type="checkbox"/>
RADIUS Assigned VLAN Enabled	<input type="checkbox"/>
Guest VLAN ID	1
Max. Reauth. Count	2
Allow Guest VLAN if EAPOL Seen	<input type="checkbox"/>

Port Configuration

Port	Admin State	RADIUS-Assigned QoS Enabled	RADIUS-Assigned VLAN Enabled	Guest VLAN Enabled	Port State	Restart
1	Force Authorized	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Globally Disabled	Reauthenticate / Restart
2	Force Authorized	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Globally Disabled	Reauthenticate / Restart
3	Force Authorized	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Globally Disabled	Reauthenticate / Restart
4	Force Authorized	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Globally Disabled	Reauthenticate / Restart
5	Force Authorized	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Globally Disabled	Reauthenticate / Restart
6	Force Authorized	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Globally Disabled	Reauthenticate / Restart
7	Force Authorized	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Globally Disabled	Reauthenticate / Restart
8	Force Authorized	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Globally Disabled	Reauthenticate / Restart
9	Force Authorized	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Globally Disabled	Reauthenticate / Restart
10	Force Authorized	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Globally Disabled	Reauthenticate / Restart
11	Force Authorized	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Globally Disabled	Reauthenticate / Restart

Save / Reset

Table 2.35 Descriptions of Network NAS:

C	Description	Factory Default
System Configuration		
Mode	Indicates if NAS is globally enabled or disabled on the switch. If globally disabled, all ports are allowed forwarding of frames.	Disabled
Reauthentication Enabled	If checked, successfully authenticated supplicants/clients are reauthenticated after the interval specified by the Reauthentication Period. Reauthentication for 802.1X-enabled ports can be used to detect if a new	Unclicked

La- bel	Description	Fac- tory De- fault
	device is plugged into a switch port or if a supplicant is no longer attached. For MAC-based ports, reauthentication is only useful if the RADIUS server configuration has changed. It does not involve communication between the switch and the client, and therefore doesn't imply that a client is still present on a port (see Aging Period below).	
Reau- then- ti- ca- tion Pe- riod	Determines the period, in seconds, after which a connected client must be reauthenticated. This is only active if the Reauthentication Enabled checkbox is checked. Valid values are in the range 1 to 3600 seconds.	3600
EAPOL Time- out	Determines the time for retransmission of Request Identity EAPOL frames. Valid values are in the range 1 to 65535 seconds. This has no effect for MAC-based ports.	30
Ag- ing Pe- riod	This setting applies to the following modes, i.e. modes using the Port Security functionality to secure MAC addresses: • MAC-Based Auth. When the NAS module uses the Port Security module to secure MAC addresses, the Port Security module needs to check for activity on the MAC address in question at regular intervals and free resources if no activity is seen within a given period of time. This parameter controls exactly this period and can be set to a number between 10 and 1000000 seconds. If reauthentication is enabled and the port is in an 802.1X-based mode, this is not so critical, since supplicants that are no longer attached to the port will get removed upon the next reauthentication, which will fail. But if reauthentication is not enabled, the only way to free resources is by aging the entries. For ports in MAC-based Auth. mode, reauthentication doesn't cause direct communication between the switch and the client, so this will not detect whether the client is still attached or not, and the only way to free any resources is to age the entry.	300
Hold Time	This setting applies to the following modes, i.e. modes using the Port Security functionality to secure MAC addresses: • MAC-Based Auth. If a client is denied access - either because the RADIUS server denies the client access or because the RADIUS server request times out (according to the timeout specified on the "Configuration→Security→AAA" page) - the client is put on hold in the Unauthorized state. The hold timer does not count during an on-going authentication. In MAC-based Auth. mode, the switch will ignore new frames coming from the client during the hold time. The Hold Time can be set to a number between 10 and 1000000 seconds.	10
RADIUS Assigned QoS En- abled	RADIUS-assigned QoS provides a means to centrally control the traffic class to which traffic coming from a successfully authenticated supplicant is assigned on the switch. The RADIUS server must be configured to transmit special RADIUS attributes to take advantage of this feature (see RADIUS-Assigned QoS Enabled below for a detailed description). The "RADIUS-Assigned QoS Enabled" checkbox provides a quick way to globally enable/disable RADIUS-server assigned QoS Class functionality. When checked, the individual ports' ditto setting determines whether RADIUS-assigned QoS Class is enabled on that port. When unchecked, RADIUS-server assigned QoS Class is disabled on all ports.	Unclicked
RADIUS Assigned VLAN En- abled	RADIUS-assigned VLAN provides a means to centrally control the VLAN on which a successfully authenticated supplicant is placed on the switch. Incoming traffic will be classified to and switched on the RADIUS-assigned VLAN. The RADIUS server must be configured to transmit special RADIUS attributes to take advantage of this feature (see RADIUSAssigned VLAN Enabled below for a detailed description).	Unclicked

La- bel	Description	Fac- tory De- fault
	The “RADIUS-Assigned VLAN Enabled” checkbox provides a quick way to globally enable/disable RADIUS-server assigned VLAN functionality. When checked, the individual ports’ ditto setting determines whether RADIUS-assigned VLAN is enabled on that port. When unchecked, RADIUS-server assigned VLAN is disabled on all ports.	
Guest VLAN En- abled	A Guest VLAN is a special VLAN - typically with limited network access - on which 802.1X-unaware clients are placed after a network administrator-defined timeout. The switch follows a set of rules for entering and leaving the Guest VLAN as listed below. The “Guest VLAN Enabled” checkbox provides a quick way to globally enable/disable Guest VLAN functionality. When checked, the individual ports’ ditto setting determines whether the port can be moved into Guest VLAN. When unchecked, the ability to move to the Guest VLAN is disabled on all ports.	Unclicked
Guest VLAN ID	This is the value that a port’s Port VLAN ID is set to if a port is moved into the Guest VLAN. It is only changeable if the Guest VLAN option is globally enabled. Valid values are in the range [1; 4095].	1
Max. Reauth Count	The number of times the switch transmits an EAPOL Request Identity frame without response before considering entering the Guest VLAN is adjusted with this setting. The value can only be changed if the Guest VLAN option is globally enabled. Valid values are in the range [1; 255].	2
Al- low Guest VLAN if EAPOL Seen	The switch remembers if an EAPOL frame has been received on the port for the life-time of the port. Once the switch considers whether to enter the Guest VLAN, it will first check if this option is enabled or disabled. If disabled (unchecked; default), the switch will only enter the Guest VLAN if an EAPOL frame has not been received on the port for the life-time of the port. If enabled (checked), the switch will consider entering the Guest VLAN even if an EAPOL frame has been received on the port for the lifetime of the port. The value can only be changed if the Guest VLAN option is globally enabled.	Unclicked
Port Con- fig- u- ra- tion		
Port	The port number for which the configuration below applies.	
Ad- min State	If NAS is globally enabled, this selection controls the port’s authentication mode. The following modes are available: Force Authorized In this mode, the switch will send one EAPOL Success frame when the port link comes up, and any client on the port will be allowed network access without authentication. Force Unauthorized In this mode, the switch will send one EAPOL Failure frame when the port link comes up, and any client on the port will be disallowed network access. Port-based 802.1X In the 802.1X-world, the user is called the supplicant, the switch is the authenticator, and the RADIUS server is the authentication server. The authenticator acts as the man-in-the-middle, forwarding requests and responses between the supplicant and the authentication server. Frames sent between the supplicant and the switch are special 802.1X frames, known as EAPOL (EAP Over LANs) frames. EAPOL frames encapsulate EAP PDUs (RFC3748). Frames sent between the switch and the RADIUS server are RADIUS packets. RADIUS packets also encapsulate EAP PDUs together with other attributes like the switch’s IP address, name, and the supplicant’s port number on the switch. EAP is very flexible, in that it allows for different authentication methods, like MD5-Challenge, PEAP,	Force Au- tho- rized

La- bel	Description	Fac- tory De- fault
	<p>and TLS. The important thing is that the authenticator (the switch) doesn't need to know which authentication method the supplicant and the authentication server are using, or how many information exchange frames are needed for a particular method. The switch simply encapsulates the EAP part of the frame into the relevant type (EAPOL or RADIUS) and forwards it. When authentication is complete, the RADIUS server sends a special packet containing a success or failure indication. Besides forwarding this decision to the supplicant, the switch uses it to open up or block traffic on the switch port connected to the supplicant. Note: Suppose two backend servers are enabled and that the server timeout is configured to X seconds (using the AAA configuration page), and suppose that the first server in the list is currently down (but not considered dead). Now, if the supplicant retransmits EAPOL Start frames at a rate faster than X seconds, then it will never get authenticated, because the switch will cancel on-going backend authentication server requests whenever it receives a new EAPOL Start frame from the supplicant. And since the server hasn't yet failed (because the X seconds haven't expired), the same server will be contacted upon the next backend authentication server request from the switch. This scenario will loop forever. Therefore, the server timeout should be smaller than the supplicant's EAPOL Start frame retransmission rate.</p> <p>MAC-based Auth. Unlike port-based 802.1X, MAC-based authentication is not a standard, but merely a best-practices method adopted by the industry. In MACbased authentication, users are called clients, and the switch acts as the supplicant on behalf of clients. The initial frame (any kind of frame) sent by a client is snooped by the switch, which in turn uses the client's MAC address as both username and password in the subsequent EAP exchange with the RADIUS server. The 6-byte MAC address is converted to a string on the following form "xx-xx-xx-xx-xx-xx", that is, a dash (-) is used as separator between the lower-cased hexadecimal digits. The switch only supports the MD5-Challenge authentication method, so the RADIUS server must be configured accordingly. When authentication is complete, the RADIUS server sends a success or failure indication, which in turn causes the switch to open up or block traffic for that particular client, using the Port Security module. Only then will frames from the client be forwarded on the switch. There are no EAPOL frames involved in this authentication, and therefore, MAC-based Authentication has nothing to do with the 802.1X standard. The advantage of MAC-based authentication over 802.1X-based authentication is that the clients don't need special supplicant software to authenticate. The disadvantage is that MAC addresses can be spoofed by malicious users - equipment whose MAC address is a valid RADIUS user can be used by anyone. Also, only the MD5-Challenge method is supported. The maximum number of clients that can be attached to a port can be limited using the Port Security Limit Control functionality.</p>	
RADIUS Assigned QoS Enabled	<p>When RADIUS-Assigned QoS is both globally enabled and enabled (checked) on a given port, the switch reacts to QoS Class information carried in the RADIUS Access-Accept packet transmitted by the RADIUS server when a supplicant is successfully authenticated. If present and valid, traffic received on the supplicant's port will be classified to the given QoS Class. If (re-)authentication fails or the RADIUS Access-Accept packet no longer carries a QoS Class or it's invalid, or the supplicant is otherwise no longer present on the port, the port's QoS Class is immediately reverted to the original QoS Class (which may be changed by the administrator in the meanwhile without affecting the RADIUS-assigned).</p>	Unclicked

Label	Description	Factory Default
	This option is only available for single-client modes, i.e. Port-based 802.1X Single 802.1X RADIUS attributes used in identifying a QoS Class: The User-Priority-Table attribute defined in RFC4675 forms the basis for identifying the QoS Class in an Access-Accept packet. Only the first occurrence of the attribute in the packet will be considered, and to be valid, it must follow this rule: All 8 octets in the attribute's value must be identical and consist of ASCII characters in the range '0' - '7', which translates into the desired QoS Class in the range [0; 7].	
RADIUS Assigned VLAN Enabled	When RADIUS-Assigned VLAN is both globally enabled and enabled (checked) for a given port, the switch reacts to VLAN ID information carried in the RADIUS Access-Accept packet transmitted by the RADIUS server when a supplicant is successfully authenticated. If present and valid, the port's Port VLAN ID will be changed to this VLAN ID, the port will be set to be a member of that VLAN ID, and the port will be forced into VLAN unaware mode. Once assigned, all traffic arriving on the port will be classified and switched on the RADIUS-assigned VLAN ID. If (re-)authentication fails or the RADIUS Access-Accept packet no longer carries a VLAN ID or it's invalid, or the supplicant is otherwise no longer present on the port, the port's VLAN ID is immediately reverted to the original VLAN ID (which may be changed by the administrator in the meanwhile without affecting the RADIUS-assigned). This option is only available for single-client modes, i.e. Port-based 802.1X Single 802.1X For trouble-shooting VLAN assignments, use the "Monitor->VLANs->VLAN Membership and VLAN Port" pages. These pages show which modules have (temporarily) overridden the current Port VLAN configuration. RADIUS attributes used in identifying a VLAN ID: RFC2868 and RFC3580 form the basis for the attributes used in identifying a VLAN ID in an Access-Accept packet. The following criteria are used: The Tunnel-Medium-Type, Tunnel-Type, and Tunnel-Private-Group- ID attributes must all be present at least once in the Access-Accept packet. The switch looks for the first set of these attributes that have the same Tag value and fulfil the following requirements (if Tag == 0 is used, the Tunnel-Private-Group-ID does not need to include a Tag): Value of Tunnel-Medium-Type must be set to "IEEE-802" (ordinal 6). Value of Tunnel-Type must be set to "VLAN" (ordinal 13). Value of Tunnel-Private-Group-ID must be a string of ASCII chars in the range '0' - '9', which is interpreted as a decimal string representing the VLAN ID. Leading '0's are discarded. The final value must be in the range [1; 4095].	Unclicked
Guest VLAN Enabled	When Guest VLAN is both globally enabled and enabled (checked) for a given port, the switch considers moving the port into the Guest VLAN according to the rules outlined below. This option is only available for EAPOL-based modes, i.e.: Port-based 802.1X Single 802.1X Multi 802.1X For trouble-shooting VLAN assignments, use the "Monitor->VLANs->VLAN Membership and VLAN Port" pages. These pages show which modules have (temporarily) overridden the current Port	Unclicked
Label	Description	Factory Default
Port	VLAN configuration. Guest VLAN Operation: When a Guest VLAN enabled port's link comes up, the switch starts transmitting EAPOL Request Identity frames. If the number of transmissions of such frames exceeds Max. Reauth. Count and no EAPOL frames have been received in the meanwhile, the switch considers entering the Guest VLAN. The interval between transmission of EAPOL Request Identity frames is configured with EAPOL Timeout. If Allow Guest VLAN if EAPOL Seen is enabled, the port will now be placed in the Guest VLAN. If disabled, the switch will first check its history to see if an EAPOL frame has previously been received on the port (this history is cleared if the port link goes down or the port's Admin State is changed), and if not, the port will be placed in the Guest VLAN. Otherwise it will not move to the Guest VLAN, but continue transmitting EAPOL Request Identity frames at the rate given by EAPOL Timeout. Once in the Guest VLAN, the port is considered authenticated, and all attached clients on the port are allowed access on this VLAN. The switch will not transmit an EAPOL Success frame when entering the Guest VLAN. While in the Guest VLAN, the switch monitors the link for EAPOL frames, and if one such frame is received, the switch immediately takes the port out of the Guest VLAN and starts authenticating the supplicant according to the port mode. If an EAPOL frame is received, the port will never be able to go back into the Guest VLAN if the "Allow Guest VLAN if EAPOL Seen" is disabled.	Global

Click **Refresh** button to refresh the page. Click **Save** button to save changes. Click **Reset** button to undo any changes made locally and revert to previously saved values.

ACL


ACL is an acronym for Access Control List. It is the list table of ACEs, containing Access Control Entries that specify individual users or groups permitted or denied to specific traffic objects, such as a process or a program. Each accessible traffic object contains an identifier to its ACL. The privileges determine whether there are specific traffic object access rights. ACL implementations can be quite complex, for example, when the ACEs are prioritized for the various situation. In networking, the ACL refers to a list of service ports or network services that are available on a host or server, each with a list of hosts or servers permitted or denied to use the service. ACL can generally be configured to control inbound traffic, and in this context, they are similar to firewalls. There are 3 web-pages associated with the manual ACL configuration: **ACL Ports**, **ACL Rate Limiters**, and **ACL Access Control List**. Figure 2.55 shows the list of ACL menus. The following subsections will describe each ACL configuration.



ACL Ports

The **ACL Ports** webpage is depicted in Figure 2.56. The ACL Ports configuration is used to assign a Policy ID to an ingress port. This is useful to group ports to obey the same traffic rules. Traffic Policy is created under the “Access Control List” - page. You can also set up specific traffic properties (Action / Rate Limiter / Port copy, etc) for each ingress port. They will though only apply if the frame gets past the ACE (Access Control Entry) matching without getting matched. In that case a counter associated with that port is incremented. Table 2.36 summarizes description for each specific port property.

Managed Switch

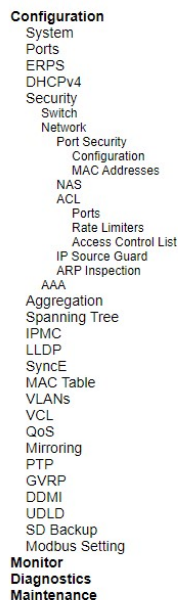

ACL Ports Configuration

Port	Policy ID	Action	Rate Limiter ID	Port Redirect	Mirror	Logging	Shutdown	State	Counter
*	0	<>	<>	Disabled Port 1 Port 2	<>	<>	<>	<>	*
1	0	Permit	Disabled	Disabled Port 1 Port 2	Disabled	Disabled	Disabled	Enabled	0
2	0	Permit	Disabled	Disabled Port 1 Port 2	Disabled	Disabled	Disabled	Enabled	0
3	0	Permit	Disabled	Disabled Port 1 Port 2	Disabled	Disabled	Disabled	Enabled	0
4	0	Permit	Disabled	Disabled Port 1 Port 2	Disabled	Disabled	Disabled	Enabled	69727
5	0	Permit	Disabled	Disabled Port 1 Port 2	Disabled	Disabled	Disabled	Enabled	11516
6	0	Permit	Disabled	Disabled Port 1 Port 2	Disabled	Disabled	Disabled	Enabled	0
7	0	Permit	Disabled	Disabled Port 1 Port 2	Disabled	Disabled	Disabled	Enabled	0
8	0	Permit	Disabled	Disabled Port 1 Port 2	Disabled	Disabled	Disabled	Enabled	0
9	0	Permit	Disabled	Disabled Port 1 Port 2	Disabled	Disabled	Disabled	Enabled	0
10	0	Permit	Disabled	Disabled Port 1 Port 2	Disabled	Disabled	Disabled	Enabled	0
11	0	Permit	Disabled	Disabled Port 1 Port 2	Disabled	Disabled	Disabled	Enabled	0

Save Reset

Table 2.36 Descriptions of Network ACL Ports:

La- bel	Description	Fac- tory De- fault
Port	The logical port for the settings contained in the same row.	Port ID from 1 to 11
Pol- icy ID	Select the policy to apply to this port. The allowed values are 0 through 255. The default value is 0.	0
Ac- tion	Select whether forwarding is permitted ("Permit") or denied ("Deny"). The default value is "Permit".	Per- mit
Rate Lim- iter ID	Select which rate limiter to apply on this port. The allowed values are Disabled or the values 1 through 16. The default value is "Disabled".	Dis- abled
Port Redi- rect	Select which port frames are redirected on. The allowed values are Disabled or a specific port number and it can't be set when action is permitted. The default value is "Disabled".	Dis- abled
Mir- ror	Specify the mirror operation of this port. The allowed values are: Enabled: Frames received on the port are mirrored. Disabled: Frames received on the port are not mirrored. The default value is "Disabled".	Dis- abled
Log- ging	Specify the logging operation of this port. Notice that the logging message doesn't include the 4 bytes CRC. The allowed values are: Enabled: Frames received on the port are stored in the System Log. Disabled: Frames received on the port are not logged. The default value is "Disabled". Note: The logging feature only works when the packet length is less than 1518 (without VLAN tags) and the System Log memory size and logging rate is limited.	Dis- abled
Shut- down	Specify the port shut down operation of this port. The allowed values are: Enabled: If a frame is received on the port, the port will be disabled. Disabled: Port shut down is disabled. The default value is "Disabled". Note: The shutdown feature only works when the packet length is less than 1518 (without VLAN tags).	Dis- abled
State	Specify the port state of this port. The allowed values are: Enabled: To reopen ports by changing the volatile port configuration of the ACL user module. Disabled: To close ports by changing the volatile port configuration of the ACL user module. The default value is "Enabled".	Dis- abled
Counter	Counts the number of frames that match this ACE.	0

Click **Save** button to save changes. Click **Reset** button to undo any changes made locally and revert to previously saved values.

ACL Rate Limiters

The **ACL Rate Limiters** webpage is shown in Figure 2.57. Under this page, the users can configure the rate limiters. There can be 15 different rate limiters, each ranging from 1-1024K packets per seconds. Under “Ports” and “Access Control List” web-pages you can assign a Rate Limiter ID to the ACE(s) or ingress port(s). Table 2.37 describes the labels of ACL Rate Limiters Configuration.



Configuration

- System
- Ports
- ERPS
- DHCPv4
- Security
 - Switch
 - Network
 - Port Security
 - Configuration
 - MAC Addresses
 - NAS
 - ACL
 - Ports
 - Rate Limiters
 - Access Control List
 - IP Source Guard
 - ARP Inspection
 - AAA
- Aggregation
- Spanning Tree
- IPMC
- LLDP
- SyncE
- MAC Table
- VLANs
- VCL
- QoS
- Mirroring
- PTP

ACL Rate Limiter Configuration


Rate Limiter ID	Rate	Unit
*	1	<> ▼
1	1	pps ▼
2	1	pps ▼
3	1	pps ▼
4	1	pps ▼
5	1	pps ▼
6	1	pps ▼
7	1	pps ▼
8	1	pps ▼
9	1	pps ▼
10	1	pps ▼
11	1	pps ▼
12	1	pps ▼
13	1	pps ▼
14	1	pps ▼
15	1	pps ▼
16	1	pps ▼

Table 2.37 Descriptions of Network ACL Rate Limiters:

Label	Description	Factory Default
Rate Limiter ID	The rate limiter ID for the settings contained in the same row and its range is 1 to 16.	Limiter ID 1 to 16
Rate	The valid rate is 0 - 99, 100, 200, 300, ..., 1092000 in pps or 0, 100, 200, 300, ..., 1000000 in kbps	1
Unit	Specify the rate unit. The allowed values are: pps: packets per second. kbps: Kbits per second	pps

Click **Save** button to save changes. Click **Reset** button to undo any changes made locally and revert to previously saved values.

ACL Access Control List

The **ACL -> Access Control List** webpage shows the ACEs in a prioritized way, highest (top) to lowest (bottom). By default, the table is empty as shown in Figure 2.58. When click on the plus sign icon  at the end of the table, a set of parameters are listed as three tables under the ACE Configuration webpage as shown in Figure 2.59.

In Figure 2.58, users can select **auto-refresh** option by checking the **Auto-refresh** box to refresh the page automatically. Automatic refresh occurs every 3 seconds. Users can click **Refresh** button to refresh the page; any changes made locally will be undone. Users can click **Clear** button to clear the counters. Lastly, users can click **Remove All** button to remove all ACEs.

An ingress frame will only get a hit on one ACE even though there are more matching ACEs. The first matching ACE will act (permit/deny) on that frame and a counter associated with that ACE is incremented. An ACE can be associated with a Policy, 1 ingress port, or any ingress port (the whole switch). If an ACE Policy is created then that Policy can be associated with a group of ports under the “Ports” web-page. There are number of parameters that can be configured with an ACE. Table 2.38 provides additional information for each parameter to configure the ACL. The maximum number of ACEs is 64.

Managed Switch



Configuration

- System
- Ports
- ERPS
- DHCPv4
- Security
- Switch
- Network
- Port Security
- Configuration
- MAC Addresses
- NAS
- ACL
- Ports
- Rate Limiters
- Access Control List

Access Control List Configuration







ACE	Ingress Port	Policy / Bitmask	Frame Type	Action	Rate Limiter	Port Redirect	Mirror	Counter	
									

Table 2.38 Summary of Label, Description, and Factory Default for ACL (Access Control List):

La- bel	Description	Fac- tory De- fault
ACE Con- fig- u- ra- tion		
ACE	Indicates the ACE ID.	Dis- abled
Ingress Port	Indicates the ingress port of the ACE. Possible values are: All: The ACE will match all ingress port. Port: The ACE will match a specific ingress port.	All
Pol- icy/ Bitmask	Indicates the policy number and bitmask of the ACE.	Any
Frame Type	Indicates the frame type of the ACE. Possible values are: Any: The ACE will match any frame type. EType: The ACE will match Ethernet Type frames. Note that an Ethernet Type based ACE will not get matched by IP and ARP frames. ARP: The ACE will match ARP/RARP frames. IPv4: The ACE will match all IPv4 frames. IPv4/ICMP: The ACE will match IPv4 frames with ICMP protocol. IPv4/UDP: The ACE will match IPv4 frames with UDP protocol. IPv4/TCP: The ACE will match IPv4 frames with TCP protocol. IPv4/Other: The ACE will match IPv4 frames, which are not ICMP/UDP/TCP. IPv6: The ACE will match all IPv6 standard frames.	Any
Ac- tion	Indicates the forwarding action of the ACE. Permit: Frames matching the ACE may be forwarded and learned. Deny: Frames matching the ACE are dropped. Filter: Frames matching the ACE are filtered.	Per- mit
Rate Lim- iter	Indicates the rate limiter number of the ACE. The allowed range is 1 to 16. When Disabled is displayed, the rate limiter operation is disabled.	Dis- abled
Port Redi- rect	Indicates the port redirect operation of the ACE. Frames matching the ACE are redirected to the port number. The allowed values are Disabled or a specific port number. When Disabled is displayed, the port redirect operation is disabled.	Dis- abled
Mir- ror	Specify the mirror operation of this port. Frames matching the ACE are mirrored to the destination mirror port. The allowed values are: Enabled: Frames received on the port are mirrored. Disabled: Frames received on the port are not mirrored. The default value is "Disabled".	Dis- abled
Counter	The counter indicates the number of times the ACE was hit by a frame.	Dis- abled
Mod- ifi- ca- tion But- tons	You can modify each ACE (Access Control Entry) in the table using the following buttons:  : Inserts a new ACE before the current row. e: Edits the ACE row.  : Moves the ACE up the list.  : Moves the ACE down the list.  : Deletes the ACE.  : The lowest plus sign adds a new entry at the bottom of the ACE listings.	Dis- abled

After clicking on the plus sign to insert a new ACE (Access Control Entry), the users can configure an ACE on the webpage as shown in Figure 2.59. An ACE consists of several parameters. These parameters vary according to the frame type that you select. First select the **ingress port** for the ACE, and then select the **frame type**. Different parameter options are displayed depending on the **frame type** selected. That is additional table and parameters will be available for settings. A frame that hits this ACE matches the configuration that is defined here. Table 2.39 to Table 2.47 summarizes description of all ACL Configuration with different frame types.

Click **Save** button to save the setting. Click **Reset** button to change the setting back to factory default. Click **Cancel**

button to keep the current setting.



Configuration

- System
- Ports
- ERPS
- DHCPv4
- Security
- Switch
- Network
- Port Security
- Configuration
- MAC Addresses
- NAS
- ACL
- Ports
- Rate Limiters
- Access Control List
- IP Source Guard
- ARP Inspection
- AAA
- Aggregation
- Spanning Tree
- IPMC
- LLDP
- SyncE
- MAC Table

ACE Configuration

Ingress Port	All
	Port 1
	Port 2
	Port 3
	Port 4
Policy Filter	Any
Frame Type	Any

Save Reset Cancel

Managed Switch

Action	Permit
Rate Limiter	Disabled
Mirror	Disabled
Logging	Disabled
Shutdown	Disabled
Counter	0

VLAN Parameters

802.1Q Tagged	Any
VLAN ID Filter	Any
Tag Priority	Any

Table 2.39 Description of ACL Configuration:

La- bel	Description
Sec- ond Lookup	Specify the second lookup operation of the ACE.
Ingress Port	Select the ingress port for which this ACE applies. All: The ACE applies to all port. Port n: The ACE applies to this port number, where n is the number of the switch port.
Pol- icy Fil- ter	Specify the policy number filter for this ACE. Any: No policy filter is specified. (policy filter status is “don’t-care”.) Specific: If you want to filter a specific policy with this ACE, choose this value. Two field for entering a policy value and bitmask appears.
Pol- icy Value	When “Specific” is selected for the policy filter, you can enter a specific policy value. The allowed range is 0 to 63.
Pol- icy Bit- mask	When “Specific” is selected for the policy filter, you can enter a specific policy bitmask. The allowed range is 0x0 to 0x3f. Notice the usage of bitmask, if the binary bit value is “0”, it means this bit is “don’t-care”. The real matched pattern is [policy_value & policy_bitmask]. For example, if the policy value is 3 and the policy bitmask is 0x10(bit 0 is “don’t-care” bit), then policy 2 and 3 are applied to this rule.
Frame Type	Select the frame type for this ACE. These frame types are mutually exclusive. Any: Any frame can match this ACE. Ethernet Type: Only Ethernet Type frames can match this ACE. The IEEE 802.3 describes the value of Length/Type Field specifications to be greater than or equal to 1536 decimal (equal to 0600 hexadecimal) and the value should not be equal to 0x800(IPv4), 0x806(ARP) or 0x86DD(IPv6). ARP: Only ARP frames can match this ACE. Notice the ARP frames won’t match the ACE with ethernet type. IPv4: Only IPv4 frames can match this ACE. Notice the IPv4 frames won’t match the ACE with ethernet type. IPv6: Only IPv6 frames can match this ACE. Notice the IPv6 frames won’t match the ACE with Ethernet type.
Ac- tion	Specify the action to take with a frame that hits this ACE. Permit: The frame that hits this ACE is granted permission for the ACE operation. Deny: The frame that hits this ACE is dropped. Filter: Frames matching the ACE are filtered.
Rate Lim- iter	Specify the rate limiter in number of base units. The allowed range is 1 to 16. Disabled indicates that the rate limiter operation is disabled.
Port Redi- rect	Frames that hit the ACE are redirected to the port number specified here. The rate limiter will affect these ports. The allowed range is the same as the switch port number range. Disabled indicates that the port redirect operation is disabled and the specific port number of ‘Port Redirect’ can’t be set when action is permitted.
Mir- ror	Specify the mirror operation of this port. Frames matching the ACE are mirrored to the destination mirror port. The rate limiter will not affect frames on the mirror port. The allowed values are: Enabled: Frames received on the port are mirrored. Disabled: Frames received on the port are not mirrored. The default value is “Disabled”.
Log- ging	Specify the logging operation of the ACE. Notice that the logging message doesn’t include the 4 bytes CRC information. The allowed values are: Enabled: Frames matching the ACE are stored in the System Log. Disabled: Frames matching the ACE are not logged. Note: The logging feature only works when the packet length is less than 1518(without VLAN tags) and the System Log memory size and logging rate is limited.
Shut- down	Specify the port shut down operation of the ACE. The allowed values are: Enabled: If a frame matches the ACE, the ingress port will be disabled. Disabled: Port shut down is disabled for the ACE. Note: The shutdown feature only works when the packet length is less than 1518(without VLAN tags).
Counter	The counter indicates the number of times the ACE was hit by a frame.

Table 2.40 Description of ACL Configuration with MAC Parameters:

La- bel	Description
SMAC Fil- ter	(Only displayed when the frame type is Ethernet Type or ARP.) Specify the source MAC filter for this ACE. Any: No SMAC filter is specified. (SMAC filter status is “don’t-care”.) Specific: If you want to filter a specific source MAC address with this ACE, choose this value. A field for entering a SMAC value appears.
SMAC Value	When “Specific” is selected for the SMAC filter, you can enter a specific source MAC address. The legal format is “xx-xx-xx-xx-xx-xx” or “xx.xx.xx.xx.xx.xx” or “xxxxxxxxxxxx” (x is a hexadecimal digit). A frame that hits this ACE matches this SMAC value.
DMAC Fil- ter	Specify the destination MAC filter for this ACE. Any: No DMAC filter is specified. (DMAC filter status is “don’t-care”.) MC: Frame must be multicast. BC: Frame must be broadcast. UC: Frame must be unicast. Specific: If you want to filter a specific destination MAC address with this ACE, choose this value. A field for entering a DMAC value appears
DMAC Value	When “Specific” is selected for the DMAC filter, you can enter a specific destination MAC address. The legal format is “xx-xx-xx-xx-xx-xx” or “xx.xx.xx.xx.xx.xx” or “xxxxxxxxxxxx” (x is a hexadecimal digit). A frame that hits this ACE matches this DMAC value.

Table 2.41 Description of ACL Configuration with VLAN Parameters

Label	Description	Fac- tory De- fault
802.1Q Tagged	Specify whether frames can hit the action according to the 802.1Q tagged. The allowed values are: Any: Any value is allowed (“don’t-care”). Enabled: Tagged frame only. Disabled: Untagged frame only. The default value is “Any”.	Any
VLAN ID Filter	Specify the VLAN ID filter for this ACE. Any: No VLAN ID filter is specified. (VLAN ID filter status is “don’t-care”.) Specific: If you want to filter a specific VLAN ID with this ACE, choose this value. A field for entering a VLAN ID number appears.	Any
VLAN ID	When “Specific” is selected for the VLAN ID filter, you can enter a specific VLAN ID number. The allowed range is 1 to 4095. A frame that hits this ACE matches this VLAN ID value.	1
Tag Prior- ity	Specify the tag priority for this ACE. A frame that hits this ACE matches this tag priority. The allowed number range is 0 to 7 or range 0-1, 2-3, 4-5, 6-7, 0-3 and 4-7. The value Any means that no tag priority is specified (tag priority is “don’t-care”).	Any

Table 2.42 Description of ACL Configuration with ARP Parameters

Label	Description	Factory Default
ARP/RARP Flag	Specify the available ARP/RARP opcode (OP) flag for this ACE. Any: No ARP/RARP OP flag is specified. (OP is “don’t-care”.) ARP: Frame must have ARP opcode set to ARP. RARP: Frame must have RARP opcode set to RARP. Other: Frame has unknown ARP/RARP Opcode flag.	Any
Request/Reply Flag	Specify the available Request/Reply opcode (OP) flag for this ACE. Any: No Request/Reply OP flag is specified. (OP is “don’t-care”.) Request: Frame must have ARP Request or RARP Request OP flag set. Reply: Frame must have ARP Reply or RARP Reply OP flag.	Any
Sender IP Filter	Specify the sender IP filter for this ACE. Any: No sender IP filter is specified. (Sender IP filter is “don’t-care”.) Host: Sender IP filter is set to Host. Specify the sender IP address in the SIP Address field that appears. Network: Sender IP filter is set to Network. Specify the sender IP address and sender IP mask in the SIP Address and SIP Mask fields that appear.	Any
Sender IP Address	When “Host” or “Network” is selected for the sender IP filter, you can enter a specific sender IP address in dotted decimal notation. Notice the invalid IP address configuration is acceptable too, for example, 0.0.0.0. Normally, an ACE with invalid IP address will explicitly adding deny action.	-
Sender IP Mask	When “Network” is selected for the sender IP filter, you can enter a specific sender IP mask in dotted decimal notation.	-
Target IP Filter	Specify the target IP filter for this ACE. Any: No target IP filter is specified. (Target IP filter is “don’t-care”.) Host: Target IP filter is set to Host. Specify the target IP address in the SIP Address field that appears. Network: Target IP filter is set to Network. Specify the target IP address and target IP mask in the SIP Address and SIP Mask fields that appear.	Any
Target IP Address	When “Host” or “Network” is selected for the target IP filter, you can enter a specific target IP address in dotted decimal notation. Notice the invalid IP address configuration is acceptable too, for example, 0.0.0.0. Normally, an ACE with invalid IP address will explicitly adding deny action.	-
Target IP Mask	When “Network” is selected for the target IP filter, you can enter a specific target IP mask in dotted decimal notation.	-
ARP Sender MAC Match	Specify whether frames can hit the action according to their sender hardware address field (SHA) settings. 0: ARP frames where SHA is not equal to the SMAC address. 1: ARP frames where SHA is equal to the SMAC address. Any: Any value is allowed (“don’t-care”).	Any
RARP Target MAC Match	Specify whether frames can hit the action according to their target hardware address field (THA) settings. 0: RARP frames where THA is not equal to the target MAC address. 1: RARP frames where THA is equal to the target MAC address. Any: Any value is allowed (“don’t-care”).	Any
IP/Ethernet Length	Specify whether frames can hit the action according to their ARP/RARP hardware address length (HLN) and protocol address length (PLN) settings. 0: ARP/RARP frames where the HLN is not equal to Ethernet (0x06) or the (PLN) is not equal to IPv4 (0x04). 1: ARP/RARP frames where the HLN is equal to Ethernet (0x06) and the (PLN) is equal to IPv4 (0x04). Any: Any value is allowed (“don’t-care”).	Any
IP	Specify whether frames can hit the action according to their ARP/RARP hardware address space (HRD) settings. 0: ARP/RARP frames where the HLD is not equal to Ethernet (1). 1: ARP/RARP frames where the HLD is equal to Ethernet (1). Any: Any value is allowed (“don’t-care”).	Any
Ethernet	Specify whether frames can hit the action according to their ARP/RARP protocol address space (PRO) settings. 0: ARP/RARP frames where the PRO is not equal to IP (0x800). 1: ARP/RARP frames where the PRO is equal to IP (0x800). Any: Any value is allowed (“don’t-care”).	Any

Table 2.43 Description of ACL Configuration with IPv4 Parameters:

La- bel	Description	Fac- tory De- fault
IP Pro- to- col Value	When “Specific” is selected for the IP protocol value, you can enter a specific value. The allowed range is 0 to 255. A frame that hits this ACE matches this IP protocol value.	-
IP TTL	Specify the Time-to-Live settings for this ACE. zero: IPv4 frames with a Time-to-Live field greater than zero must not be able to match this entry. non-zero: IPv4 frames with a Time-to-Live field greater than zero must be able to match this entry. Any Any value is allowed (“don’t-care”).	Any
IP Frag- ment	Specify the fragment offset settings for this ACE. This involves the settings for the More Fragments (MF) bit and the Fragment Offset (FRAG OFFSET) field for an IPv4 frame. No: IPv4 frames where the MF bit is set or the FRAG OFFSET field is greater than zero must not be able to match this entry. Yes: IPv4 frames where the MF bit is set or the FRAG OFFSET field is greater than zero must be able to match this entry. Any: Any value is allowed (“don’t-care”).	Any
IP Op- tion	Specify the options flag setting for this ACE. No: IPv4 frames where the options flag is set must not be able to match this entry. Yes: IPv4 frames where the options flag is set must be able to match this entry. Any: Any value is allowed (“don’t-care”).	Any
SIP Fil- ter	Specify the source IP filter for this ACE. Any: No source IP filter is specified. (Source IP filter is “don’t-care”.) Host: Source IP filter is set to Host. Specify the source IP address in the SIP Address field that appears. Network:Source IP filter is set to Network. Specify the source IP address and source IP mask in the SIP Address and SIP Mask fields that appear.	Any
SIP Ad- dress	When “Host” or “Network” is selected for the source IP filter, you can enter a specific SIP address in dotted decimal notation. Notice the invalid IP address configuration is acceptable too, for example, 0.0.0.0. Normally, an ACE with invalid IP address will explicitly adding deny action.	-
SIP Mask	When “Network” is selected for the source IP filter, you can enter a specific SIP mask in dotted decimal notation.	-
DIP Fil- ter	Specify the destination IP filter for this ACE. Any: No destination IP filter is specified. (Destination IP filter is “don’t-care”.) Host: Destination IP filter is set to Host. Specify the destination IP address in the DIP Address field that appears. Network: Destination IP filter is set to Network. Specify the destination IP address and destination IP mask in the DIP Address and DIP Mask fields that appear.	Any
DIP Ad- dress	When “Host” or “Network” is selected for the destination IP filter, you can enter a specific DIP address in dotted decimal notation. Notice the invalid IP address configuration is acceptable too, for example, 0.0.0.0. Normally, an ACE with invalid IP address will explicitly adding deny action.	-
DIP Mask	When “Network” is selected for the destination IP filter, you can enter a specific DIP mask in dotted decimal notation.	-

Table 2.44 Description of ACL Configuration with IPv6 Parameters

Next Header Filter	Specify the IPv6 next header filter for this ACE. Any: No IPv6 next header filter is specified (“don’t-care”). Specific: If you want to filter a specific IPv6 next header filter with this ACE, choose this value. A field for entering an IPv6 next header filter appears. ICMP: Select ICMP to filter IPv6 ICMP protocol frames. Extra fields for defining ICMP parameters will appear. These fields are explained later in this help file. UDP: Select UDP to filter IPv6 UDP protocol frames. Extra fields for defining UDP parameters will appear. These fields are explained later in this help file. TCP: Select TCP to filter IPv6 TCP protocol frames. Extra fields for defining TCP parameters will appear. These fields are explained later in this help file.	Any
Next Header Value	When “Specific” is selected for the IPv6 next header value, you can enter a specific value. The allowed range is 0 to 255. A frame that hits this ACE matches this IPv6 protocol value.	-
SIP Filter	Specify the source IPv6 filter for this ACE. Any: No source IPv6 filter is specified. (Source IPv6 filter is “don’t-care”). Specific: Source IPv6 filter is set to Network. Specify the source IPv6 address and source IPv6 mask in the SIP Address fields that appear.	Any
SIP Address	When “Specific” is selected for the source IPv6 filter, you can enter a specific SIPv6 address. The field only supported last 32 bits for IPv6 address.	-
SIP Bit-Mask	When “Specific” is selected for the source IPv6 filter, you can enter a specific SIPv6 mask. The field only supported last 32 bits for IPv6 address. Notice the usage of bitmask, if the binary bit value is “0”, it means this bit is “don’t-care”. The real matched pattern is [sipv6_address & sipv6_bitmask] (last 32 bits). For example, if the SIPv6 address is 2001::3 and the SIPv6 bitmask is 0xFFFFFFE (bit 0 is “don’t-care” bit), then SIPv6 address 2001::2 and 2001::3 are applied to this rule	-
Hop Limit	Specify the hop limit settings for this ACE. zero: IPv6 frames with a hop limit field greater than zero must not be able to match this entry. non-zero: IPv6 frames with a hop limit field greater than zero must be able to match this entry. Any: Any value is allowed (“don’t-care”).	Any

Table 2.45 Description of ACL Configuration with ICMP Parameters

Label	Description	Factory Default
ICMP Type Filter	Specify the ICMP filter for this ACE. Any: No ICMP filter is specified (ICMP filter status is “don’t-care”). Specific: If you want to filter a specific ICMP filter with this ACE, you can enter a specific ICMP value. A field for entering an ICMP value appears.	Any
ICMP Type Value	When “Specific” is selected for the ICMP filter, you can enter a specific ICMP value. The allowed range is 0 to 255. A frame that hits this ACE matches this ICMP value.	-
ICMP Code Filter	Specify the ICMP code filter for this ACE. Any: No ICMP code filter is specified (ICMP code filter status is “don’t-care”). Specific: If you want to filter a specific ICMP code filter with this ACE, you can enter a specific ICMP code value. A field for entering an ICMP code value appears.	Any
ICMP Code Value	When “Specific” is selected for the ICMP code filter, you can enter a specific ICMP code value. The allowed range is 0 to 255. A frame that hits this ACE matches this ICMP code value.	-

Table 2.46 Description of ACL Configuration with TCP/UDP Parameters

La-bel	Description	Fac-tory De-fault
TCP/UDP Source Filter	Specify the TCP/UDP source filter for this ACE. Any: No TCP/UDP source filter is specified (TCP/UDP source filter status is “don’t care”). Specific: If you want to filter a specific TCP/UDP source filter with this ACE, you can enter a specific TCP/UDP source value. A field for entering a TCP/UDP source value appears. Range: If you want to filter a specific TCP/UDP source range filter with this ACE, you can enter a specific TCP/UDP source range value. A field for entering a TCP/UDP source value appears.	Any
TCP/UDP Source No.	When “Specific” is selected for the TCP/UDP source filter, you can enter a specific TCP/UDP source value. The allowed range is 0 to 65535. A frame that hits this ACE matches this TCP/UDP source value.	-
TCP/UDP Source Range	When “Range” is selected for the TCP/UDP source filter, you can enter a specific TCP/UDP source range value. The allowed range is 0 to 65535. A frame that hits this ACE matches this TCP/UDP source value.	-
TCP/UDP Destination Filter	Specify the TCP/UDP destination filter for this ACE. Any: No TCP/UDP destination filter is specified (TCP/UDP destination filter status is “don’t-care”). Specific: If you want to filter a specific TCP/UDP destination filter with this ACE, you can enter a specific TCP/UDP destination value. A field for entering a TCP/UDP destination value appears. Range: If you want to filter a specific range TCP/UDP destination filter with this ACE, you can enter a specific TCP/UDP destination range value. A field for entering a TCP/UDP destination value appears.	Any
TCP/UDP Destination Number	When “Specific” is selected for the TCP/UDP destination filter, you can enter a specific TCP/UDP destination value. The allowed range is 0 to 65535. A frame that hits this ACE matches this TCP/UDP destination value.	-
TCP/UDP Destination Range	When “Range” is selected for the TCP/UDP destination filter, you can enter a specific TCP/UDP destination range value. The allowed range is 0 to 65535. A frame that hits this ACE matches this TCP/UDP destination value.	-
TCP FIN	Specify the TCP “No more data from sender” (FIN) value for this ACE. 0: TCP frames where the FIN field is set must not be able to match this entry. 1: TCP frames where the FIN field is set must be able to match this entry. Any: Any value is allowed (“don’t-care”).	Any
TCP SYN	Specify the TCP “Synchronize sequence numbers” (SYN) value for this ACE. 0: TCP frames where the SYN field is set must not be able to match this entry. 1: TCP frames where the SYN field is set must be able to match this entry. Any: Any value is allowed (“don’t-care”).	Any
TCP RST	Specify the TCP “Reset the connection” (RST) value for this ACE. 0: TCP frames where the RST field is set must not be able to match this entry. 1: TCP frames where the RST field is set must be able to match this entry. Any: Any value is allowed (“don’t-care”).	Any
TCP PSH	Specify the TCP P “Push Function” (PSH) value for this ACE. 0: TCP frames where the PSH field is set must not be able to match this entry. 1: TCP frames where the PSH field is set must be able to match this entry. Any: Any value is allowed (“don’t-care”).	Any
TCP ACK	Specify the TCP “Acknowledgment field significant” (ACK) value for this ACE. 0: TCP frames where the ACK field is set must not be able to match this entry. 1: TCP frames where the ACK field is set must be able to match this entry. Any: Any value is allowed (“don’t-care”).	Any
TCP URG	Specify the TCP “Urgent Pointer field significant” (URG) value for this ACE. 0: URG frames where the FIN field is set must not be able to match this entry. 1: URG frames where the FIN field is set must be able to match this entry. Any: Any value is allowed (“don’t-care”).	Any

Table 2.47 Description of ACL Configuration with Ethernet Type Parameters:

Label	Description	Factory Default
Ether-Type Filter	Specify the Ethernet type filter for this ACE. Any: No EtherType filter is specified (EtherType filter status is “don’t-care”). Specific: If you want to filter a specific EtherType filter with this ACE, you can enter a specific EtherType value. A field for entering an EtherType value appears.	-
Eth-ernet Type Value	When “Specific” is selected for the EtherType filter, you can enter a specific EtherType value. The allowed range is 0x600 to 0xFFFF but excluding 0x800(IPv4), 0x806(ARP) and 0x86DD(IPv6). A frame that hits this ACE matches this EtherType value.	-

IP Source Guard

IP Source Guard is a secure feature used to restrict IP traffic on DHCP snooping untrusted ports by filtering traffic based on the DHCP Snooping Table or manually configured IP Source Bindings. It helps prevent IP spoofing attacks when a host tries to spoof and use the IP address of another host. This is to prevent a malicious host from impersonating a legitimate host by assuming the legitimate host’s IP address.

IP Source Guard Configuration

IP Source Guard Configuration webpage is shown in Figure 2.60. For each port, select the option for **Mode** and **Max Dynamic Clients** under the **Port Mode Configuration** table. Table 2.48 describe the options under **IP Source Guard Configuration**.

Configuration

- System
- Ports
- ERPS
- DHCPv4
- Security
 - Switch
 - Network
 - Port Security
 - Configuration
 - MAC Addresses
 - NAS
 - ACL
 - Ports
 - Rate Limiters
 - Access Control List
 - IP Source Guard
 - Configuration
 - Static Table
 - ARP Inspection
- AAA
- Aggregation
- Spanning Tree
- IPMC
- LLDP
- SyncE
- MAC Table
- VLANs
- VCL
- QoS
- Mirroring
- PTP

IP Source Guard Configuration

Mode Disabled ▾

[Translate dynamic to static](#)

Port Mode Configuration

Port	Mode	Max Dynamic Clients
*	<> ▾	<> ▾
1	Disabled ▾	Unlimited ▾
2	Disabled ▾	Unlimited ▾
3	Disabled ▾	Unlimited ▾
4	Disabled ▾	Unlimited ▾
5	Disabled ▾	Unlimited ▾
6	Disabled ▾	Unlimited ▾
7	Disabled ▾	Unlimited ▾
8	Disabled ▾	Unlimited ▾
9	Disabled ▾	Unlimited ▾
10	Disabled ▾	Unlimited ▾
11	Disabled ▾	Unlimited ▾

[Save](#) [Reset](#)

Table 2.48 Descriptions of Network IP Source Guard Configuration:

Label	Description	Factory Default
IP Source Guard Configuration		
Mode	Enable the Global IP Source Guard or disable the Global IP Source Guard. All configured ACEs will be lost when the mode is enabled.	Disabled
Port Mode Configuration		
Mode	Specify IP Source Guard is enabled on which ports. Only when both Global Mode and Port Mode on a given port are enabled, IP Source Guard is enabled on this given port.	Disabled
Max Dynamic Clients	Specify the maximum number of dynamic clients that can be learned on given port. This value can be 0, 1, 2 or unlimited. If the port mode is enabled and the value of max dynamic client is equal to 0, it means only allow the IP packets forwarding that are matched in static entries on the specific port.	Unlimited

Click the **Save** buttons to save changes. Click **Reset** buttons to undo any changes made locally and revert to previously saved values. Click **Translate dynamic to static** button to translate all dynamic entries to static entries.

IP Source Guard Static Table

The user can configure static **IP Source Guard Static** rules in this webpage. The user can add a new entry to the **IP Source Guard table** as shown in Figure 2.61. The maximum number of rules is 112 on the switch. Table 2.49 summarizes the column labels for Static IP Source Guard Table.

Configuration

- System
- Ports
- ERPS
- DHCPv4
- Security
 - Switch
 - Network
 - Port Security
 - Configuration
 - MAC Addresses
 - NAS
 - ACL
 - Ports
 - Rate Limiters
 - Access Control List
 - IP Source Guard
 - Configuration
 - Static Table

Static IP Source Guard Table

Delete	Port	VLAN ID	IP Address	MAC address
--------	------	---------	------------	-------------

Add New Entry

Save

Reset

Table 2.49 Descriptions of Network IP Source Guard Static

Label	Description	Factory default	De- fault
Delete	Click entry Delete button to delete the entry. It will be deleted during the next save.		
Port	The logical port for the settings.	1	
VLAN ID	The VLAN Id for the entry.	Null	
IP Address	Allowed Source IP address.	Null	
MAC Address	Allowed Source MAC address.	Null	

Click **Add New Entry** button to add a new entry to the Static IP Source Guard table. Click **Save** button to save changes. Click **Reset** button to undo any changes made locally and revert to previously saved values.

ARP Inspection

ARP Inspection is a secure feature. Several types of attacks can be launched against a host or devices connected to Layer 2 networks by “poisoning” the ARP caches. For example, man-in-the-middle attack occurs when a malicious node intercepts packets intended for other nodes by poisoning the ARP caches of its unsuspecting neighbours. To create the attack, the malicious node sends ARP requests or responses mapping another node’s IP address to its own MAC address. This feature is used to block such attacks. Only valid ARP requests and responses can go through the switch device. Figure 2.62 shows the list of submenus under the **Security**→**Network**→**ARP Inspection**. It contains **Port Configuration**, **VLAN Configuration**, **Static Table** and **Dynamic Table**.

- ARP Inspection
 - Port Configuration
 - VLAN Configuration
 - Static Table
 - Dynamic Table

Port Configuration

To configure ARP Inspection for port(s) on the managed switch, the users can use the webpage shown in Figure 2.63. First, enable the **ARP Inspection** by selecting the **Mode** option. Then, configure the **Mode**, **Check VLAN** and **Log Type** for each port in the table below. Table 2.50 summarizes the descriptions of column labels of Port Mode Configuration.



Configuration

- System
- Ports
- ERPS
- DHCPv4
- Security
 - Switch
 - Network
 - Port Security
 - Configuration
 - MAC Addresses
 - NAS
 - ACL
 - Ports
 - Rate Limiters
 - Access Control List
 - IP Source Guard
 - Configuration
 - Static Table
 - ARP Inspection
 - Port Configuration
 - VLAN Configuration
 - Static Table
 - Dynamic Table
 - AAA
 - Aggregation
 - Spanning Tree
 - IPMC
 - LLDP
 - SyncE
 - MAC Table
 - VLANs

ARP Inspection Configuration

Mode

Port Mode Configuration

Port	Mode	Check VLAN	Log Type
*	<> ▼	<> ▼	<> ▼
1	Disabled ▼	Disabled ▼	None ▼
2	Disabled ▼	Disabled ▼	None ▼
3	Disabled ▼	Disabled ▼	None ▼
4	Disabled ▼	Disabled ▼	None ▼
5	Disabled ▼	Disabled ▼	None ▼
6	Disabled ▼	Disabled ▼	None ▼
7	Disabled ▼	Disabled ▼	None ▼
8	Disabled ▼	Disabled ▼	None ▼
9	Disabled ▼	Disabled ▼	None ▼
10	Disabled ▼	Disabled ▼	None ▼
11	Disabled ▼	Disabled ▼	None ▼

Table 2.50 Descriptions of ARP Inspection Port Configuration:

Label	Description	Factory Default
ARP Inspection Configuration		
Mode	Enable the Global ARP Inspection or disable the Global ARP Inspection.	Disabled
Port Mode Configuration		
Port	Port Number	-
Mode	Specify ARP Inspection is enabled on which ports. Only when both Global Mode and Port Mode on a given port are enabled, ARP Inspection is enabled on this given port. Possible modes are: Enabled: Enable ARP Inspection operation. Disabled: Disable ARP Inspection operation.	Disabled
Check VLAN	If you want to inspect the VLAN configuration, you have to enable the setting of "Check VLAN". The default setting of "Check VLAN" is disabled. When the setting of "Check VLAN" is disabled, the log type of ARP Inspection will refer to the port setting. And the setting of "Check VLAN" is enabled, the log type of ARP Inspection will refer to the VLAN setting. Possible setting of "Check VLAN" are: Enabled: Enable check VLAN operation. Disabled: Disable check VLAN operation.	Disabled
Log Type	Only the Global Mode and Port Mode on a given port are enabled, and the setting of "Check VLAN" is disabled, the log type of ARP Inspection will refer to the port setting. There are four log types and possible types are: None: Log nothing. Deny: Log denied entries. Permit: Log permitted entries. ALL: Log all entries.	None

Click **Save** button to save changes. Click **Reset** button to undo any changes made locally and revert to previously saved values. Click **Translate dynamic to static** button to translate all dynamic entries to static entries.

VLAN Configuration

Figure 2.64 illustrates the ARP Inspection VLAN Configuration webpage. Each page can show up to 9999 entries from the VLAN table, default being 20. The user can change the number of visible entries through the "entries per page" input field. When first visited, the web page will show the first 20 entries from the beginning of the VLAN Table. The first displayed will be the one with the lowest VLAN ID found in the VLAN Table. The "VLAN" input fields allow the user to select the starting point in the VLAN Table.

Clicking the refresh button will update the displayed table starting from that or the closest next VLAN Table match. The right arrow button will use the next entry of the currently displayed VLAN entry as a basis for the next lookup. When the end is reached the warning, message is shown in the displayed table. Use the left arrow button to start over. Table 2.51 summarizes the column labels of the ARP Inspection VLAN table.

Configuration

- System
- Ports
- ERPS
- DHCPv4
- Security
 - Switch
 - Network
 - Port Security
 - Configuration
 - MAC Addresses
 - NAS
 - ACL
 - Ports
 - Rate Limiters
 - Access Control List
 - IP Source Guard
 - Configuration
 - Static Table
 - ARP Inspection
 - Port Configuration
 - VLAN Configuration

VLAN Mode Configuration

Start from VLAN with entries per page.

Delete	VLAN ID	Log Type
--------	---------	----------

Table 2.51 Descriptions of ARP Inspection VLAN Table:

La- bel	Description	Fac- tory De- fault
Delete	Click entry Delete button to delete the entry.	-
VLAN ID	Specify ARP Inspection is enabled on which VLANs. First, you have to enable the port setting on Port mode configuration webpage (previous subsection). Only when both Global Mode and Port Mode on a given port are enabled, ARP Inspection is enabled on this given port. Second, you can specify which VLAN will be inspected on VLAN mode configuration web page.	-
Log Type	The log type also can be configured on per VLAN setting. Possible types are: None: Log nothing. Deny: Log denied entries. Permit: Log permitted entries. ALL: Log all entries.	None

Click **Add New Entry** button to add a new entry to the ARP Inspection VLAN Table. Click **Save** button to save changes. Click **Reset** button to undo any changes made locally and revert to previously saved values.

Static Table

To configure **Static ARP Inspection** for port(s) on the managed switch, the users can use the webpage shown in Figure 2.65. After click the **Add New Entry** button, select the **Port** number from the drop down. Then, enter the **VLAN ID**, **MAC Address** and **IP Address** for each port to have static ARP Inspection. Table 2.52 summarizes the descriptions of column labels of **Static ARP Inspection Table**.

Configuration

- System
- Ports
- ERPS
- DHCPv4
- Security
 - Switch
 - Network
 - Port Security
 - Configuration
 - MAC Addresses
 - NAS
 - ACL
 - Ports
 - Rate Limiters
 - Access Control List
 - IP Source Guard
 - Configuration
 - Static Table
 - ARP Inspection
 - Port Configuration
 - VLAN Configuration
 - Static Table

Static ARP Inspection Table

Delete	Port	VLAN ID	MAC Address	IP Address
--------	------	---------	-------------	------------

Add New Entry

Save Reset

Table 2.52 Descriptions of Static ARP Inspection Table:

Label	Description	Factory Default
Delete	Check to delete the entry. It will be deleted during the next save.	-
Port	The logical port for the settings.	1
VLAN ID	The VLAN ID for the settings.	Null
MAC Address	Allowed Source MAC address in ARP request packets.	Null
IP Address	Allowed Source IP address in ARP request packets.	Null

Click **Save** button to save changes. Click **Reset** button to undo any changes made locally and revert to previously saved values.

Dynamic Table

To configure **Dynamic ARP Inspection** for port(s) on the managed switch, the users can use the webpage shown in Figure 2.66. Entries in the **Dynamic ARP Inspection Table** are shown on this page. The **Dynamic ARP Inspection Table** contains up to 256 entries, and is sorted first by port, then by **VLAN ID**, then by **MAC address**, and then by **IP address**. All dynamic entries are learning from DHCP Snooping. Table 2.53 summarizes the descriptions of column labels of **Dynamic ARP Inspection Table**. Each webpage can show up to 99 entries from the Dynamic ARP Inspection table. The default maximum entries per page is 20. This can be selected through the “**entries per page**” input field. When first visited, the web page will show the first 20 entries from the beginning of the Dynamic ARP Inspection Table.

The “**Start from port address**”, “**VLAN**”, “**MAC address**” and “**IP address**” input fields allow the user to select the starting point in the Dynamic ARP Inspection Table. Clicking the **Refresh** button will update the displayed table starting from that or the closest next Dynamic ARP Inspection Table match. In addition, the two input fields will

- upon a **Refresh** button click - assume the value of the first displayed entry, allowing for continuous refresh with the same start address. The >> button will use the last entry of the currently displayed table as a basis for the next lookup. When the end is reached the text “**No more entries**” is shown in the displayed table. Use the << button to start over.

Managed Switch



Configuration
System
Ports
ERPS
DHCPv4
Security
Switch
Network
Port Security
Configuration
MAC Addresses
NAS
ACL
Ports
Rate Limiters
Access Control List
IP Source Guard
Configuration
Static Table
ARP Inspection
Port Configuration
VLAN Configuration
Static Table
Dynamic Table

Dynamic ARP Inspection Table
Start from , VLAN , MAC address and IP address with entries per page.

Port	VLAN ID	MAC Address	IP Address	Translate to static
No more entries				

Table 2.53 Descriptions of ARP Inspection Dynamic Table:

Label	Description	Factory Default
Port	Switch Port Number for which the entries are displayed.	Port1
VLAN ID	VLAN-ID in which the ARP traffic is permitted.	1
MAC Address	User MAC address of the entry.	00-00-00-00-00-00
IP Address	User IP address of the entry.	0.0.0.0
Translate to static	Select the checkbox to translate the entry to static entry.	-

Click **Save** button to save changes. Click **Reset** button to undo any changes made locally and revert to previously saved values.

2.5.3 AAA

The authentication, authorization, and accounting (AAA) features allows you to verify the identity of, grant access to, and track the actions of users managing RSAES switches. The RSAES switches support **Remote Access Dial-In User Service (RADIUS)** or **Terminal Access Controller Access Control System Plus (TACACS+)** protocols. Based on the user ID and password combination that users provide, the RSAES switches perform local authentication or authorization using the local database or remote authentication or authorization using one or more AAA servers. A preshared secret key provides security for communication between the switch and AAA servers. You can configure a common secret key for all AAA servers or for only a specific AAA server.

AAA security provides the following services:

- **Authentication**—Identifies users, including login and password dialog, challenge and response, messaging support, and encryption depending on the security protocol that you select. Authentication is the process of verifying the identity of the person or device accessing the RSAES switches. This process is based on the user ID and password combination provided by the entity trying to access the switch. The RSAES switches allow user to perform local authentication (using the local lookup database) or remote authentication (using one or more RADIUS or TACACS+ servers).
- **Authorization**—Provides access control. AAA authorization is the process of assembling a set of attributes that describe what the user is authorized to perform. Authorization in RSAES switches is provided by attributes that are downloaded from AAA servers. Remote security servers, such as RADIUS and TACACS+, authorize users for specific rights by associating attribute-value (AV) pairs, which define those rights with the appropriate user.

- **Accounting**—Provides the method for collecting information, logging the information locally, and sending the information to the AAA server for billing, auditing, and reporting. The accounting feature tracks and maintains a log of every management session used to access RSAES switches. You can use this information to generate reports for troubleshooting and auditing purposes. You can store accounting logs locally or send them to remote AAA servers.

AAA increases flexibility and control of access configuration, scalability, standardized authentication methods, such as RADIUS and TACACS+, and multiple backup devices.

RADIUS

RADIUS (Remote Authentication Dial in User Service) is an access server that uses authentication, authorization, and accounting (AAA) protocol for authentication and authorization. It is a distributed security system that secures remote access to networks and network services against unauthorized access. The RADIUS specification is described in [RFC 2865,] which obsoletes [RFC 2138.] Figure 2.67 shows the **RADIUS Server Configuration** webpage which allows the users to configure up to 5 RADIUS servers. It is divided into two parts: **Global Configuration** and **Server Configuration**. Table 2.54 summarizes the parameters for the **RADIUS Server Configuration**.



Configuration

- System
- Ports
- ERPS
- DHCPv4
- Security
 - Switch
 - Network
 - Port Security
 - Configuration
 - MAC Addresses
 - NAS
 - ACL
 - Ports
 - Rate Limiters
 - Access Control List
 - IP Source Guard
 - Configuration
 - Static Table
 - ARP Inspection
 - Port Configuration
 - VLAN Configuration
 - Static Table
 - Dynamic Table
- AAA
 - RADIUS

RADIUS Server Configuration

Global Configuration

Timeout	5	seconds
Retransmit	3	times
Deadtime	0	minutes
Change Secret Key	No ▼	
NAS-IP-Address		
NAS-IPv6-Address		
NAS-Identifier		

Server Configuration

Delete	Hostname	Auth Port	Acct Port	Timeout	Retransmit	Change Secret Key
Add New Server						
Save Reset						

Table 2.54 Descriptions of AAA RADIUS:

La- bel	Description	Fac- tory De- fault
Global Con- fig- ura- tion		
Time- out	Timeout is the number of seconds, in the range 1 to 1000, to wait for a reply from a RADIUS server before retransmitting the request.	5
Re- trans- mit	Retransmit is the number of times, in the range 1 to 1000, a RADIUS request is retransmitted to a server that is not responding. If the server has not responded after the last retransmit it is considered to be dead.	3
Dead- time	Deadtime, which can be set to a number between 0 to 1440 minutes, is the period during which the switch will not send new requests to a server that has failed to respond to a previous request. This will stop the switch from continually trying to contact a server that it has already determined as dead. Setting the Deadtime to a value greater than 0 (zero) will enable this feature, but only if more than one server has been configured.	0
Change Se- cret Key	Specify to change the secret key or not. When "Yes" is selected for the option, you can change the secret key - up to 63 characters long - shared between the RADIUS server and the switch.	No
NAS- IP- Address	The IPv4 address to be used as attribute 4 in RADIUS Access-Request packets. If this field is left blank, the IP address of the outgoing interface is used.	Null
NAS- IPv6- Address	The IPv6 address to be used as attribute 95 in RADIUS Access-Request packets. If this field is left blank, the IP address of the outgoing interface is used.	Null
NAS- Identifier	The identifier - up to 253 characters long - to be used as attribute 32 in RADIUS Access-Request packets. If this field is left blank, the NAS-Identifier is not included in the packet.	Null
Server Con- fig- ura- tion		
Delete	To delete a RADIUS server entry, check this box. The entry will be deleted during the next Save.	
Host- name	The IPv4/IPv6 address or hostname of the RADIUS server.	Null
Auth Port	The UDP port to use on the RADIUS server for authentication. Set to 0 to disable authentication.	1812
Acct Port	The UDP port to use on the RADIUS server for accounting. Set to 0 to disable authentication.	1813
Time- out	This optional setting overrides the global timeout value. Leaving it blank will use the global time-out value.	Null
Re- trans- mit	This optional setting overrides the global retransmit value. Leaving it blank will use the global retransmit value.	Null
Change Se- cret Key	Specify to change the secret key or not. When the checkbox is checked, you can change the setting overrides the global key. Leaving it blank will use the global key.	Null

After clicking on the **Add New Server** button to add a new RADIUS server, an empty row is added to the table, and the RADIUS server can be configured as needed. Up to 5 servers are supported. The **Delete** button can be used to undo the addition of the new server. Click **Save** button to save changes. Click **Reset** button to undo any changes made locally and revert to previously saved values.

TACACS+

TACACS+ is an acronym for Terminal Access Controller Access Control System Plus. It is a networking protocol which provides access control for routers, network access servers and other networked computing devices via one or more centralized servers. TACACS+ provides separate authentication, authorization and accounting services.

TACACS+ (Terminal Access Controller Access-Control System Plus) is a **remote authentication protocol**, which allows a remote access server to communicate with an authentication server to validate user access onto the network. TACACS+ allows a client to accept a username and password, and pass a query to a TACACS+ authentication server. Table 2.55 compares the differences between the RADIUS and TACACS+.

Table 2.55 Comparison of Authentication Server Settings between RADIUS and TACACS+:

	RADIUS	TACACS+
Transport Protocol	UDP	TCP
Authentication and Authorization	Separates AAA	Combines authentication and authorization
Multiprotocol Support	No	Yes, support AppleTalk Remote Access (ARA) and Net-BIOS protocol
Confidentiality	Only password is encrypted	Entire packet is encrypted

Figure 2.68 shows the TACACS+ Server Configuration webpage. It consists of Global Configuration and Server Configuration parts. Table 2.56 summarizes descriptions of parameters for setting up the TACACS+ Server.

Configuration

- System
- Ports
- ERPS
- DHCPv4
- Security
 - Switch
 - Network
 - Port Security
 - Configuration
 - MAC Addresses
 - NAS
 - ACL
 - Ports
 - Rate Limiters
 - Access Control List
 - IP Source Guard
 - Configuration
 - Static Table
 - ARP Inspection
 - Port Configuration
 - VLAN Configuration
 - Static Table
 - Dynamic Table
 - AAA
 - RADIUS
 - TACACS+

TACACS+ Server Configuration

Global Configuration

Timeout	5	seconds
Deadtime	0	minutes
Change Secret Key	No	▼

Server Configuration

Delete	Hostname	Port	Timeout	Change Secret Key
--------	----------	------	---------	-------------------

Add New Server

Save

Reset

Table 2.56 Descriptions of AAA RADIUS:

La- bel	Description	Fac- tory De- fault
Global Con- fig- ura- tion		
Time- out	Timeout is the number of seconds, in the range 1 to 1000, to wait for a reply from a TACACS+ server before it is considered to be dead.	5
Dead- time	Deadtime, which can be set to a number between 0 to 1440 minutes, is the period during which the switch will not send new requests to a server that has failed to respond to a previous request. This will stop the switch from continually trying to contact a server that it has already determined as dead. Setting the Deadtime to a value greater than 0 (zero) will enable this feature, but only if more than one server has been configured.	0
Change Se- cret Key	Specify to change the secret key or not. When “Yes” is selected for the option, you can change the secret key - up to 63 characters long - shared between the TACACS+ server and the switch.	No
Server Con- fig- ura- tion		
Delete	To delete a TACACS+ server entry, check this box. The entry will be deleted during the next Save.	
Host- name	The IPv4/IPv6 address or hostname of the TACACS+ server.	Null
Port	The TCP port to use on the TACACS+ server for authentication.	49
Time- out	This optional setting overrides the global timeout value. Leaving it blank will use the global time-out value.	Null
Change Se- cret Key	Specify to change the secret key or not. When the checkbox is checked, you can change the setting overrides the global key. Leaving it blank will use the global key.	Null

After clicking on the **Add New Server** button to add a new TACACS+ server, an empty row is added to the table, and the TACACS+ server can be configured as needed. Up to 5 servers are supported. The **Delete** button can be used to undo the addition of the new server. Click **Save** button to save changes. Click **Reset** button to undo any changes made locally and revert to previously saved values.

2.6 Aggregation

Aggregation is a technique to use multiple ports in parallel to increase the link speed beyond the limits of a port and to increase the redundancy for higher availability. Welotec's RSAES allows the aggregation on its ports. Figure 2.69 lists the submenus under the **Configuration** → **Aggregation**.

Aggregation
Common
Groups
LACP

2.6.1 Common

The webpage in Figure 2.70 is used to configure the Aggregation hash mode. The configured mode is applied to the whole network elements. Four contributors can be selected and used to create the hash code which are Source MAC Address, Destination MAC Address, IP Address, and TCP/UDP Port Number. Table 2.57 summarizes the descriptions of hash code contributors under the Common Aggregation Configuration.



Configuration

- System
- Ports
- ERPS
- DHCPv4
- Security
 - Switch
 - Network
 - Port Security
 - Configuration
 - MAC Addresses
- NAS
- ACL
 - Ports
 - Rate Limiters
 - Access Control List
- IP Source Guard
 - Configuration
 - Static Table
- ARP Inspection
 - Port Configuration
 - VLAN Configuration
 - Static Table
 - Dynamic Table
- AAA
 - RADIUS
 - TACACS+
- Aggregation
 - Common

Common Aggregation Configuration

Hash Code Contributors	
Source MAC Address	<input checked="" type="checkbox"/>
Destination MAC Address	<input type="checkbox"/>
IP Address	<input checked="" type="checkbox"/>
TCP/UDP Port Number	<input checked="" type="checkbox"/>

Table 2.57 Descriptions of Common Aggregation Configuration:

Label	Description	Factory Default
Hash Code Contributors		
Source MAC Address	The Source MAC address can be used to calculate the destination port for the frame. Check to enable the use of the Source MAC address, or uncheck to disable. By default, Source MAC Address is enabled.	Checked
Destination MAC Address	The Destination MAC Address can be used to calculate the destination port for the frame. Check to enable the use of the Destination MAC Address, or uncheck to disable. By default, Destination MAC Address is disabled.	Unchecked
IP Address	The IP address can be used to calculate the destination port for the frame. Check to enable the use of the IP Address, or uncheck to disable. By default, IP Address is enabled.	Checked
TCP/UDP Port Number	The TCP/UDP port number can be used to calculate the destination port for the frame. Check to enable the use of the TCP/UDP Port Number, or uncheck to disable. By default, TCP/UDP Port Number is enabled.	Checked

Click **Save** button to save changes. Click **Reset** button to undo any changes made locally and revert to previously saved values.

2.6.2 Groups

This webpage allows the user to aggregate different port(s) to an aggregation group. The **Aggregation Group Configuration** is shown in Figure 2.71. After selecting which port number(s) belong to which aggregation group ID, the user can choose the mode of aggregation group from **Disabled**, **Static**, **LACP (Active)**, **LACP (Passive)**. Table 2.58 summarizes the descriptions of **Aggregation Group Configuration**.

Configuration

- System
- Ports
- ERPS
- DHCPv4
- Security
- Switch
- Network
 - Port Security
 - Configuration
 - MAC Addresses
- NAS
- ACL
 - Ports
 - Rate Limiters
 - Access Control List
- IP Source Guard
 - Configuration
 - Static Table
- ARP Inspection
 - Port Configuration
 - VLAN Configuration
 - Static Table
 - Dynamic Table
- AAA
 - RADIUS
 - TACACS+
- Aggregation
 - Common
 - Groups

Aggregation Group Configuration

Group ID	Port Members											Group Configuration	
	1	2	3	4	5	6	7	8	9	10	11	Mode	
Normal	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>		
1	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	Disabled	▼
2	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	Disabled	▼
3	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	Disabled	▼
4	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	Disabled	▼
5	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	Disabled	▼

Save Reset

Table 2.58 Descriptions of Aggregation Group Configuration:

La- bel	Description	Fac- tory De- fault
Group ID	Indicates the aggregation group ID for the settings contained in the same row. Group ID “Normal” indicates there is no aggregation. Only one group ID is valid per port.	-
Port Mem- bers	Each switch port is listed for each group ID. Select a radio button to include a port in an aggregation, or clear the radio button to remove the port from the aggregation. By default, no ports belong to any aggregation group. Only full duplex ports can join an aggregation and ports must be in the same speed in each group.	Unclicked
Mode	This parameter determines the mode for the aggregation group. Disabled: The group is disabled. Static: The group operates in static aggregation mode. LACP (Active): The group operates in LACP active aggregation mode. See IEEE 801.AX-2014, Section 6.4.1 for details. LACP (Passive): The group operates in LACP passive aggregation mode. See IEEE 801.AX-2014, Section 6.4.1 for details.	Dis- abled

Click **Save** button to save changes. Click **Reset** button to undo any changes made locally and revert to previously saved values.

2.6.3 LACP

The users have an option to enable **Link Aggregation Control Protocol (LACP)** which is an IEEE standard (IEEE 802.3ad, IEEE 802.1AX-2008) by selecting on LACP aggregation mode in previous subsection. LACP allows the managed switch to negotiate an automatic bundling of links by sending LACP packets to the LACP partner or another device that is directly connected to the managed switch and also implements LACP. The LACP packets will be sent within a multicast group MAC address. If LACP finds a device on the other end of the link that also has LACP enabled, it will also independently send packets along the same links enabling the two units to detect multiple links between themselves and then combine them into a single logical link. During the detection period LACP packets are transmitted every second. Subsequently, keep alive mechanism for link membership will be sent periodically. Each port in the group can also operate in either LACP active or LACP passive modes. The LACP active mode means that the port will enable LACP unconditionally, while LACP passive mode means that the port will enable LACP only when an LACP partner is detected. Note that in active mode LACP port will always send LACP packets along the configured links. In passive mode however, LACP port acts as “speak when spoken to”, and therefore can be used as a way of controlling accidental loops (as long as the other device is in active mode).

Figure 2.72 shows the LACP System Configuration webpage. It allows the user to configure the System Priority and LACP System Configuration. Table 2.59 summarizes the descriptions of LACP Aggregation Configuration.



Configuration

- System
- Ports
- ERPS
- DHCPv4
- Security
- Switch
- Network
 - Port Security
 - Configuration
 - MAC Addresses
 - NAS
 - ACL
 - Ports
 - Rate Limiters
 - Access Control List
 - IP Source Guard
 - Configuration
 - Static Table
 - ARP Inspection
 - Port Configuration
 - VLAN Configuration
 - Static Table
 - Dynamic Table
- AAA
 - RADIUS
 - TACACS+
- Aggregation
 - Common
 - Groups
 - LACP

LACP System Configuration

System Priority	32768
-----------------	-------

LACP Port Configuration

Port	LACP	Timeout
*		<> ▼
1	No	Fast ▼
2	No	Fast ▼
3	No	Fast ▼
4	No	Fast ▼
5	No	Fast ▼
6	No	Fast ▼
7	No	Fast ▼
8	No	Fast ▼
9	No	Fast ▼
10	No	Fast ▼
11	No	Fast ▼

Save	Reset
------	-------

Table 2.59 Descriptions of LACP Aggregation Configuration:

La- bel	Description	Factory Default
Port	The switch port number.	-
LACP	Show whether LACP is currently enabled on this switch port.	No
Time- out	The Timeout controls the period between BPDU transmissions. Fast will transmit LACP packets each second, while Slow will wait for 30 seconds before sending a LACP packet.	Fast

Click **Save** button to save changes. Click **Reset** button to undo any changes made locally and revert to previously saved values.

2.7 Spanning Tree

IEEE 802.1D Standard spanning tree functionality is supported by Welotec's RSAES managed switches.

Spanning Tree Protocol (STP) provides a function to prevent switching loops and broadcast radiation at the OSI layer 2. A switching loop occurs in a network when there are multiple connections or redundant paths between two network switches or at least two ports are connected on both sides of the two network switches. The switching loop can create a broadcast radiation, which is the accumulation of broadcast and multicast traffics in a computer network. As broadcast and multicast messages are forwarded by bridges/switches to every port, the bridges/switches will repeatedly rebroadcast the broadcast messages, and this accumulation of traffic can flood the network. STP creates a spanning tree topology and disables those links of the network that are not part of the spanning tree, which leaves only a single active path between two nodes. This function can avoid flooding and increase network efficiency. Therefore, Welotec's managed switches deploy spanning tree as a tool when the users set up connection or port redundancy or fault-tolerance in their network.

RSTP (Rapid Spanning Tree Protocol), IEEE 802.1W, is also supported in Welotec's managed switches. It is an evolution of the STP, but it is still backwards compatible with standard STP. RSTP has the advantage over the STP. When there is a topology change such as link failure in the network, the RSTP will converge significantly faster to a new spanning tree topology. RSTP improves convergence on point-to-point links by reducing the Max-Age time to 3 times Hello interval, removing the STP listening state, and exchanging a handshake between two switches to quickly transition the port to forwarding state.

MSTP (Multiple Spanning Tree Protocol) is also a standard defined by the IEEE 802.1s that allows multiple VLANs to be mapped to a single spanning tree instance called MST Instance, which will provide multiple pathways across the network. It is compatible with STP and RSTP. To support larger network, MSTP groups bridges/switches into regions that appear as a single bridge to other devices. Within each region, there can be multiple MST instances. MSTP shares common parameters as RSTP such as port path costs. MSTP also help prevent switching loop and has rapid convergence when there is a topology change. It is possible to have different forwarding paths for different MST instances. This enables load balancing of network traffic across redundant links.

The following subsections describe how to setup the **spanning tree protocol (STP)**, **rapid spanning tree protocol (RSTP)**, and **Multiple Spanning Tree Protocol (MSTP)**. The **Spanning Tree** menu consists of **Bridge Settings**, **MSTI Mapping**, **MSTI Priorities**, **CIST Ports**, and **MSTI Ports**.

2.7.1 Bridge Settings

To select a variant of Spanning Tree Protocol, the user can select the Protocol Version and set related parameters for that particular protocol version in this STP Bridge Configuration webpage as shown in Figure 2.73. The settings are grouped into Basic Settings and Advanced Settings. These settings are used by all STP Bridge instances in the managed switch. Table 2.60 summarizes the description of each parameter under the STP Bridge Configuration webpage.

Configuration

- System
- Ports
- ERPS
- DHCPv4
- Security
 - Switch
 - Network
 - Port Security
 - Configuration
 - MAC Addresses
 - NAS
 - ACL
 - Ports
 - Rate Limiters
 - Access Control List
 - IP Source Guard
 - Configuration
 - Static Table
 - ARP Inspection
 - Port Configuration
 - VLAN Configuration
 - Static Table
 - Dynamic Table
- AAA
 - RADIUS
 - TACACS+
- Aggregation
 - Common
 - Groups
 - LACP
- Spanning Tree
 - Bridge Settings

STP Bridge Configuration

Basic Settings

Protocol Version	MSTP ▼
Bridge Priority	32768 ▼
Hello Time	2
Forward Delay	15
Max Age	20
Maximum Hop Count	20
Transmit Hold Count	6

Advanced Settings

Edge Port BPDU Filtering	<input type="checkbox"/>
Edge Port BPDU Guard	<input type="checkbox"/>
Port Error Recovery	<input type="checkbox"/>
Port Error Recovery Timeout	

Table 2.60 Descriptions of Bridge Settings Configuration of Spanning Tree:

Label	Description	Factory Default
Basic Settings		
Protocol Version	The MSTP / RSTP / STP protocol version setting.	MSTP
Bridge Priority	Controls the bridge priority. Lower numeric values have better priority. The bridge priority plus the MSTI instance number, concatenated with the 6-byte MAC address of the switch forms a Bridge Identifier. For MSTP operation, this is the priority of the CIST. Otherwise, this is the priority of the STP/RSTP bridge.	32768
Hello Time	The interval between sending STP BPDU's. Valid values are in the range 1 to 10 seconds, default is 2 seconds. Note: Changing this parameter from the default value is not recommended, and may have adverse effects on your network.	2
Forward Delay	The delay used by STP Bridges to transit Root and Designated Ports to Forwarding (used in STP compatible mode). Valid values are in the range 4 to 30 seconds.	15
Max Age	The maximum age of the information transmitted by the Bridge when it is the Root Bridge. Valid values are in the range 6 to 40 seconds, and MaxAge must be $\leq (\text{FwdDelay}-1)*2$.	20
Maximum Hop Count	This defines the initial value of remaining Hops for MSTI information generated at the boundary of an MSTI region. It defines how many bridges a root bridge can distribute its BPDU information to. Valid values are in the range 6 to 40 hops.	20
Transmit Hold Count	The number of BPDU's a bridge port can send per second. When exceeded, transmission of the next BPDU will be delayed. Valid values are in the range 1 to 10 BPDU's per second.	6
Advanced Settings		
Edge Port BPDU Filtering	Control whether a port explicitly configured as Edge will transmit and receive BPDUs.	Unclicked
Edge Port BPDU Guard	Control whether a port explicitly configured as Edge will disable itself upon reception of a BPDU. The port will enter the error-disabled state, and will be removed from the active topology.	Unclicked
Port Error Recovery	Control whether a port in the error-disabled state automatically will be enabled after a certain time. If recovery is not enabled, ports have to be disabled and re-enabled for normal STP operation. The condition is also cleared by a system reboot.	Unclicked
Port Error Recovery Timeout	The time to pass before a port in the error-disabled state can be enabled. Valid values are between 30 and 86400 seconds (24 hours).	Null

Click **Save** button to save changes. Click **Reset** button to undo any changes made locally and revert to previously

saved values.

2.7.2 MSTI Mapping

MSTI Mapping webpage is shown in Figure 2.74. This page allows the user to inspect and/or change the current STP MSTI bridge VLAN Mapping configurations. The **MSTI Configuration** consists of **Configuration Identification** part and **MSTI Mapping** part. Table 2.61 summarizes the description of parameters under MSTI Configuration.



Configuration

- System
- Ports
- ERPS
- DHCPv4
- Security
 - Switch
 - Network
 - Port Security
 - Configuration
 - MAC Addresses
- NAS
- ACL
 - Ports
 - Rate Limiters
 - Access Control List
- IP Source Guard
 - Configuration
 - Static Table
- ARP Inspection
 - Port Configuration
 - VLAN Configuration
 - Static Table
 - Dynamic Table
- AAA
 - RADIUS
 - TACACS+
- Aggregation
 - Common
 - Groups
 - LACP
- Spanning Tree
 - Bridge Settings
 - MSTI Mapping
 - MSTI Priorities
 - CIST Ports
 - MSTI Ports

MSTI Configuration

Add VLANs separated by spaces or comma.

Unmapped VLANs are mapped to the CIST. (The default bridge instance).

Configuration Identification

Configuration Name	78-70-52-00-00-79
Configuration Revision	0

MSTI Mapping

MSTI	VLANs Mapped
MSTI1	
MSTI2	
MSTI3	
MSTI4	
MSTI5	
MSTI6	
MSTI7	

Save Reset

Table 2.61 Descriptions of Bridge Priorities Configuration of Spanning Tree:

Label	Description	Factory Default
Configuration Identification		
Configuration Name	The MSTP / RSTP / STP protocol version setting.	MSTP
Bridge Priority	The name identifying the VLAN to MSTI mapping. Bridges must share the name and revision (see below), as well as the VLAN-to MSTI mapping configuration in order to share spanning trees for MSTI's (Intra-region). The name is at most 32 characters.	DUT's MAC address
Configuration Revision	The revision of the MSTI configuration named above. This must be an integer between 0 and 65535.	0
MSTI Mapping		
MSTI	The bridge instances. The CIST is not available for explicit mapping, as it will receive the VLANs not explicitly mapped.	
VLANs Mapped	The list of VLANs mapped to the MSTI. The VLANs can be given as a single (xx, xx being between 1 and 4094) VLAN, or a range (xx-yy), each of which must be separated with comma and/or space. A VLAN can only be mapped to one MSTI. An unused MSTI should just be left empty. (I.e., not having any VLANs mapped to it.) Example: 2, 5, 20-40.	Null

Click **Save** button to save changes. Click **Reset** button to undo any changes made locally and revert to previously saved values.

2.7.3 MSTI Priorities

MSTI Priorities webpage is shown in Figure 2.75. This page allows the user to inspect and/or change the current STP MSTI bridge instance priority configurations. Table 2.62 summarizes the description of parameters under MSTI Configuration.

Configuration

- System
- Ports
- ERPS
- DHCPv4
- Security
 - Switch
 - Network
 - Port Security
 - Configuration
 - MAC Addresses
- NAS
- ACL
 - Ports
 - Rate Limiters
 - Access Control List
- IP Source Guard
 - Configuration
 - Static Table
- ARP Inspection
 - Port Configuration
 - VLAN Configuration
 - Static Table
 - Dynamic Table
- AAA
 - RADIUS
 - TACACS+
- Aggregation
 - Common
 - Groups
 - LACP
- Spanning Tree
 - Bridge Settings
 - MSTI Mapping
 - MSTI Priorities

MSTI Configuration

MSTI Priority Configuration

MSTI	Priority
*	<> ▼
CIST	32768 ▼
MSTI1	32768 ▼
MSTI2	32768 ▼
MSTI3	32768 ▼
MSTI4	32768 ▼
MSTI5	32768 ▼
MSTI6	32768 ▼
MSTI7	32768 ▼

Save
Reset

Table 2.62 Descriptions of Bridge MSTI Priorities Configuration of Spanning Tree:


La- bel	Description	Fac- tory De- fault
MSTI	The bridge instances. The CIST is the default instance, which is always active.	-
Pri- or- ity	Controls the bridge priority. Lower numeric values have better priority. The bridge priority plus the MSTI instance number, concatenated with the 6-byte MAC address of the switch forms a Bridge Identifier	32768

Click **Save** button to save changes. Click **Reset** button to undo any changes made locally and revert to previously saved values.

2.7.4 CIST Ports

The **CIST Ports** webpage in Figure 2.76 allows the user to inspect and change the current STP CIST port configurations. This page contains settings for physical and aggregated ports. There are two tables: **CIST Aggregated Port Configuration** and **CIST Normal Port Configuration**. Table 2.63 provides the descriptions of all column labels of the two tables under the STP CIST Port Configuration.

Managed Switch



Configuration

- System
- Ports
- ERPS
- DHCPv4
- Security
- Switch
- Network
- Port Security
- Configuration
- MAC Addresses
- NAS
- ACL
- Ports
- Rate Limiters
- Access Control List
- IP Source Guard
- Configuration
- Static Table
- ARP Inspection
- Port Configuration
- VLAN Configuration
- Static Table
- Dynamic Table
- AAA
- RADIUS
- TACACS+
- Aggregation
- Common
- Groups
- LACP
- Spanning Tree
- Bridge Settings
- MSTI Mapping
- MSTI Priorities
- CIST Ports
- MSTI Ports

STP CIST Port Configuration

CIST Aggregated Port Configuration

Port	STP Enabled	Path Cost	Priority	Admin Edge	Auto Edge	Restricted Role	TCN	BPDU Guard	Point-to-point
-	<input type="checkbox"/>	Auto	128	Non-Edge	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Forced True

CIST Normal Port Configuration

Port	STP Enabled	Path Cost	Priority	Admin Edge	Auto Edge	Restricted Role	TCN	BPDU Guard	Point-to-point
*	<input type="checkbox"/>	<>	<>	<>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<>
1	<input type="checkbox"/>	Auto	128	Non-Edge	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Auto
2	<input type="checkbox"/>	Auto	128	Non-Edge	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Auto
3	<input type="checkbox"/>	Auto	128	Non-Edge	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Auto
4	<input type="checkbox"/>	Auto	128	Non-Edge	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Auto
5	<input type="checkbox"/>	Auto	128	Non-Edge	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Auto
6	<input type="checkbox"/>	Auto	128	Non-Edge	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Auto
7	<input type="checkbox"/>	Auto	128	Non-Edge	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Auto
8	<input type="checkbox"/>	Auto	128	Non-Edge	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Auto
9	<input type="checkbox"/>	Auto	128	Non-Edge	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Auto
10	<input type="checkbox"/>	Auto	128	Non-Edge	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Auto
11	<input type="checkbox"/>	Auto	128	Non-Edge	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Auto

Table 2.63 Descriptions of CIST Ports Configuration of Spanning Tree:

La- bel		Description	Fac- tory De- fault
CIST Ag- gre- gated Port Con- fig- ura- tion			
Port		The switch port number of the logical STP port.	-
STP En- abled		Controls whether STP is enabled on this switch port.	Checked
Path Cost		Controls the path cost incurred by the port. The Auto setting will set the path cost as appropriate by the physical link speed, using the 802.1D recommended values. Using the Specific setting, a user-defined value can be entered. The path cost is used when establishing the active topology of the network. Lower path cost ports are chosen as forwarding ports in favour of higher path cost ports. Valid values are in the range 1 to 200000000.	Auto
Pri- ority		Controls the port priority. This can be used to control priority of ports having identical port cost. (See above). Lower priority is better.	128
Ad- min Edge		Admin Edge or State Flag. Operational flag describing whether the port is connecting directly to edge devices. (No Bridges attached). Transition to the forwarding state is faster for edge ports (having operEdge true) than for other ports. The value of this flag is based on AdminEdge and AutoEdge fields. This flag is displayed as Edge in Monitor > Spanning Tree > STP Detailed Bridge Status.	Non- Edge
Auto Edge		Controls whether the bridge should enable automatic edge detection on the bridge port. This allows operEdge to be derived from whether BPDU's are received on the port or not.	Checked
Re- stricted	Role	If enabled, causes the port not to be selected as Root Port for the CIST or any MSTI, even if it has the best spanning tree priority vector. Such a port will be selected as an Alternate Port after the Root Port has been selected. If set, it can cause lack of spanning tree connectivity. It can be set by a network administrator to prevent bridges external to a core region of the network influence the spanning tree active topology, possibly because those bridges are not under the full control of the administrator. This feature is also known as Root Guard.	Unchecked
	TCN	If enabled, causes the port not to propagate received topology change notifications and topology changes to other ports. If set it can cause temporary loss of connectivity after changes in a spanning tree's active topology as a result of persistently incorrect learned station location information. It is set by a network administrator to prevent bridges external to a core region of the network, causing address flushing in that region, possibly because those bridges are not under the full control of the administrator or the physical link state of the attached LANs transits frequently.	Unchecked
BPDU Guard		If enabled, causes the port to disable itself upon receiving valid BPDU's. Contrary to the similar bridge setting, the port Edge status does not affect this setting. A port entering error-disabled state due to this setting is subject to the bridge Port Error Recovery setting as well.	Unchecked
Point- to- point		Controls whether the port connects to a point-to-point LAN rather than to a shared medium. This can be automatically determined, or forced either true or false. Transition to the forwarding state is faster for point-to-point LANs than for shared media.	Force True
CIST Normal Port		www.welotec.com info@welotec.com +49 2554 9130 00	Page 105

Click **Save** button to save changes. Click **Reset** button to undo any changes made locally and revert to previously saved values.

2.7.5 MSTI Ports

The MSTI Ports webpage as shown in Figure 2.77 allows the user to inspect and/or change the current STP MSTI port configurations. An MSTI port is a virtual port, which is instantiated separately for each active CIST (physical) port for each MSTI instance configured on and applicable to the port. The MSTI instance must be selected before displaying actual MSTI port configuration options. After selecting a desired MSTI and clicking on the **Get** button, the webpage is updated as shown in Figure 2.78. The updated page contains MSTI port settings for physical and aggregated ports. Table 2.64 summarizes the descriptions of MSTI Port Configuration.



Configuration

- System
- Ports
- ERPS
- DHCPv4
- Security
 - Switch
 - Network
 - Port Security
 - Configuration
 - MAC Addresses
 - NAS
 - ACL
 - Ports
 - Rate Limiters
 - Access Control List
 - IP Source Guard
 - Configuration
 - Static Table
 - ARP Inspection
 - Port Configuration
 - VLAN Configuration
 - Static Table
 - Dynamic Table
 - AAA
 - RADIUS
 - TACACS+
- Aggregation
 - Common
 - Groups
 - LACP
- Spanning Tree
 - Bridge Settings
 - MSTI Mapping
 - MSTI Priorities
 - CIST Ports
 - MSTI Ports

MSTI Port Configuration

Select MSTI

MST1 ▼

Get

Configuration

- System
- Ports
- ERPS
- DHCPv4
- Security
- Switch
 - Users
 - Privilege Levels
 - Auth Method
 - SSH
 - HTTPS
 - SNMP
 - RMON
 - Statistics
 - History
 - Alarm
 - Event
- Network
 - Port Security
 - NAS
 - ACL
 - IP Source Guard
 - ARP Inspection
- AAA
 - RADIUS
 - TACACS+
- Aggregation
- Spanning Tree
 - Bridge Settings
 - MSTI Mapping
 - MSTI Priorities
 - CIST Ports
 - MSTI Ports
- IPMC
- LLDP
- SyncE
- MAC Table
- VLANs
- VCL
- QoS
- Mirroring
- PTP
- GVRP
- DDMI
- UDLD
- SD Backup
- Modbus Setting

Monitor

Diagnostics

Maintenance

MST1 MSTI Port Configuration

MSTI Aggregated Ports Configuration

Port	Path Cost	Priority
-	Auto	128

MSTI Normal Ports Configuration

Port	Path Cost	Priority
*	<>	<>
1	Auto	128
2	Auto	128
3	Auto	128
4	Auto	128
5	Auto	128
6	Auto	128
7	Auto	128
8	Auto	128
9	Auto	128
10	Auto	128
11	Auto	128

Table 2.64 Descriptions of MSTI Configuration of Spanning Tree:

La- bel	Description	Fac- tory De- fault
Port	The switch port number of the corresponding STP CIST (and MSTI) port.	MSTI
Path Cost	Controls the path cost incurred by the port. The Auto setting will set the path cost as appropriate by the physical link speed, using the 802.1D recommended values. Using the Specific setting, a user defined value can be entered. The path cost is used when establishing the active topology of the network. Lower path cost ports are chosen as forwarding ports in favour of higher path cost ports. Valid values are in the range 1 to 200000000.	Auto
Pri- or- ity	Controls the port priority. This can be used to control priority of ports having identical port cost. Lower priority is better.	128

Click **Save** button to save changes. Click **Reset** button to undo any changes made locally and revert to previously saved values.

2.8 IPMC

IP MultiCast (IPMC) menu can be configured using the submenus as shown in Figure 2.79. The IGMP Snooping is used for IPv4, while the MLD Snooping is used for IPv6.



Configuration

- System
- Ports
- ERPS
- DHCPv4
- Security
- Aggregation
- Spanning Tree
- IPMC
 - IGMP Snooping
 - Basic Configuration
 - VLAN Configuration
 - MLD Snooping
 - Basic Configuration
 - VLAN Configuration

2.8.1 IGMP Snooping

IGMP is an acronym for Internet Group Management Protocol. It is a communications protocol used to manage the membership of Internet Protocol multicast groups. IGMP is used by IP hosts and adjacent multicast routers to establish multicast group memberships. It is an integral part of the IP multicast specification, like ICMP for unicast connections. IGMP can be used for online video and gaming, and allows more efficient use of resources when supporting these uses.

Basic Configuration

IGMP Snooping Basic Configuration webpage provides IGMP Snooping related configuration as shown in Figure 2.80. The page consists of **Global Configuration** and **Port Related Configuration**. Table 2.65 summarizes the descriptions of IGMP Snooping Configuration.



Configuration

- System
- Ports
- ERPS
- DHCPv4
- Security
- Aggregation
- Spanning Tree
- IPMC
 - IGMP Snooping
 - Basic Configuration
 - VLAN Configuration
 - MLD Snooping
 - Basic Configuration
 - VLAN Configuration
- LLDP
- SyncE
- MAC Table
- VLANs
- VCL
- QoS
- Mirroring
- PTP
- GVRP
- DDMI
- UDLD
- SD Backup
- Modbus Setting

Monitor

Diagnostics

Maintenance

IGMP Snooping Configuration

Global Configuration	
Snooping Enabled	<input checked="" type="checkbox"/>
Unregistered IPMCv4 Flooding Enabled	<input checked="" type="checkbox"/>
IGMP SSM Range	232.0.0.0 / 8
Leave Proxy Enabled	<input type="checkbox"/>
Proxy Enabled	<input type="checkbox"/>

Port Related Configuration

Port	Router Port	Fast Leave	Throttling
*	<input type="checkbox"/>	<input type="checkbox"/>	<> ▼
1	<input type="checkbox"/>	<input type="checkbox"/>	unlimited ▼
2	<input type="checkbox"/>	<input type="checkbox"/>	unlimited ▼
3	<input type="checkbox"/>	<input type="checkbox"/>	unlimited ▼
4	<input type="checkbox"/>	<input type="checkbox"/>	unlimited ▼
5	<input type="checkbox"/>	<input type="checkbox"/>	unlimited ▼
6	<input type="checkbox"/>	<input type="checkbox"/>	unlimited ▼
7	<input type="checkbox"/>	<input type="checkbox"/>	unlimited ▼
8	<input type="checkbox"/>	<input type="checkbox"/>	unlimited ▼
9	<input type="checkbox"/>	<input type="checkbox"/>	unlimited ▼
10	<input type="checkbox"/>	<input type="checkbox"/>	unlimited ▼
11	<input type="checkbox"/>	<input type="checkbox"/>	unlimited ▼

Save Reset

Table 2.65 Descriptions of IGMP Snooping of an IPMC Profile:

Label	Description	Factory Default
IGMP Snooping Configuration		
Snooping Enabled	Enable the Global IGMP Snooping.	Clicked
Unregistered IPMCv4 Flooding Enabled	Enable unregistered IPMCv4 traffic flooding. The flooding control takes effect only when IGMP Snooping is enabled. When IGMP Snooping is disabled, unregistered IPMCv4 traffic flooding is always active in spite of this setting.	Clicked
IGMP SSM Range	SSM (Source-Specific Multicast) Range allows the SSM-aware hosts and routers run the SSM service model for the groups in the address range. Assign valid IPv4 multicast address as prefix with a prefix length (from 4 to 32) for the range.	232.0.0.0 / 8
Leave Proxy Enabled	Enable IGMP Leave Proxy. This feature can be used to avoid forwarding unnecessary leave messages to the router side.	Unclicked
Proxy Enabled	Enable IGMP Proxy. This feature can be used to avoid forwarding unnecessary join and leave messages to the router side.	Unclicked
Port Related Configuration		
Router Port	Specify which ports act as router ports. A router port is a port on the Ethernet switch that leads towards the Layer 3 multicast device or IGMP querier. If an aggregation member port is selected as a router port, the whole aggregation will act as a router port.	Unclicked
Fast Leave	Enable the fast leave on the port. System will remove group record and stop forwarding data upon receiving the IGMPv2 leave message without sending last member query messages. It is recommended to enable this feature only when a single IGMPv2 host is connected to the specific port.	Unclicked
Throttling	Enable to limit the number of multicast groups to which a switch port can belong.	unlimited

Click **Save** button to save changes. Click **Reset** button to undo any changes made locally and revert to previously saved values.

VLAN Configuration

IGMP Snooping VLAN Configuration is shown in Figure 2.81. Note that the user needs to enter IP configuration page (**System** **IP** **Add IP interface**) to setup IP interface first before the creation of IGMP VLAN interface. The IGMP Snooping VLAN table is also displayed on this webpage. Each page can show up to 99 entries from the VLAN table, default being 20, selected through the “entries per page” input field. When first visited, the web page will show the first 20 entries from the beginning of the VLAN Table. The first displayed will be the one with the lowest VLAN ID found in the VLAN Table. The “VLAN” input fields allow the user to select the starting point in the VLAN Table. Clicking the **Refresh** button will update the displayed table starting from that or the next closest VLAN Table match. The **>>** button will use the last entry of the currently displayed entry as a basis for the next lookup. When the end is reached the text “No more entries” is shown in the displayed table. Use the **<<** button to start over. Table 2.66 summarizes the descriptions of the IGMP Snooping VLAN Configuration.

Configuration

System
Ports
ERPS
DHCPv4
Security
Aggregation
Spanning Tree
IPMC
IGMP Snooping
Basic Configuration
VLAN Configuration
MLD Snooping
Basic Configuration
VLAN Configuration

IGMP Snooping VLAN Configuration

Start from VLAN 1 with 20 entries per page.

VLAN ID	Snooping Enabled	Querier Election	Querier Address	Compatibility	PRI	RV	QI (sec)	QRI (0.1 sec)	LLQI (0.1 sec)	URI (sec)
1	<input type="checkbox"/>	<input checked="" type="checkbox"/>	0.0.0.0	IGMP-Auto	0	2	125	100	10	1
2	<input type="checkbox"/>	<input checked="" type="checkbox"/>	0.0.0.0	IGMP-Auto	0	2	125	100	10	1

Save Reset

Table 2.66 Descriptions of IGMP Snooping's VLAN Configuration for an IPMC Profile:

La- bel	Description	Fac- tory De- fault
VLAN ID	The VLAN ID of the entry.	1
Snoop- ing En- abled	Enable the per-VLAN IGMP Snooping. Up to 8 VLANs can be selected for IGMP Snooping.	Unchecked
Querier Elec- tion	Enable to join IGMP Querier election in the VLAN. Disable to act as an IGMP Non-Querier.	Checked
Querier Ad- dress	Define the IPv4 address as source address used in IP header for IGMP Querier election. When the Querier address is not set, system uses IPv4 management address of the IP interface associated with this VLAN. When the IPv4 management address is not set, system uses the first available IPv4 management address. Otherwise, system uses a pre-defined value will be 0.0.0.0.	0.0.0.0
Com- pat- ibil- ity	Compatibility is maintained by hosts and routers taking appropriate actions depending on the versions of IGMP operating on hosts and routers within a network. The allowed selection is IGMP-Auto, Forced IGMPv1, Forced IGMPv2, Forced IGMPv3, default compatibility value is IGMP-Auto.	IGMP- Auto
PRI	Priority of Interface. It indicates the IGMP control frame priority level generated by the system. These values can be used to prioritize different classes of traffic. The allowed range is 0 (best effort) to 7 (highest), default interface priority value is 0.	0
RV	Robustness Variable. The Robustness Variable allows tuning for the expected packet loss on a network. The allowed range is 1 to 255, default robustness variable value is 2.	2
QI (sec)	Query Interval. The Query Interval is the interval between General Queries sent by the Querier. The allowed range is 1 to 31744 seconds, default query interval is 125 seconds.	125
QRI (0.1 sec)	Query Response Interval. The Maximum Response Delay used to calculate the Maximum Response Code inserted into the periodic General Queries. The allowed range is 0 to 31744 in tenths of seconds, default query response interval is 100 in tenths of seconds (10 seconds).	100
LLQI (0.1 sec)	Last Member Query Interval. The Last Member Query Time is the time value represented by the Last Member Query Interval, multiplied by the Last Member Query Count. The allowed range is 0 to 31744 in tenths of seconds, default last member query interval is 10 in tenths of seconds (1 second).	10
URI (sec)	Unsolicited Report Interval. The Unsolicited Report Interval is the time between repetitions of a host's initial report of membership in a group. The allowed range is 0 to 31744 seconds, default unsolicited report interval is 1 second.	1

Click **Save** button to save changes. Click **Reset** button to undo any changes made locally and revert to previously

saved values.

2.8.2 MLD Snooping

MLD is an acronym for Multicast Listener Discovery for IPv6. MLD is used by IPv6 routers to discover multicast listeners on a directly attached link, much as IGMP is used in IPv4. The protocol is embedded in ICMPv6 instead of using a separate protocol.

Basic Configuration

MLD Snooping Basic Configuration webpage provides IGMP Snooping related configuration as shown in Figure 2.82. The page consists of **Global Configuration** and **Port Related Configuration**. Table 2.67 summarizes the descriptions of MLD Snooping Configuration.



Configuration

- System
- Ports
- ERPS
- DHCPv4
- Security
- Aggregation
- Spanning Tree
- IPMC
 - IGMP Snooping
 - Basic Configuration
 - VLAN Configuration
 - MLD Snooping
 - Basic Configuration
 - VLAN Configuration
- LLDP
- SyncE
- MAC Table
- VLANs
- VCL
- QoS
- Mirroring
- PTP
- GVRP
- DDMI
- UDLD
- SD Backup
- Modbus Setting

Monitor

Diagnostics

Maintenance

MLD Snooping Configuration

Global Configuration	
Snooping Enabled	<input checked="" type="checkbox"/>
Unregistered IPMCv6 Flooding Enabled	<input checked="" type="checkbox"/>
MLD SSM Range	ff3e:: / 96
Leave Proxy Enabled	<input type="checkbox"/>
Proxy Enabled	<input type="checkbox"/>

Port Related Configuration

Port	Router Port	Fast Leave	Throttling
*	<input type="checkbox"/>	<input type="checkbox"/>	<> ▼
1	<input type="checkbox"/>	<input type="checkbox"/>	unlimited ▼
2	<input type="checkbox"/>	<input type="checkbox"/>	unlimited ▼
3	<input type="checkbox"/>	<input type="checkbox"/>	unlimited ▼
4	<input type="checkbox"/>	<input type="checkbox"/>	unlimited ▼
5	<input type="checkbox"/>	<input type="checkbox"/>	unlimited ▼
6	<input type="checkbox"/>	<input type="checkbox"/>	unlimited ▼
7	<input type="checkbox"/>	<input type="checkbox"/>	unlimited ▼
8	<input type="checkbox"/>	<input type="checkbox"/>	unlimited ▼
9	<input type="checkbox"/>	<input type="checkbox"/>	unlimited ▼
10	<input type="checkbox"/>	<input type="checkbox"/>	unlimited ▼
11	<input type="checkbox"/>	<input type="checkbox"/>	unlimited ▼

Save Reset

Table 2.67 Descriptions of MLD Snooping Configuration for an IPMC Profile:

Label	Description	Factory Default
MLD Snooping Configuration		
Snooping Enabled	Enable the Global MLD Snooping.	Clicked
Unregistered IPMCv6 Flooding Enabled	Enable unregistered IPMCv6 traffic flooding. The flooding control takes effect only when MLD Snooping is enabled. When MLD Snooping is disabled, unregistered IPMCv6 traffic flooding is always active in spite of this setting.	Clicked
MLD SSM Range	SSM (Source-Specific Multicast) Range allows the SSM-aware hosts and routers run the SSM service model for the groups in the address range. Assign valid IPv6 multicast address as prefix with a prefix length (from 8 to 128) for the range.	ff3e::/96
Leave Proxy Enabled	Enable MLD Leave Proxy. This feature can be used to avoid forwarding unnecessary leave messages to the router side.	Unclicked
Proxy Enabled	Enable MLD Proxy. This feature can be used to avoid forwarding unnecessary join and leave messages to the router side.	Unclicked
Port Related Configuration		
Router Port	Specify which ports act as router ports. A router port is a port on the Ethernet switch that leads towards the Layer 3 multicast device or MLD querier. If an aggregation member port is selected as a router port, the whole aggregation will act as a router port.	Unclicked
Fast Leave	Enable the fast leave on the port. System will remove group record and stop forwarding data upon receiving the MLDv1 leave message without sending last member query messages. It is recommended to enable this feature only when a single MLDv1 host is connected to the specific port.	Unclicked
Throttling	Enable to limit the number of multicast groups to which a switch port can belong.	unlimited

Click **Save** button to save changes. Click **Reset** button to undo any changes made locally and revert to previously saved values.

VLAN Configuration

MLD Snooping VLAN Configuration is shown in Figure 2.83. Note that the user needs to enter IP configuration page (**System** → **IP** → **Add IP interface**) to setup IP interface first before the creation of MLD VLAN interface. The MLD Snooping VLAN table is also displayed on this webpage. Each page can show up to 99 entries from the VLAN table, default being 20, selected through the “entries per page” input field. When first visited, the web page will show the first 20 entries from the beginning of the VLAN Table. The first displayed will be the one with the lowest [VLAN ID] found in the VLAN Table. The “VLAN” input fields allow the user to select the starting point in the VLAN Table. Clicking the **Refresh** button will update the displayed table starting from that or the next closest VLAN Table match. The >> will use the last entry of the currently displayed entry as a basis for the next lookup. When the end is reached the text “No more entries” is shown in the displayed table. Use the << arrow button to start over. Table 2.68 summarizes the descriptions of the MLD Snooping VLAN Configuration.

Configuration

- System
- Ports
- ERPS
- DHCPv4
- Security
- Aggregation
- Spanning Tree
- IP/MC
- IGMP Snooping
- Basic Configuration
- VLAN Configuration
- MLD Snooping
- Basic Configuration
- VLAN Configuration

MLD Snooping VLAN Configuration

Start from VLAN with entries per page.

VLAN ID	Snooping Enabled	Querier Election	Compatibility	PRI	RV	QI (sec)	QRI (0.1 sec)	LLQI (0.1 sec)	URI (sec)
1	<input type="checkbox"/>	<input checked="" type="checkbox"/>	MLD-Auto	0	2	125	100	10	1
2	<input type="checkbox"/>	<input checked="" type="checkbox"/>	MLD-Auto	0	2	125	100	10	1

Table 2.68 Descriptions of MLD Snooping's VLAN Configuration for an IP/MC Profile:

La- bel	Description	Fac- tory De- fault
VLAN ID	The VLAN ID of the entry.	1
MLD Snoop- ing En- abled	Enable the per-VLAN IGMP Snooping. Up to 8 VLANs can be selected for MLD Snooping.	Unclicked
Querier Elec- tion	Enable to join MLD Querier election in the VLAN. Disable to act as an MLD Non-Querier.	Clicked
Com- pat- ibil- ity	Compatibility is maintained by hosts and routers taking appropriate actions depending on the versions of MLD operating on hosts and routers within a network. The allowed selection is MLD-Auto, Forced MLDv1, Forced MLDv2, default compatibility value is MLD-Auto.	MLD- Auto
PRI	Priority of Interface. It indicates the MLD control frame priority level generated by the system. These values can be used to prioritize different classes of traffic. The allowed range is 0 (best effort) to 7 (highest), default interface priority value is 0.	0
RV	Robustness Variable. The Robustness Variable allows tuning for the expected packet loss on a link. The allowed range is 1 to 255, default robustness variable value is 2.	2
QI (sec)	Query Interval. The Query Interval is the interval between General Queries sent by the Querier. The allowed range is 1 to 31744 seconds. Default query interval is 125 seconds.	125
QRI (0.1 sec)	Query Response Interval. The Maximum Response Delay used to calculate the Maximum Response Code inserted into the periodic General Queries. The allowed range is 0 to 31744 in tenths of seconds. Default query response interval is 100 in tenths of seconds (10 seconds).	100
LLQI (0.1 sec)	Last Listener Query Interval. The Last Listener Query Interval is the Maximum Response Delay used to calculate the Maximum Response Code inserted into Multicast Address Specific Queries sent in response to Version 1 Multicast Listener Done messages. It is also the Maximum Response Delay used to calculate the Maximum Response Code inserted into Multicast Address and Source Specific Query messages. The allowed range is 0 to 31744 in tenths of seconds. Default last listener query interval is 10 in tenths of seconds (1 second).	10
URI (sec)	Unsolicited Report Interval. The Unsolicited Report Interval is the time between repetitions of a node's initial report of interest in a multicast address. The allowed range is 0 to 31744 seconds. Default unsolicited report interval is 1 second.	1

Click **Refreshes** button to refresh the displayed table starting from the "VLAN" input fields. Click |<< button to

update the table starting from the first entry in the VLAN Table, i.e., the entry with the lowest VLAN ID. Click >> button to update the table, starting with the entry after the last entry currently displayed. Click **Save** button to save changes. Click **Reset** button to undo any changes made locally and revert to previously saved values.

2.9 LLDP


Link Layer Discovery Protocol (LLDP) is an IEEE802.1ab standard OSI layer-2 protocol. LLDP allows Ethernet network devices to advertise details about themselves, such as device configuration, capabilities and identification. The advertise packets are periodically sent to directly connected devices on the network that are also using LLDP or so called its neighbours. LLDP is a “one hop” unidirectional protocol in an advertising mode.

LLDP information can only be sent to and received by devices, no solicit information or state changes between nodes. The device has a choice to turn on and off sending and receiving function independently. Advertised information is not forward on to other devices on the network. LLDP is designed to be managed with SNMP. Applications that use this protocol include topology discovery, inventory management, emergency services, VLAN assignment, and inline power supply.

2.9.1 LLDP

The **LLDP** webpage allows the user to inspect and configure the current LLDP interface settings as shown in Figure 2.84. The page consists of **LLDP Parameters** and **LLDP Interface Configuration**. Table 2.69 summarizes the descriptions of the **LLDP Configuration**.

Managed Switch



Configuration

- System
- Ports
- ERPS
- DHCPv4
- Security
- Aggregation
- Spanning Tree
- IPMC
- LLDP
- LLDP
- SyncE
- MAC Table
- VLANs
- VCL
- QoS
- Mirroring
- PTP
- GVRP
- DDMI
- UDLD
- SD Backup
- Modbus Setting

Monitor

Diagnostics

Maintenance

LLDP Configuration

LLDP Parameters

Tx Interval	30	seconds
Tx Hold	4	times
Tx Delay	2	seconds
Tx Reinit	2	seconds

LLDP Interface Configuration

Interface	Mode	CDP aware	Trap	Optional TLVs				
				Port Descr	Sys Name	Sys Descr	Sys Capa	Mgmt Addr
*	<>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
GigabitEthernet 1/1	Enabled	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
GigabitEthernet 1/2	Enabled	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
GigabitEthernet 1/3	Enabled	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
FastEthernet 1/1	Enabled	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
FastEthernet 1/2	Enabled	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
FastEthernet 1/3	Enabled	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
FastEthernet 1/4	Enabled	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
FastEthernet 1/5	Enabled	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
FastEthernet 1/6	Enabled	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
FastEthernet 1/7	Enabled	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
FastEthernet 1/8	Enabled	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>

Table 2.69 Descriptions of LLDP Configuration:

La- bel	Description	Fac- tory De- fault
LLDP Pa- ram- e- ters		
Tx In- ter- val	The switch periodically transmits LLDP frames to its neighbours for having the network discovery information up-to-date. The interval between each LLDP frame is determined by the Tx Interval value. Valid values are restricted to 5 - 32768 seconds.	30
Tx Hold	Each LLDP frame contains information about how long time the information in the LLDP frame shall be considered valid. The LLDP information valid period is set to Tx Hold multiplied by Tx Interval seconds. Valid values are restricted to 2 - 10 times.	4
Tx De- lay	If some configuration is changed (e.g. the IP address) a new LLDP frame is transmitted, but the time between the LLDP frames will always be at least the value of Tx Delay seconds. Tx Delay cannot be larger than 1/4 of the Tx Interval value. Valid values are restricted to 1 - 8192 seconds.	2
Tx Reinit	When an interface is disabled, LLDP is disabled or the switch is rebooted, a LLDP shutdown frame is transmitted to the neighbouring units, signalling that the LLDP information isn't valid anymore. Tx Reinit controls the number of seconds between the shutdown frame and a new LLDP initialization. Valid values are restricted to 1 - 10 seconds.	2
LLDP In- ter- face Con- fig- u- ra- tion		
In- ter- face	The switch interface name of the logical LLDP interface.	Gi- ga- bitEth- er- net or FastEth- er- net
Mode	Select LLDP mode. Rx only: The switch will not send out LLDP information, but LLDP information from neighbour units is analysed. Tx only: The switch will drop LLDP information received from neighbours, but will send out LLDP information. Disabled: The switch will not send out LLDP information, and will drop LLDP information received from neighbours. Enabled: The switch will send out LLDP information, and will analyse LLDP information received from neighbours.	Dis- abled
CDP Aware	Select CDP awareness. The CDP operation is restricted to decoding incoming CDP frames (The switch doesn't transmit CDP frames). CDP frames are only decoded if LLDP on the interface is enabled. Only CDP TLVs that can be mapped to a corresponding field in the LLDP neighbours' table are decoded. All other TLVs are discarded (Unrecognized CDP TLVs and discarded CDP frames are not shown in the LLDP statistics.). CDP TLVs are mapped onto LLDP neighbours' table as shown below. CDP TLV "Device ID" is mapped to the LLDP "Chassis ID" field. CDP TLV "Address" is mapped to the LLDP "Management Address" field. The CDP address TLV can contain multiple addresses, but only the first address is shown in the LLDP neighbours table. CDP TLV "Port ID" is mapped to the LLDP "Port ID" field. CDP TLV "Version and Platform" is mapped to the LLDP "System Description" field. Both the CDP and LLDP support system capabilities, but the CDP capabilities cover capabilities that are not part of the LLDP. These capabilities are shown as "others" in the LLDP neighbours' table. If all incoming CDP frames are discarded, the switch forwards CDP frames	Unclicked

Click **Save** button to save changes. Click **Reset** button to undo any changes made locally and revert to previously saved values.

2.10 SyncE

Synchronous Ethernet (SyncE) uses a physical layer interface to pass timing from one node to the other in the same manner as timing is passed in SONET or SDH. SyncE, as defined by ITU-T standards, such as G.8261, G.8262, G.8264, and G.781, leverages the physical layer of Ethernet to transmit frequency to remote sites. This synchronous transmission of frequency over Ethernet provides a cost-effective alternative for network designers. This functionality is used to make a network 'clock frequency synchronized'. For SyncE to work, each network element along the synchronization path must support SyncE. Network elements use synchronization status messages (SSM) to inform the neighbouring elements about the quality level (QL) of the clock. SSM is used by non-Ethernet interfaces, such as the optical interfaces and the SONET/T1/E1 SPA framers. SSM functionality provides the following key benefits.

- Prevents timing loops
- Provides fast recovery when a part of the network fails
- Ensures that a node derives timing from the most reliable clock source

To maintain a logical communication channel in synchronous network connections, Ethernet relies on a channel called the Ethernet synchronization messaging channel (ESMC), based on IEEE 802.3 organization-specific slow protocol standards. ESMC relays the SSM code that represents the quality level of the Ethernet equipment clock (EEC) in a physical layer.

The ESMC packets are received only for those ports configured as clock sources and transmitted on all SyncE interfaces in the system. These packets are then processed by the clock selection algorithm and used to select the best clock. The transmitted frame is generated based on the QL value of the selected clock source and sent to all the enabled SyncE ports.

The clock selection algorithm selects the best available synchronization source from the nominated sources. The clock selection algorithm has a non-revertive bRSAESaviour among clock sources with the same QL value and priority. It always selects the signal with the best QL value. The following parameters contribute to the selection process.

- Quality level
- Signal fail (QL-FAILED)
- Priority
- External commands (manual, auto-revertive, and so on)

Figure 2.85 illustrates the **SyncE Configuration** webpage. There are five parts on this webpage which are **Clock Source Nomination and State**, **Clock Selection Mode and State**, **Station Clock Configuration** and **Clock hardware**, **SyncE Ports**, and **PTP Ports (8265.1)**.

Configuration

System
 Ports
 ERPS
 DHCPv4
 Security
 Aggregation
 Spanning Tree
 IPMC
 LLDP
 SyncE
 MAC Table
 VLANs
 VCL
 QoS
 Mirroring
 PTP
 GVRP
 DDMI
 UDLD
 SD Backup
 Modbus Setting

Monitor
Diagnostics
Maintenance

SyncE Configuration

Clock Source Nomination and State

Clock Source	Nominated	Port	Priority	SSM Overwrite	Hold Off	ANEG mode	LOCS	SSM	WTR	Clear WTR
1	<input type="checkbox"/>	1	0	Disabled	Disabled	None	●	●	●	none
2	<input type="checkbox"/>	PTP-0	0	Disabled	Disabled	None	●	●	●	none
3	<input type="checkbox"/>	S-CLK	0	Disabled	Disabled	None	●	●	●	none

Clock Selection Mode and State

Mode	Source	WTR Time	SSM Hold Over	SSM Free Run	EEC Option	State	Clock Source	LOL	DHOLD
Manual	1	5M	Default	Default	1	Locked	1	●	●

Station Clock Configuration and Clock hardware

Clock input frequency	Clock output frequency	Clock hardware id
Disabled	Disabled	ZL 30772

SyncE Ports

Port	SSM Enable	Tx SSM	Rx SSM	1000BaseT Mode
1	<input type="checkbox"/>			Master
2	<input type="checkbox"/>			Master
3	<input type="checkbox"/>			Master
4	<input type="checkbox"/>			Master
5	<input type="checkbox"/>			Master
6	<input type="checkbox"/>			Master
7	<input type="checkbox"/>			Master
8	<input type="checkbox"/>			Master
9	<input type="checkbox"/>			Master
10	<input type="checkbox"/>			Master
11	<input type="checkbox"/>			Master

PTP Ports (8265.1)

Instance	Rx SSM	PTSF
0	QL INV	None
1	QL INV	None
2	QL INV	None
3	QL INV	None

For each possible clock source, the user can configure the parameters under **Clock Source Nomination and State** part. Table 2.70 summarizes the descriptions of parameters of Clock Source Nomination and State under SyncE.

Table 2.70 Description of Clock Source Nomination and State under SyncE:

La- bel	Description	Fac- tory De- fault
Clock Source Mode	This is the instance number of the clock source. This has to be referenced when selecting 'Manual'	-
Nom-i-nated	When a clock source is nominated, the clock output from the related PHY (Port) is enabled against the clock controller. This makes it available as a possible source in the clock selection process. If it is supported by the actual HW configuration, The Station clock input can be nominated as a Clock Source.	Unclicked
Port	In this dropdown box, the ports that are possible to select for this clock source, is presented. The station clock input is indicated by a port name = 'S-CLK'.	-
Pri- or- ity	The priority for this clock source. Lowest number (0) is the highest priority. If two clock sources have the same priority, the lowest clock source number gets the highest priority in the clock selection process.	0
SSM Overwrite	A selectable clock source Quality Level (QL) to overwrite any QL received in a SSM. If QL is not Received in an SSM (SSM is not enabled on this port), the SSM Overwrite QL is used as if received. The SSM Overwrite can be set to QL_NONE, indicating that the clock source is without any know quality (Lowest compared to clock source with known quality)	Dis- abled
Hold Off	The Hold Off timer value. Active loss of clock Source will be delayed the selected amount of time. The clock selector will not change clock source if the loss of clock condition is cleared within this time.	Dis- abled
ANEG Mode	This is relevant for 1000BaseT ports only. In order to recover clock from port it must be negotiated to 'Slave' mode. In order to distribute clock, the port must be negotiated to 'Master' mode. This different ANEG modes can be activated on a Clock Source port: Prefer Slave: The Port will be negotiated to 'Slave' mode if possible. Prefer Master: The Port will be negotiated to 'Master' mode if possible. Forced Slave: The Port will be forced to 'Slave' mode. The selected port in 'Locked' state will always be negotiated to 'Slave' if possible.	None
LOCS	Signal is lost on this clock source.	-
SSM	If SSM is enabled and not received properly. Type of SSM fail will be indicated in the 'Rx SSM' field	-
WTR	Wait to Restore timer is active.	-
Clear WTR	Clears the WTR timer and makes this clock source available to the clock selection process.	None

For **Clock Selection Mode and State**, the Clock Selector is only in one instance which is the one who selects between the nominated clock sources. Table 2.71 summarizes the descriptions of parameters of **Clock Source Nomination and State** under SyncE.

Table 2.71 Description of Clock Selection Mode and State under SyncE:

La- bel	Description	Fac- tory De- fault
Mode	The definition of the 'best' clock source is firstly the one with the highest (QL) and secondly (the ones with equal QL) the highest priority. Clock Selector can be in different modes: Manual: Clock selector will select the clock source stated in Source (see below). If this manually selected clock source is failing, the clock selector will go into holdover state. Manual to Selected: Same as Manual mode where the pt. selected clock source will become Source. Auto NonRevertive: Clock Selection of the best clock source is only done when the selected clock fails. Auto Revertive: Clock Selection of the best clock source is constantly done. Force Hold Over: Clock Selector is forced to Hold Over State. Force Free Run: Clock Selector is forced to Free Run State.	Auto Re- vertive
Source	Only relevant if Manual mode is selected (see above).	1
WTR Time	WTR is the Wait-To-Restore timer value in minutes. The WTR time is activated on the falling edge of a clock source failure (in Revertive mode). This means that the clock source is first available for clock selection after WTR Time (can be cleared).	5M
SSM Hold Over	This is the transmitted SSM QL value when clock selector is in Hold Over State.	De- fault
SSM Free Run	This is the transmitted SSM QL value when clock selector is in Free Run State.	De- fault
EEC Op- tion	The ZL30xxx based SyncE modules support both EEC1 and EEC2 option. The difference is: EEC1=> DPLL bandwidth=3,5 Hz, EEC2=> DPLL bandwidth = 0,1 Hz.	1
State	This is indicating the state of the clock selector. Possible states are: Free Run: There is no external clock sources to lock to (unlocked state). The Clock Selector has never been locked to a clock source long enough to calculate the hold over frequency offset to local oscillator. The frequency of this node is the frequency of the local oscillator. Hold Over: There is no external clock sources to lock to (unlocked state). The Clock Selector has to calculate the holdover frequency offset to local oscillator. The frequency of this node is hold to the frequency of the clock source previous locked to. Locked: Clock selector is locked to the clock source indicated (See next). Top: Clock selector is locked to Time over packets, e.g., PTP (See next).	Free Run
Clock Source	The clock source locked to when clock selector is in locked state.	-
LOL	Clock selector has raised the Los Of Lock alarm.	-
DHOLD	Clock selector has not yet calculated the holdover frequency offset to local oscillator. This becomes active for about 10 s. when a new clock source is selected	-

The SyncE module may have a station clock input and/or a station clock output. This can be configured under the **Station Clock Configuration** part.

Table 2.72 Description of Station Clock Configuration under SyncE:

Label	Description	Factory Default
Clock input frequency	If supported by the SyncE HW, the station clock input frequency can be configured, the possible frequencies are: 1,544 MHz, 2,048 MHz or 10 MHz	Disabled
Clock output frequency	If supported by the SyncE HW, the station clock output frequency can be configured, the possible frequencies are: 1,544 MHz, 2,048 MHz or 10 MHz	Disabled

Table 2.73 Description of SyncE Ports under SyncE:

Label	Description	Factory Default
Port	The port number to configure.	-
SSM Enable	Enable and disable of SSM functionality on this port.	Unclicked
Tx SSM	Monitoring of the transmitted SSM QL on this port. Transmitted QL should be the Quality Level of the clock generated by this node. This means the QL of the clock source this node is locked to.	-
Rx SSM	Monitoring of the received SSM QL on this port. If link is down on port, QL_LINK is indicated. If no SSM is received, QL_FAIL is indicated.	-
1000BaseT Mode	If PHY is in 1000BaseT Mode then this is monitoring the master/slave mode. In order to receive clock on a port, it has to be in slave mode. In order to transmit clock on a port, it has to be in master mode.	Master

Table 2.74 Description of PTP Ports under SyncE:

Label	Description
Instance	The instance number of switch PTP feature
Rx SSM	Monitoring of the received SSM QL on this port. If link is down on port, QL_LINK is indicated. If no SSM is received, QL_FAIL is indicated.
PTSF	PSFP is an acronym for Per Stream Filtering and Policing. PSFP functions allow filtering and policing decisions, and subsequent frame queuing decisions on a per-stream basis. PSFP is supported by a table of stream filters that determine the filtering and policing actions that are to be applied to frames received on ingress ports

Click **Refresh** button to refresh the page immediately. Click **Save** button to save changes. Click **Reset** button to undo any changes made locally and revert to previously saved values.

2.11 MAC Table

Unicast and Multicast MAC addresses in the memory, which is the MAC Address Table, of the managed switch can be configured in this webpage as shown in Figure 2.86. The user can set timeouts for entries (called ageing time) in the dynamic MAC Table and configure the static MAC table. The MAC Address Table Configuration webpage consists of four parts: **Ageing Configuration**, **MAC Table Learning**, **VLAN Learning Configuration**, and **Static MAC Table Configuration**.

Configuration

- System
- Ports
- ERPS
- DHCPv4
- Security
- Aggregation
- Spanning Tree
- IPMC
- LLDP
- LLDP
- SyncE
- MAC Table
- VLANs
- VCL
- QoS
- Mirroring
- PTP
- GVRP
- DDMI
- UDLD
- SD Backup
- Modbus Setting

Monitor

Diagnostics

Maintenance

MAC Address Table Configuration

Aging Configuration

Disable Automatic Aging	<input type="checkbox"/>
Aging Time	300 seconds

MAC Table Learning

	Port Members										
	1	2	3	4	5	6	7	8	9	10	11
Auto	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>
Disable	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Secure	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>

VLAN Learning Configuration

Learning-disabled VLANs	
-------------------------	--

Static MAC Table Configuration

			Port Members										
Delete	VLAN ID	MAC Address	1	2	3	4	5	6	7	8	9	10	11


Table 2.75 Description of MAC Address Table Configuration:

Label	Description	Factory Default
Aging Configuration		
Disable Automatic Aging	Disable the automatic aging of dynamic entries by checking the box.	Unclicked
Aging time	Configure aging time by entering a value in this field in unit of seconds. The allowed range is 10 to 1000000 seconds. By default, dynamic entries are removed from the MAC Table after 300 seconds. This removal is also called aging.	300
MAC Table Learning Note: If the learning mode for a given port is greyed out, another module is in control of the mode, so that it cannot be changed by the user. An example of such a module is the MAC-based Authentication under 802.1X. Each port can do learning based upon the following settings:		
Auto	Learning is done automatically as soon as a frame with unknown SMAC is received.	-
Disable	No learning is done.	-
Secure	Only static MAC entries are learned, all other frames are dropped. Note: Make sure that the link used for managing the switch is added to the Static Mac Table before changing to secure learning mode, otherwise the management link is lost and can only be restored by using another non-secure port or by connecting to the switch via the serial interface.	-
VLAN Learning Configuration		
Learning-disabled VLANs	This field shows the Learning-disabled VLANs. When a NEW MAC arrives into a learning-disabled VLAN, the MAC won't be learnt. By the default, the field is empty. More VLANs may be created by using a list syntax where the individual elements are separated by commas. Ranges are specified with a dash separating the lower and upper bound. The following example will create VLANs 1, 10, 11, 12, 13, 200, and 300: 1,10-13,200,300. Spaces are allowed in between the delimiters.	Null
Static MAC Table Configuration Note: The static entries in the MAC table are shown in this table. The static MAC table can contain 64 entries. The MAC table is sorted first by VLAN ID and then by MAC address.		
Delete	Check to delete the entry. It will be deleted during the next save.	-
VLAN ID	The VLAN ID of the entry.	-
MAC Address	The MAC address of the entry.	-
Port Members	Checkmarks indicate which ports are members of the entry. Check or uncheck as needed to modify the entry.	-
Adding a New Static Entry	Click Add New Static Entry button to add a new entry to the static MAC table. Specify the VLAN ID, MAC address, and port members for the new entry. Click "Save".	-

Click **Save** button to save changes. Click **Reset** button to undo any changes made locally and revert to previously saved values.

2.12 VLANs

VLAN or Virtual LAN is a method to restrict communication between switch ports. At layer 2, the network is partitioned into multiple, distinct, mutually isolated broadcast domains. A Virtual Local Area Network (VLAN) is a group of devices that can be located anywhere on a network, but all devices in the group are logically connected together. In other words, VLAN allows end stations to be grouped together even if they are not located on the same network switch. With a traditional network, users usually spend a lot of time on devices relocations, but a VLAN reconfiguration can be performed entirely through software. Also, VLAN provides extra security because devices within a VLAN group can only communicate with other devices in the same group. For the same reason, VLAN can help to control network traffic. Traditional network broadcasts data to all devices, no matter whether they need it or not. By allowing a member to receive data only from other members in the same VLAN group, VLAN avoids broadcasting and increases traffic efficiency (see Figure 2.87).

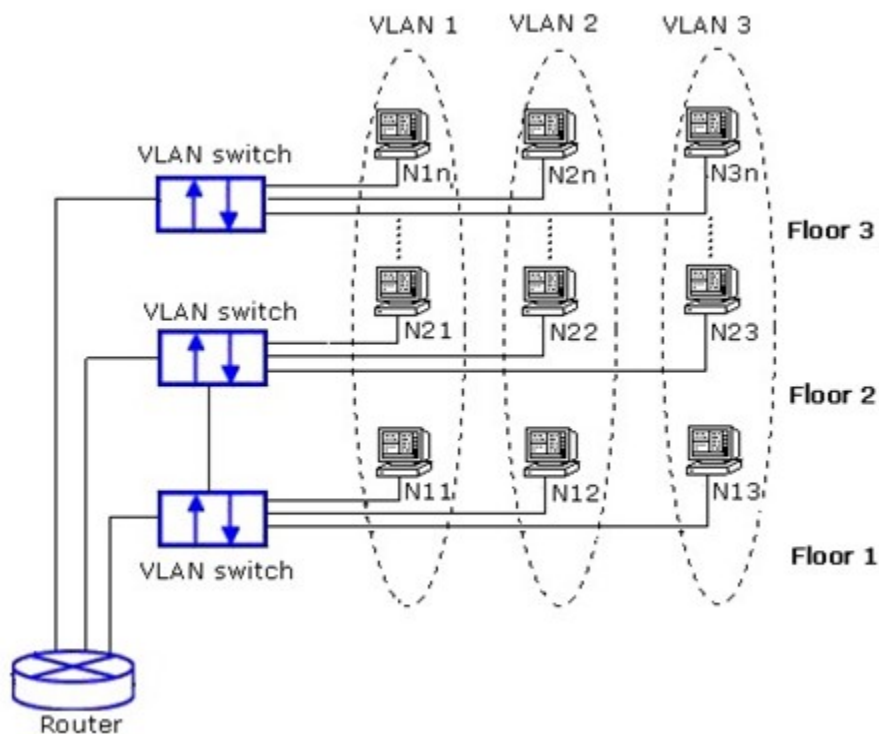


2.12.1 Configuration

VLAN Configuration webpage allows the user to control VLAN configuration on the switch. The page is divided into a global section and a per-port configuration section as shown in

Figure 2.88. Table 2.76 and Table 2.77 provide descriptions of the options on Global VLAN Configuration and Port VLAN Configuration, respectively.

Managed Switch



Configuration
System
Ports
ERPS
DHCPv4
Security
Aggregation
Spanning Tree
IPMC
LLDP
LLDP
SyncE
MAC Table
VLANs
 Configuration
 SVL
VCL
QoS
Mirroring
PTP
GVRP
DDMI
UDLD
SD Backup
Modbus Setting
Monitor
Diagnostics
Maintenance

Global VLAN Configuration

Allowed Access VLANs	1,2
Ethertype for Custom S-ports	88A8

Port VLAN Configuration

Port	Mode	Port VLAN	Port Type	Ingress Filtering	Ingress Acceptance	Egress Tagging	Allowed VLANs	Forbidden VLANs
*	<>	1	<>	<input checked="" type="checkbox"/>	<>	<>	1	
1	Access	1	C-Port	<input checked="" type="checkbox"/>	Tagged and Untagged	Untag All	1	
2	Access	1	C-Port	<input checked="" type="checkbox"/>	Tagged and Untagged	Untag All	1	
3	Access	1	C-Port	<input checked="" type="checkbox"/>	Tagged and Untagged	Untag All	1	
4	Access	2	C-Port	<input checked="" type="checkbox"/>	Tagged and Untagged	Untag All	2	
5	Access	1	C-Port	<input checked="" type="checkbox"/>	Tagged and Untagged	Untag All	1	
6	Access	1	C-Port	<input checked="" type="checkbox"/>	Tagged and Untagged	Untag All	1	
7	Access	1	C-Port	<input checked="" type="checkbox"/>	Tagged and Untagged	Untag All	1	
8	Access	1	C-Port	<input checked="" type="checkbox"/>	Tagged and Untagged	Untag All	1	
9	Access	1	C-Port	<input checked="" type="checkbox"/>	Tagged and Untagged	Untag All	1	
10	Access	1	C-Port	<input checked="" type="checkbox"/>	Tagged and Untagged	Untag All	1	
11	Access	1	C-Port	<input checked="" type="checkbox"/>	Tagged and Untagged	Untag All	1	

Save Reset

Table 2.76 Description of Global VLAN Configuration:

La- bel	Description	Fac- tory De- fault
Al- lowed Ac- cess VLANs	This field shows the allowed Access VLANs, i.e. it only affects ports configured as Access ports. Ports in other modes are members of the VLANs specified in the Allowed VLANs field. By default, only VLAN 1 is enabled. More VLANs may be created by using a list syntax where the individual elements are separated by commas. Ranges are specified with a dash separating the lower and upper bound. The following example will create VLANs 1, 10, 11, 12, 13, 200, and 300: 1,1013,200,300. Spaces are allowed in between the delimiters.	1
Ether- type for Cus- tom S- ports	This field specifies the ethernet/TPID (specified in hexadecimal) used for Custom S-ports. The setting is in force for all ports whose Port Type is set to S-Custom-Port.	88A8

Table 2.77 Description of Port VLAN Configuration:

La- bel	Description	Fac- tory De- fault
Port	This is the logical port number of this row.	-
Mode	The port mode (default is Access) determines the fundamental behaviour of the port in question. A port can be in one of three modes as described below. Whenever a particular mode is selected, the remaining fields in that row will be either greyed out or made changeable depending on the mode in question. Greyed out fields show the value that the port will get when the mode is applied. Access: Access ports are normally used to connect to end stations. Dynamic features like Voice VLAN may add the port to more VLANs behind the scenes. Access ports have the following characteristics: Member of exactly one VLAN, the Port VLAN (a.k.a. Access VLAN), which by default is 1 Accepts untagged and C-tagged frames Discards all frames not classified to the Access VLAN On egress all frames are transmitted untagged Trunk: Trunk ports can carry traffic on multiple VLANs simultaneously, and are normally used to connect to other switches. Trunk ports have the following characteristics: By default, a trunk port is member of all VLANs (1-4095) The VLANs that a trunk port is member of may be limited by the use of Allowed VLANs Frames classified to a VLAN that the port is not a member of are discarded By default, all frames but frames classified to the Port VLAN (a.k.a. Native VLAN) get tagged on egress. Frames classified to the Port VLAN do not get Ctagged on egress Egress tagging can be changed to tag all frames, in which case only tagged frames are accepted on ingress Hybrid: Hybrid ports resemble trunk ports in many ways, but adds additional port configuration features. In addition to the characteristics described for trunk ports, hybrid ports have these abilities: Can be configured to be VLAN tag unaware, C-tag aware, S-tag aware, or Scustom-tag aware Ingress filtering can be controlled Ingress acceptance of frames and configuration of egress tagging can be configured independently	Ac- cess
Port VLAN	Determines the port's VLAN ID (a.k.a. PVID). Allowed VLANs are in the range 1 through 4095, default being 1. On ingress, frames get classified to the Port VLAN if the port is configured as VLAN unaware, the frame is untagged, or VLAN awareness is enabled on the port, but the frame is priority tagged (VLAN ID = 0). On egress, frames classified to the Port VLAN do not get tagged if Egress Tagging configuration is set to untagged Port VLAN. The Port VLAN is called an "Access VLAN" for ports in Access mode and Native VLAN for ports in Trunk or Hybrid mode.	-
Port Type	Ports in hybrid mode allow for changing the port type, that is, whether a frame's VLAN tag is used to classify the frame on ingress to a particular VLAN, and if so, which TPID it reacts on. Likewise, on egress, the Port Type determines the TPID of the tag, if a tag is required. Unaware: On ingress, all frames, whether carrying a VLAN tag or not, get classified to the Port VLAN, and possible tags are not removed on egress. C-Port: On ingress, frames with a VLAN tag with TPID = 0x8100 get classified to the VLAN ID embedded in the tag. If a frame is untagged or priority tagged, the frame gets classified to the Port VLAN. If frames must be tagged on egress, they will be tagged with a C-tag. S-Port: On egress, if frames must be tagged, they will be tagged with an S-tag. On ingress, frames with a VLAN tag with TPID = 0x88A8 get classified to the VLAN ID embedded in the tag. Priority-tagged frames are classified to the Port VLAN. If the port is configured to accept Tagged Only frames (see Ingress Acceptance below), frames without this TPID are dropped. Notice: If the S-port is configured to accept Tagged and Untagged frames (see Ingress Acceptance below), frames with a C-tag are treated like frames with an S-tag. If the S-port is configured to accept Untagged Only frames, S-tagged frames will be discarded (except for priority S-tagged frames). C-tagged frames are initially considered untagged and will therefore not be discarded. Later on in the ingress classification process, they will get classified to the VLAN embedded in the tag instead of the port VLAN ID. S-Custom-Port: On egress, if frames must be tagged, they will be tagged with the custom S-tag. On ingress, frames with a VLAN tag with a TPID equal to the Ethertype configured for Custom-S ports get classified to the VLAN ID embedded in the tag. Priority-tagged frames are classified to the Port VLAN. If the port is configured to accept Tagged Only frames (see Ingress Acceptance below), frames without this TPID are dropped. Notice: If the custom S-port is configured to accept Tagged and Untagged frames (see Ingress Acceptance below), frames with a C-tag are treated like frames with a custom S-tag. If the Custom S-port is configured to accept Untagged Only frames, custom S-tagged frames will be discarded (except for priority custom S-tagged frames). C-tagged frames are initially considered untagged and will therefore not be discarded. Later on, in the ingress classification process, they will get classified to the VLAN embedded in the tag instead of the port VLAN ID.	C- Port
Ingress	Hybrid ports allow for changing ingress filtering. Access and Trunk ports always have ingress fil-	Unclicked

Click **Save** button to save changes. Click **Reset** button to undo any changes made locally and revert to previously saved values.

2.12.2 SVL

SVL or Shared VLAN Learning Configuration can be set on the managed switch through this webpage as shown in Figure 2.89. In **SVL**, one or more VLANs map to a Filter ID (**FID**). By default, there is a one-to-one mapping from **VLAN** to **FID**, in which case the switch acts as an IVL (Independent VLAN Learning) bridge, but with SVL multiple VLANs may share the same MAC address table entries. Click **Add FID** button to add a new row to the SVL table. The FID will be pre-filled with the first unused FID. Table 2.78 summarizes the descriptions of Shared VLAN Learning Configuration.

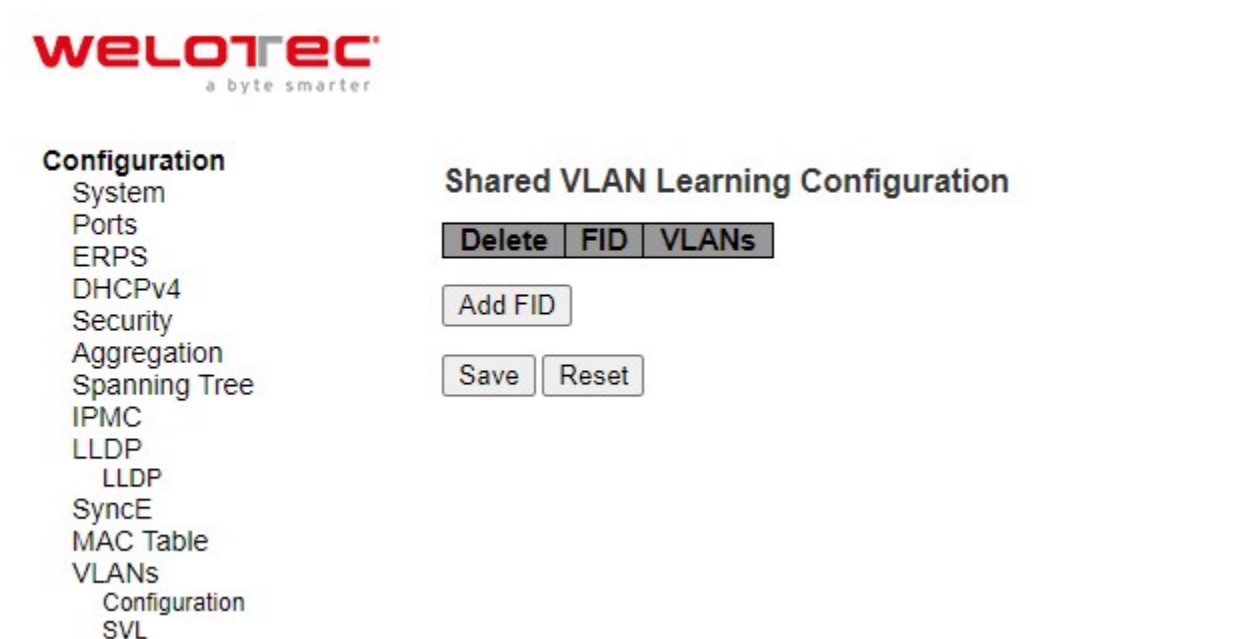


Table 2.78 Description of Shared VLAN Learning Configuration:

La- bel	Description	Fac- tory De- fault
Delete	A previously allocated FID can be deleted by the use of this button.	-
FID	The Filter ID (FID) is the ID that VLANs get learned on in the MAC table when SVL is in effect. No two rows in the table can have the same FID and the FID must be a number between 1 and 63.	1
VLANs	List of VLANs mapped into FID. The syntax is as follows: Individual VLANs are separated by commas. Ranges are specified with a dash separating the lower and upper bound. The following example will map VLANs 1, 10, 11, 12, 13, 200, and 300: 1, 10-13, 200, 300. Spaces are allowed in between the delimiters. The range of valid VLANs is 1 to 4095. The same VLAN can only be a member of one FID. A message will be displayed if one VLAN is grouped into two or more FIDs. All VLANs must map to a particular FID, and by default VLAN x maps to FID x. This implies that if FID x is defined, then VLAN x is implicitly a member of FID x unless it is specified for another FID. If FID x doesn't exist, a confirmation message will be displayed, asking whether to continue adding VLAN x implicitly to FID x.	-

Click **Save** button to save changes. Click **Reset** button to undo any changes made locally and revert to previously saved values.

2.13 VCL

2.13.1 MAC-based VLAN

The MAC address to VLAN ID mappings can be configured in Figure 2.90. This page allows adding and deleting MAC-based VLAN Classification List entries and assigning the entries to different ports. Figure 2.77 summarizes the descriptions of MAC-based VLAN Membership Configuration.



Configuration

- System
- Ports
- ERPS
- DHCPv4
- Security
- Aggregation
- Spanning Tree
- IPMC
- LLDP
- LLDP
- SyncE
- MAC Table
- VLANs
- Configuration
- SVL
- VCL
- MAC-based VLAN

MAC-based VLAN Membership Configuration

			Port Members										
Delete	MAC Address	VLAN ID	1	2	3	4	5	6	7	8	9	10	11
Currently no entries present													

Add New Entry

Save Reset

Table 2.79 Descriptions of MAC-based VLAN Configuration of VCL:

La- bel	Description	Fac- tory De- fault
Delete	To delete a MAC to VLAN ID mapping entry, check this box and press save. The entry will be deleted in the stack.	-
MAC Ad- dress	Indicates the MAC address of the mapping.	00- 00- 00- 00- 00-00
VLAN ID	Indicates the VLAN ID the above MAC will be mapped to.	1
Port Num- bers	A row of check boxes for each port is displayed for each MAC to VLAN ID mapping entry. To include a port in the mapping, check the box. To remove or exclude the port from the mapping, make sure the box is unchecked. By default, no ports are members, and all boxes are unchecked.	-

Click **Add New Entry** button to add a new MAC to VLAN ID mapping entry. An empty row is added to the table, and the mapping can be configured as needed. Any unicast MAC address can be used to configure the mapping. No broadcast or multicast MAC addresses are allowed. Legal values for a VLAN ID are 1 through 4095. The MAC

to VLAN ID entry is enabled when you click on “Save” button. A mapping without any port members will not be added when you click “Save” button. The **Delete** button can be used to undo the addition of new mappings. The maximum possible MAC to VLAN ID mapping entries is limited to 256.

Click **Save** button to save the setting configuration. Click **Reset** button to keep to the original setting.

2.13.2 Protocol-based VLAN

Protocol to Group

Figure 2.91 is the webpage that allows you to add new Protocol to Group Name mapping entries. Note that each protocol can be part of only one Group. It also allows you to see and delete current mapped entries for the switch. Table 2.80 provides the descriptions of the Protocol to Group Mapping Table.



Configuration

- System
- Ports
- ERPS
- DHCPv4
- Security
- Aggregation
- Spanning Tree
- IPMC
- LLDP
- LLDP
- SyncE
- MAC Table
- VLANs
 - Configuration
 - SVL
- VCL
 - MAC-based VLAN
 - Protocol-based VLAN
 - Protocol to Group

Protocol to Group Mapping Table

Delete	Frame Type	Value	Group Name
<input type="button" value="Delete"/>	Ethernet ▼	Etype: 0x0800	<input type="text"/>

Table 2.80 Descriptions of Protocol to Group Mapping Table Configuration

La- bel	Description	Fac- tory De- fault
Delete	To delete a Protocol to Group Name map entry, check this box. The entry will be deleted from the switch during the next Save.	-
Frame Type	Frame Type can have one of the following values: Ethernet LLC SNAP Note: When changing the Frame type field, the valid value of the following text field will vary depending on the new frame type you selected.	Eth- er- net
Value	Valid value that can be entered in this text field depends on the option selected from the preceding Frame Type selection menu. Below are the criteria for the three different Frame Types: Ethernet: Value in the text field when Ethernet is selected as a Frame Type is called etype. Valid values for etype range between 0x0600 and 0xffff LLC: Valid value in this case is comprised of two different sub-values. DSAP: 1-byte long string (0x00-0xff) SSAP: 1-byte long string (0x00-0xff) SNAP: Valid value in this case is also comprised of two different sub-values. OUI: OUI (Organizationally Unique Identifier) is a parameter in the format of xx-xxxx where each pair (xx) in the string is a hexadecimal value ranging between 0x00 and 0xff. PID: PID (Protocol ID). If OUI is hexadecimal 000000, then the protocol ID is the Ethernet type (EtherType) field value for the protocol running on top of SNAP; if OUI is an OUI for a particular organization, the protocol ID is a value assigned by that organization to the protocol running on top of SNAP. In other words, if the value of OUI field is 00-00-00 then the value of PID will be etype (0x06000xffff) and if the value of OUI is other than 00-00-00 then valid values of PID will be any value between 0x0000 and 0xffff.	0x0800
Group Name	A valid Group Name is a 16-character long string, unique for every entry, which consists of a combination of alphabets (a-z or A-Z) and integers (0-9). Note: Special characters and underscores (_) are not allowed.	-

Click **Add New Entry** button to add a new entry in the mapping table. An empty row is added to the table, where Frame Type, Value and the Group Name can be configured as needed. The **Delete** button can be used to undo the addition of new entry. The maximum possible Protocol to Group mappings is limited to 128. Click **Save** button to save the setting configuration. Click **Reset** button to keep to the original setting.

Group to VLAN

This page allows the user to map a Group Name, which is already configured or going to be configured in the future, to a VLAN for the managed switch. Figure 2.92 shows the Group Name to VLAN mapping Table. Description of each column's label can be found in Table 2.81.

Configuration

- System
- Ports
- ERPS
- DHCPv4
- Security
- Aggregation
- Spanning Tree
- IPMC
- LLDP
- LLDP
- SyncE
- MAC Table
- VLANs
 - Configuration
 - SVL
 - VCL
 - MAC-based VLAN
 - Protocol-based VLAN
 - Protocol to Group
 - Group to VLAN

Group Name to VLAN mapping Table

Delete	Group Name	VLAN ID	Port Members										
			1	2	3	4	5	6	7	8	9	10	11
<input type="checkbox"/>	<input type="text"/>	<input type="text"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	

Table 2.81 Descriptions of Group name to VLAN Mapping Table Configuration:

La- bel	Description	Fac- tory De- fault
Delete	To delete a Group Name to VLAN mapping, check this box. The entry will be deleted from the switch during the next Save.	-
Group Name	A valid Group Name is a string, at the most 16 characters long, which consists of a combination of Name alphabets (a-z or A-Z) and integers (0-9) with no special characters allowed. You may either use a Group that already includes one or more protocols (see Protocol to Group mappings), or create a Group to VLAN ID mapping that will become active the moment you add one or more protocols inside that Group. Furthermore, the Group to VLAN ID mapping is not unique, as long as the port lists of these mappings are mutually exclusive (e.g., Group1 can be mapped to VID 1 on port#1 and to VID 2 on port#2).	Null
VLAN ID	Indicates the VLAN ID to which the Group Name will be mapped. A valid VLAN ID ranges from 1 to 4095.	Null
Port Mem- bers	A row of check boxes for each port is displayed for each Group Name to VLAN ID mapping. To include a port in the mapping, check the box. To remove or exclude the port from the mapping, make sure the box is unchecked. By default, no ports are members, and all boxes are unchecked.	Unclicked

Click **Add New Entry** button to add a new entry in the mapping table. An empty row is added to the table and the Group Name, VLAN ID and port members can be configured as needed. Legal values for a VLAN ID are 1 through 4095. The **Delete** button can be used to undo the addition of new entry. The maximum possible Groups to VLAN mappings are limited to 256. Click **Save** button to save the setting configuration. Click **Reset** button to keep to the original setting.

2.13.3 IP Subnet-based VLAN

The IP subnet to VLAN ID mappings can be configured on the webpage as shown in Figure 2.93. This page allows adding, updating and deleting IP subnet to VLAN ID mapping entries and assigning them to different ports. Table 2.82 describes the column's label in the IP Subnet-based VLAN membership configuration.



Configuration

- System
- Ports
- ERPS
- DHCPv4
- Security
- Aggregation
- Spanning Tree
- IPMC
- LLDP
- LLDP
- SyncE
- MAC Table
- VLANs
 - Configuration
 - SVL
 - VCL
 - MAC-based VLAN
 - Protocol-based VLAN
 - Protocol to Group
 - Group to VLAN
 - IP Subnet-based VLAN

IP Subnet-based VLAN Membership Configuration

Delete	IP Address	Mask Length	VLAN ID	Port Members										
				1	2	3	4	5	6	7	8	9	10	11
Delete	0.0.0.0	24	1	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Add New Entry

Save Reset

Table 2.82 Descriptions of IP Subnet-based VLAN Configuration_

La- bel	Description	Fac- tory De- fault
Delete	To delete a mapping, check this box and press save. The entry will be deleted in the stack.	-
IP Ad- dress	Indicates the subnet's IP address (Any of the subnet's host addresses can be also provided here, the application will convert it automatically).	0.0.0.0
Mask Length	Indicates the subnet's mask length.	24
VLAN ID	Indicates the VLAN ID the subnet will be mapped to. IP Subnet to VLAN ID is a unique matching.	1
Port Mem- bers	A row of check boxes for each port is displayed for each IP subnet to VLAN ID mapping entry. To include a port in a mapping, simply check the box. To remove or exclude the port from the mapping, make sure the box is unchecked. By default, no ports are members and all boxes are unchecked.	Unclicked

Click **Add New Entry** to add a new IP subnet to VLAN ID mapping entry. An empty row is added to the table, and the mapping can be configured as needed. Any IP address/mask can be configured for the mapping. Valid values for the VLAN ID are 1 to 4095. The IP subnet to VLAN ID mapping entry is enabled when you click on "**Save**" button. The **Delete** button can be used to undo the addition of new mappings. The maximum possible IP subnet to VLAN ID mappings is limited to 128.

Click **Save** button to save the setting configuration. Click **Reset** button to keep to the original setting. Check the **Auto-refresh** box to refresh the page automatically. The automatic refresh occurs every 3 seconds. Otherwise, click **Refresh** box to refresh the page immediately.

2.14 QoS

Quality of Service (QoS) is the ability to provide different priority to different applications, users, or data flows. QoS guarantees a certain level of performance to a data flow by using the following metrics: transmitted bit rate, bit error rate, delay, jitter, and probability of packet dropping. QoS guarantees are important if the network capacity is insufficient, especially for application that requires certain bit rate and is delay sensitive. For any network that is best effort, QoS cannot be guaranteed, except that resource is more than sufficient to serve users.

Controlling network traffic needs a set of rules to help classify different types of traffic and define how each of them should be treated as they are being transmitted. This managed switch can inspect both 802.1p Class of Service (CoS) tags and DiffServ tags called Differentiated Services Code Point (DSCP) to provide consistent classification.

2.14.1 Port Classification

The Port Classification webpage shown in Figure 2.94 allows the user to configure the basic QoS Ingress Classification settings for all of managed switch ports. Table 2.83 provides the descriptions of the setting parameters of QoS Port Classification.



Configuration

- System
- Ports
- ERPS
- DHCPv4
- Security
- Aggregation
- Spanning Tree
- IPMC
- LLDP
- LLDP
- SyncE
- MAC Table
- VLANs
 - Configuration
 - SVL
- VCL
 - MAC-based VLAN
 - Protocol-based VLAN
 - Protocol to Group
 - Group to VLAN
 - IP Subnet-based VLAN
- QoS
 - Port Classification

QoS Port Classification

Port	Ingress							
	CoS	DPL	PCP	DEI	Tag Class.	DSCP Based	Key Type	Address Mode
*	<>	<>	<>	<>		<input type="checkbox"/>	<>	<>
1	0	0	0	0	Disabled	<input type="checkbox"/>	Normal	Source
2	0	0	0	0	Disabled	<input type="checkbox"/>	Normal	Source
3	0	0	0	0	Disabled	<input type="checkbox"/>	Normal	Source
4	0	0	0	0	Disabled	<input type="checkbox"/>	Normal	Source
5	0	0	0	0	Disabled	<input type="checkbox"/>	Normal	Source
6	0	0	0	0	Disabled	<input type="checkbox"/>	Normal	Source
7	0	0	0	0	Disabled	<input type="checkbox"/>	Normal	Source
8	0	0	0	0	Disabled	<input type="checkbox"/>	Normal	Source
9	0	0	0	0	Disabled	<input type="checkbox"/>	Normal	Source
10	0	0	0	0	Disabled	<input type="checkbox"/>	Normal	Source
11	0	0	0	0	Disabled	<input type="checkbox"/>	Normal	Source

Save Reset

Table 2.83 Descriptions of Port Classification Configuration of QoS:

La- bel	Description	Fac- tory De- fault
Port	The port number for which the configuration below applies.	-
CoS	Controls the default class of service (CoS) value. All frames are classified to a CoS. There is a one-to-one mapping between CoS, queue and priority. A CoS of 0 (zero) has the lowest priority. If the port is VLAN aware, the frame is tagged and Tag Class. is enabled, then the frame is classified to a CoS that is mapped from the PCP and DEI value in the tag. Otherwise, the frame is classified to the default CoS. The classified CoS can be overruled by a QCL entry. Note: If the default CoS has been dynamically changed, then the actual default CoS is shown in parentheses after the configured default CoS.	0
DPL	Controls the default Drop Precedence Level (DPL) value. All frames are classified to a Drop Precedence Level. If the port is VLAN aware, the frame is tagged and Tag Class. is enabled, then the frame is classified to a DPL that is mapped from the PCP and DEI value in the tag. Otherwise, the frame is classified to the default DPL. The classified DPL can be overruled by a QCL entry.	0
PCP	Controls the default Priority Code Point (PCP) value. All frames are classified to a PCP value. If the port is VLAN aware and the frame is tagged, then the frame is classified to the PCP value in the tag. Otherwise, the frame is classified to the default PCP value. Note: PCP is a 3-bit field storing the priority level for the 802.1Q frame. It is also known as User Priority.	0
DEI	Controls the default Drop Eligible Indicator (DEI) value. It is a 1-bit field in the VLAN tag. All frames are classified to a DEI value. If the port is VLAN aware and the frame is tagged, then the frame is classified to the DEI value in the tag. Otherwise, the frame is classified to the default DEI value.	0
Tag Class.	Shows the classification mode for tagged frames on this port. Disabled: Use default CoS and DPL for tagged frames. Enabled: Use mapped versions of PCP and DEI for tagged frames. Click on the mode in order to configure the mode and/or mapping. Note: This setting has no effect if the port is VLAN unaware. Tagged frames received on VLAN unaware ports are always classified to the default CoS and DPL.	Dis- abled
DSCP Based	Click to Enable Differentiated Services Code Point (DSCP) Based QoS Ingress Port Classification. It is a field in the header of IP packets for packet classification purposes.	Unclicked
Key Type	The key type specifying the key generated for frames received on the port. The allowed values are: Normal: Half key, match outer tag, SIP/DIP and SMAC/DMAC. Double Tag: Quarter key, match inner and outer tag. IP Address: Half key, match inner and outer tag, SIP and DIP. For non-IP frames, match outer tag only. MAC and IP Address: Full key, match inner and outer tag, SMAC, DMAC, SIP and DIP. Filtering on DMAC type (unicast/multicast/broadcast) is supported for any key type.	Nor- mal
Ad- dress Mode	The IP/MAC address mode specifying whether the QoS Control List (QCL) classification must be based on source (SMAC/SIP) or destination (DMAC/DIP) addresses on this port. This parameter is only used when the key type is Normal. The allowed values are: Source: Enable SMAC/SIP matching. Destination: Enable DMAC/DIP matching.	Source

Click **Save** button to save the setting configuration. Click **Reset** button to keep to the original setting.

2.14.2 Port Policing

Port Policing webpage allows the user to configure the Policer settings for all switch ports. Note that a policer can limit the bandwidth of received frames. It is located in front of the ingress queue. QoS Ingress Port Policer Table is shown in Figure 2.95. The descriptions of QoS Ingress Port Policers are explained in Table 2.84.



Configuration

- System
- Ports
- ERPS
- DHCPv4
- Security
- Aggregation
- Spanning Tree
- IPMC
- LLDP
 - LLDP
- SyncE
- MAC Table
- VLANs
 - Configuration
 - SVL
- VCL
 - MAC-based VLAN
 - Protocol-based VLAN
 - Protocol to Group
 - Group to VLAN
 - IP Subnet-based VLAN
- QoS
 - Port Classification
 - Port Policing

QoS Ingress Port Policers

Port	Enable	Rate	Unit	Flow Control
*	<input type="checkbox"/>	500	<> ▼	<input type="checkbox"/>
1	<input type="checkbox"/>	500	kbps ▼	<input type="checkbox"/>
2	<input type="checkbox"/>	500	kbps ▼	<input type="checkbox"/>
3	<input type="checkbox"/>	500	kbps ▼	<input type="checkbox"/>
4	<input type="checkbox"/>	500	kbps ▼	<input type="checkbox"/>
5	<input type="checkbox"/>	500	kbps ▼	<input type="checkbox"/>
6	<input type="checkbox"/>	500	kbps ▼	<input type="checkbox"/>
7	<input type="checkbox"/>	500	kbps ▼	<input type="checkbox"/>
8	<input type="checkbox"/>	500	kbps ▼	<input type="checkbox"/>
9	<input type="checkbox"/>	500	kbps ▼	<input type="checkbox"/>
10	<input type="checkbox"/>	500	kbps ▼	<input type="checkbox"/>
11	<input type="checkbox"/>	500	kbps ▼	<input type="checkbox"/>

Save Reset

Table 2.84 Descriptions of Port Policing Configuration of QoS:

La- bel	Description	Fac- tory De- fault
Port	The port number for which the configuration below applies.	-
En- able	Enable or disable the port policer for this switch port.	Unchecked
La- bel	Description	Fac- tory De- fault
Rate	Controls the rate for the port policer. This value is restricted to 100-3276700 when “Unit” is kbps or fps, and 1-3276 when “Unit” is Mbps or kfps. The rate is internally rounded up to the nearest value supported by the port policer.	500
Unit	Controls the unit of measure for the port policer rate as kbps, Mbps, fps or kfps.	kbps
Flow Con- trol	If flow control is enabled and the port is in flow control mode, then pause frames are sent instead of discarding frames.	Unchecked

Click **Save** button to save the setting configuration. Click **Reset** button to keep to the original setting.

2.14.3 Queue Policing

To configure the Queue Policer settings for all switch ports, the user can check the corresponding boxes in the table in Figure 2.96. Table 2.85 describes the labels in QoS Ingress Queue Policer Table.



Configuration

- System
- Ports
- ERPS
- DHCPv4
- Security
- Aggregation
- Spanning Tree
- IPMC
- LLDP
- LLDP
- SyncE
- MAC Table
- VLANs
- Configuration
- SVL
- VCL
- MAC-based VLAN
- Protocol-based VLAN
- Protocol to Group
- Group to VLAN
- IP Subnet-based VLAN
- QoS
- Port Classification
- Port Policing
- Queue Policing

QoS Ingress Queue Policers

Port	Queue 0 Enable	Queue 1 Enable	Queue 2 Enable	Queue 3 Enable	Queue 4 Enable	Queue 5 Enable	Queue 6 Enable	Queue 7 Enable
*	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
1	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
2	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
3	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
4	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
5	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
6	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
7	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
8	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
9	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
10	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
11	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Table 2.85 Descriptions of Queue Policing Configuration of QoS:

La- bel	Description	Fac- tory De- fault
Port	The port number for which the configuration below applies.	-
En- able (E)	Enable or disable the port policer for this switch port.	unchecked
Rate	Controls the rate for the port policer. This value is restricted to 100-3276700 when “Unit” is kbps, and 1-3276 when “Unit” is Mbps. The rate is internally rounded up to the nearest value supported by the port policer. This field is only shown if at least one of the queue policers are enabled.	500
Unit	Controls the unit of measure for the queue policer rate as kbps or Mbps. This field is only shown if at least one of the queue policers are enabled.	kbps

Click **Save** button to save the setting configuration. Click **Reset** button to keep to the original setting.

2.14.4 Port Scheduler

This webpage provides an overview of QoS Egress Port Schedulers for all switch ports as shown in Figure 2.97. Table 2.86 describes the labels in the QoS Egress Port Schedulers.



Configuration

- System
- Ports
- ERPS
- DHCPv4
- Security
- Aggregation
- Spanning Tree
- IPMC
- LLDP
 - LLDP
- SyncE
- MAC Table
- VLANs
 - Configuration
 - SVL
- VCL
 - MAC-based VLAN
 - Protocol-based VLAN
 - Protocol to Group
 - Group to VLAN
 - IP Subnet-based VLAN
- QoS
 - Port Classification
 - Port Policing
 - Queue Policing
 - Port Scheduler

QoS Egress Port Schedulers

Port	Mode	Weight							
		Q0	Q1	Q2	Q3	Q4	Q5	Q6	Q7
1	Strict Priority	-	-	-	-	-	-	-	-
2	Strict Priority	-	-	-	-	-	-	-	-
3	Strict Priority	-	-	-	-	-	-	-	-
4	Strict Priority	-	-	-	-	-	-	-	-
5	Strict Priority	-	-	-	-	-	-	-	-
6	Strict Priority	-	-	-	-	-	-	-	-
7	Strict Priority	-	-	-	-	-	-	-	-
8	Strict Priority	-	-	-	-	-	-	-	-
9	Strict Priority	-	-	-	-	-	-	-	-
10	Strict Priority	-	-	-	-	-	-	-	-
11	Strict Priority	-	-	-	-	-	-	-	-

Table 2.86 Descriptions of Port Scheduler Configuration of QoS:

La- bel	Description	Factory Default
Port	The logical port for the settings contained in the same row. Click on the port number in order to configure the schedulers.	-
Mode	Shows the scheduling mode for this port.	Strict Prior- ity
Qn	Shows the weight for this queue and port.	-

After Clicking hyperlink on any port, another webpage configuration will be launched, as shown in Figure 2.98. Table 2.87 describes the QoS Egress Port Scheduler and Shapers Port Configuration.

Configuration

- System
- Ports
- ERPS
- DHCPv4
- Security
- Aggregation
- Spanning Tree
 - Bridge Settings
 - MSTI Mapping
 - MSTI Priorities
 - CIST Ports
 - MSTI Ports
- IPMC
- LLDP
- SyncE
- MAC Table
- VLANs
- VCL
- QoS
 - Port Classification
 - Port Policing
 - Queue Policing
 - Port Scheduler
 - Port Shaping
 - Port Tag Remarking
 - Port DSCP
 - DSCP-Based QoS
 - DSCP Translation
 - DSCP Classification
 - QoS Control List
 - Storm Policing
- Mirroring
- PTP
- GVRP
- DDMI
- UDLD
- SD Backup
- Modbus Setting

Monitor

Diagnostics

Maintenance

QoS Egress Port Scheduler and Shapers Port 1

Scheduler Mode

Strict Priority

Queue Shaper						Port Shaper			
Enable	Rate	Unit	Rate-type	Excess	Credit	Enable	Rate	Unit	Rate-type
<input type="checkbox"/>	500	kbps	Line	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	500	kbps	Line
<input type="checkbox"/>	500	kbps	Line	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	500	kbps	Line
<input type="checkbox"/>	500	kbps	Line	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	500	kbps	Line
<input type="checkbox"/>	500	kbps	Line	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	500	kbps	Line
<input type="checkbox"/>	500	kbps	Line	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	500	kbps	Line
<input type="checkbox"/>	500	kbps	Line	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	500	kbps	Line
<input type="checkbox"/>	500	kbps	Line	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	500	kbps	Line
<input type="checkbox"/>	500	kbps	Line	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	500	kbps	Line

Save

Reset

Back

Table 2.87 Descriptions of QoS Egress Port Scheduler and Shapers Port Configuration:

Label	Description	Factory Default
Scheduler Mode	Controls how many of the queues are scheduled as strict and how many are scheduled as weighted on this switch port.	Strict Priority
Queue Shaper		
Enable	Controls whether the queue shaper is enabled for this queue on this switch port.	Unclicked
Rate	Controls the rate for the queue shaper. This value is restricted to 1003281943 when "Unit" is kbps, and 1-3281 when "Unit" is Mbps. The rate is internally rounded up to the nearest value supported by the queue shaper.	500
Unit	Controls the unit of measure for the queue shaper rate as kbps or Mbps.	Kbps
Rate-type	The rate type of the queue shaper. The allowed values are: Line: Specify that this shaper operates on line rate. Data: Specify that this shaper operates on data rate.	Line
Excess	Controls whether the queue is allowed to use excess bandwidth.	Unclicked
Credit	Controls whether the queue has credit-based shaper enabled.	Unclicked
Queue Scheduler		
Weight	Controls the weight for this queue. This value is restricted to 1-100. This parameter is only shown if "Scheduler Mode" is set to "Weighted".	
Percent	Shows the weight in percent for this queue. This parameter is only shown if "Scheduler Mode" is set to "Weighted".	
Port Shaper		
Enable	Controls whether the port shaper is enabled for this switch port.	Unclicked
Rate	Controls the rate for the port shaper. This value is restricted to 100-3281943 when "Unit" is kbps, and 1-3281 when "Unit" is Mbps. The rate is internally rounded up to the nearest value supported by the port shaper.	500
Unit	Controls the unit of measure for the port shaper rate as kbps or Mbps.	Kbps
Rate-type	The rate type of the port shaper. The allowed values are: Line: Specify that this shaper operates on line rate. Data: Specify that this shaper operates on data rate.	Line

Click Save button to save changes. Click Reset button to undo any changes made locally and revert to previously saved values. Click Back button to undo any changes made locally and return to the previous page.

2.14.5 Port Shaping

This webpage provides an overview of QoS Egress Port Shapers for all switch ports as shown in Figure 2.99. Table 2.88 describes the labels in QoS Egress Port Shapers.



Configuration

- System
- Ports
- ERPS
- DHCPv4
- Security
- Aggregation
- Spanning Tree
- IPMC
- LLDP
 - LLDP
- SyncE
- MAC Table
- VLANs
 - Configuration
 - SVL
- VCL
 - MAC-based VLAN
 - Protocol-based VLAN
 - Protocol to Group
 - Group to VLAN
 - IP Subnet-based VLAN
- QoS
 - Port Classification
 - Port Policing
 - Queue Policing
 - Port Scheduler
 - Port Shaping

QoS Egress Port Shapers

Port	Shapers								Port
	Q0	Q1	Q2	Q3	Q4	Q5	Q6	Q7	
1	-	-	-	-	-	-	-	-	-
2	-	-	-	-	-	-	-	-	-
3	-	-	-	-	-	-	-	-	-
4	-	-	-	-	-	-	-	-	-
5	-	-	-	-	-	-	-	-	-
6	-	-	-	-	-	-	-	-	-
7	-	-	-	-	-	-	-	-	-
8	-	-	-	-	-	-	-	-	-
9	-	-	-	-	-	-	-	-	-
10	-	-	-	-	-	-	-	-	-
11	-	-	-	-	-	-	-	-	-

Table 2.88 Descriptions of Port Shaping Configuration of QoS:

La- bel	Description	Factory De- fault
Port	The logical port for the settings contained in the same row. Click on the port number in order to configure the shapers.	-
Qn	Shows “-” for disabled or actual queue shaper rate - e.g., “800 Mbps”.	-
Port	Shows “-” for disabled or actual port shaper rate - e.g., “800 Mbps”.	-

After Clicking hyperlink on any port, another webpage configuration will be launched, as shown in Figure 2.100. Table 2.89 describes the detaled QoS Egress Port Scheduler and Shapers Port Configuration.

This page allows you to configure the Scheduler and Shapers for a specific port.

Configuration

- System
- Ports
- ERPS
- DHCPv4
- Security
- Aggregation
- Spanning Tree
 - Bridge Settings
 - MSTI Mapping
 - MSTI Priorities
 - CIST Ports
 - MSTI Ports
- IPMC
- LLDP
- SyncE
- MAC Table
- VLANs
- VCL
- QoS
 - Port Classification
 - Port Policing
 - Queue Policing
 - Port Scheduler
 - Port Shaping
 - Port Tag Remarking
 - Port DSCP
 - DSCP-Based QoS
 - DSCP Translation
 - DSCP Classification
 - QoS Control List
 - Storm Policing
- Mirroring
- PTP
- GVRP
- DDMI
- UDLD
- SD Backup
- Modbus Setting

Monitor

Diagnostics

Maintenance

QoS Egress Port Scheduler and Shapers Port 1

Scheduler Mode Strict Priority

Queue Shaper						Port Shaper			
Enable	Rate	Unit	Rate-type	Excess	Credit	Enable	Rate	Unit	Rate-type
<input type="checkbox"/>	500	kbps	Line	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	500	kbps	Line
<input type="checkbox"/>	500	kbps	Line	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	500	kbps	Line
<input type="checkbox"/>	500	kbps	Line	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	500	kbps	Line
<input type="checkbox"/>	500	kbps	Line	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	500	kbps	Line
<input type="checkbox"/>	500	kbps	Line	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	500	kbps	Line
<input type="checkbox"/>	500	kbps	Line	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	500	kbps	Line
<input type="checkbox"/>	500	kbps	Line	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	500	kbps	Line
<input type="checkbox"/>	500	kbps	Line	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	500	kbps	Line

S
T
R
I
C
T

☐ 500 kbps Line

Save
Reset
Back

Table 2.89 Descriptions of Detaled QoS Egress Port Scheduler and Shapers Port Configuration:

Label	Description	Factory Default
Scheduler Mode	Controls how many of the queues are scheduled as strict and how many are scheduled as weighted on this switch port.	Strict Priority
Queue Shaper		
Enable	Controls whether the queue shaper is enabled for this queue on this switch port.	Unclicked
Rate	Controls the rate for the queue shaper. This value is restricted to 1003281943 when "Unit" is kbps, and 1-3281 when "Unit" is Mbps. The rate is internally rounded up to the nearest value supported by the queue shaper.	500
Unit	Controls the unit of measure for the queue shaper rate as kbps or Mbps.	Kbps
Rate-type	The rate type of the queue shaper. The allowed values are: Line: Specify that this shaper operates on line rate. Data: Specify that this shaper operates on data rate.	Line
Excess	Controls whether the queue is allowed to use excess bandwidth.	Unclicked
Credit	Controls whether the queue has credit-based shaper enabled.	Unclicked
Queue Scheduler		
Weight	Controls the weight for this queue. This value is restricted to 1-100. This parameter is only shown if "Scheduler Mode" is set to "Weighted".	
Percent	Shows the weight in percent for this queue. This parameter is only shown if "Scheduler Mode" is set to "Weighted".	
Port Shaper		
Enable	Controls whether the port shaper is enabled for this switch port.	Unclicked
Rate	Controls the rate for the port shaper. This value is restricted to 1003281943 when "Unit" is kbps, and 1-3281 when "Unit" is Mbps. The rate is internally rounded up to the nearest value supported by the port shaper.	500
Unit	Controls the unit of measure for the port shaper rate as kbps or Mbps.	Kbps
Rate-type	The rate type of the port shaper. The allowed values are: Line: Specify that this shaper operates on line rate. Data: Specify that this shaper operates on data rate.	Line

Click Save button to save changes. Click Reset button to undo any changes made locally and revert to previously saved values. Click Back button to undo any changes made locally and return to the previous page.

2.14.6 Port Tag Remarking

This webpage provides an overview of QoS Egress Port Tag Remarking for all switch ports as shown in Figure 2.101. Table 2.90 describes the labels in QoS Egress Port Tag Remarking.



Configuration

- System
- Ports
- ERPS
- DHCPv4
- Security
- Aggregation
- Spanning Tree
- IPMC
- LLDP
 - LLDP
- SyncE
- MAC Table
- VLANs
 - Configuration
 - SVL
- VCL
 - MAC-based VLAN
 - Protocol-based VLAN
 - Protocol to Group
 - Group to VLAN
 - IP Subnet-based VLAN
- QoS
 - Port Classification
 - Port Policing
 - Queue Policing
 - Port Scheduler
 - Port Shaping
 - Port Tag Remarking

QoS Egress Port Tag Remarking

Port	Mode
1	Classified
2	Classified
3	Classified
4	Classified
5	Classified
6	Classified
7	Classified
8	Classified
9	Classified
10	Classified
11	Classified

Table 2.90 Descriptions of Port Tag Remarking Configuration of QoS:

La- bel	Description
Port	The logical port for the settings contained in the same row. Click on the port number in order to configure tag remarking.
Mode	Shows the tag remarking mode for this port. Classified: Use classified PCP/DEI values. Default: Use default PCP/DEI values. Mapped: Use mapped versions of QoS class and DP level.

After clicking into any port, the following webpage will be launched as shown in Figure 2.102. Table 2.901 describes the labels in Each Port Tag Remarking Mode of QoS.

Configuration

- System
- Ports
- ERPS
- DHCPv4
- Security
- Aggregation
- Spanning Tree
- IPMC
- LLDP
- SyncE
- MAC Table
- VLANs
- VCL
- QoS
 - Port Classification
 - Port Policing
 - Queue Policing
 - Port Scheduler
 - Port Shaping
 - Port Tag Remarking

QoS Egress Port Tag Remarking Port 1

Tag Remarking Mode

Classified ▼

Save
 Reset
 Cancel

Table 2.91 Descriptions for Port Tag Remarking Configuration of Mode:

Label	Description
Mode	Controls the tag remarking mode for this port.
Classified	Use classified PCP/DEI values.
Default	Use default PCP/DEI values
Mapped	Use mapped versions of CoS and DPL.
PCP/DEI Configuration	Controls the default PCP and DEI values used when the mode is set to Default.
(CoS, DPL) to (PCP, DEI) Mapping	Controls the mapping of the classified (CoS, DPL) to (PCP, DEI) values when the mode is set to Mapped.

2.14.7 Port DSCP

The Port DSCP webpage allows the user to configure the basic Quality of Server (QoS) Port Differentiated Service Code Point (DSCP) Configuration settings for all switch ports. The QoS Port DSCP Configuration table is shown in Figure 2.103. The user can change the setting of either or both ingress or egress traffic. Table 2.92 explains the options for each port in QoS Port DSCP Configuration.

Configuration

- System
- Ports
- ERPS
- DHCPv4
- Security
- Aggregation
- Spanning Tree
- IPMC
- LLDP
 - LLDP
- SyncE
- MAC Table
- VLANs
 - Configuration
 - SVL
- VCL
 - MAC-based VLAN
 - Protocol-based VLAN
 - Protocol to Group
 - Group to VLAN
 - IP Subnet-based VLAN
- QoS
 - Port Classification
 - Port Policing
 - Queue Policing
 - Port Scheduler
 - Port Shaping
 - Port Tag Remarking
 - Port DSCP

QoS Port DSCP Configuration

Port	Ingress		Egress
	Translate	Classify	Rewrite
*	<input type="checkbox"/>	<> ▾	<> ▾
1	<input type="checkbox"/>	Disable ▾	Disable ▾
2	<input type="checkbox"/>	Disable ▾	Disable ▾
3	<input type="checkbox"/>	Disable ▾	Disable ▾
4	<input type="checkbox"/>	Disable ▾	Disable ▾
5	<input type="checkbox"/>	Disable ▾	Disable ▾
6	<input type="checkbox"/>	Disable ▾	Disable ▾
7	<input type="checkbox"/>	Disable ▾	Disable ▾
8	<input type="checkbox"/>	Disable ▾	Disable ▾
9	<input type="checkbox"/>	Disable ▾	Disable ▾
10	<input type="checkbox"/>	Disable ▾	Disable ▾
11	<input type="checkbox"/>	Disable ▾	Disable ▾

Table 2.92 Descriptions of Port DSCP Configuration of QoS:

La- bel		Description	Fac- tory De- fault
Port		The Port column shows the list of ports for which you can configure DSCP ingress and egress settings.	-
Ingress	Trans- late	In Ingress settings you can change ingress translation and classification settings for individual ports. There are two configuration parameters available in Ingress: 1. Translate: To Enable the Ingress Translation click the checkbox.	Unchecked
	Clas- sify	2. Classify: Classification for a port have 4 different values. Disable: No Ingress DSCP Classification. DSCP=0: Classify if incoming (or translated if enabled) DSCP is 0. Selected: Classify only selected DSCP for which classification is enabled as specified in DSCP Translation window for the specific DSCP. All: Classify all DSCP.	Dis- able
Egress Rewrite		Port Egress Rewriting can be one of – Disable: No Egress rewrite. Enable: Rewrite enabled without remapping. Remap DP Unaware: DSCP from analyser is remapped and frame is remarked with remapped DSCP value. DSCP value is always taken from the ‘DSCP Translation\Egress Remap DP0’ table. Remap DP Aware: DSCP from analyser is remapped and frame is remarked with remapped DSCP value. Depending on the DP level of the frame, the remapped DSCP value is either taken from the ‘DSCP Translation\Egress Remap DP0’ table or from the ‘DSCP Translation\Egress Remap DP1’ table.	Dis- able

Click **Save** button to save the setting configuration. Click **Reset** button to keep to the original setting.

2.14.8 DSCP-Based QoS

This page as shown in Figure 2.104 allows the user to configure the basic QoS DSCP based QoS Ingress Classification settings for the managed switch. The maximum number of supported DSCP (Differentiated Services Code Point) is 64 as shown in the table. Table 2.93 describes the options for each DSCP.

Configuration

- System
- Ports
- ERPS
- DHCPv4
- Security
- Aggregation
- Spanning Tree
- IPMC
- LLDP
 - LLDP
- SyncE
- MAC Table
- VLANs
 - Configuration
 - SVL
- VCL
 - MAC-based VLAN
 - Protocol-based VLAN
 - Protocol to Group
 - Group to VLAN
 - IP Subnet-based VLAN
- QoS
 - Port Classification
 - Port Policing
 - Queue Policing
 - Port Scheduler
 - Port Shaping
 - Port Tag Remarking
 - Port DSCP
 - DSCP-Based QoS
 - DSCP Translation
 - DSCP Classification
 - QoS Control List
 - Storm Policing
- Mirroring
- PTP
- GVRP
- DDMI
- UDLD
- SD Backup
- Modbus Setting

Monitor

Diagnostics

Maintenance

DSCP-Based QoS Ingress Classification

DSCP	Trust	CoS	DPL
*	<input type="checkbox"/>	<> ▼	<> ▼
0 (BE)	<input type="checkbox"/>	0 ▼	0 ▼
1	<input type="checkbox"/>	0 ▼	0 ▼
2	<input type="checkbox"/>	0 ▼	0 ▼
3	<input type="checkbox"/>	0 ▼	0 ▼
4	<input type="checkbox"/>	0 ▼	0 ▼
5	<input type="checkbox"/>	0 ▼	0 ▼
6	<input type="checkbox"/>	0 ▼	0 ▼
7	<input type="checkbox"/>	0 ▼	0 ▼
8 (CS1)	<input type="checkbox"/>	0 ▼	0 ▼
9	<input type="checkbox"/>	0 ▼	0 ▼
10 (AF11)	<input type="checkbox"/>	0 ▼	0 ▼
11	<input type="checkbox"/>	0 ▼	0 ▼
12 (AF12)	<input type="checkbox"/>	0 ▼	0 ▼
13	<input type="checkbox"/>	0 ▼	0 ▼
14 (AF13)	<input type="checkbox"/>	0 ▼	0 ▼
15	<input type="checkbox"/>	0 ▼	0 ▼
16 (CS2)	<input type="checkbox"/>	0 ▼	0 ▼
17	<input type="checkbox"/>	0 ▼	0 ▼
18 (AF21)	<input type="checkbox"/>	0 ▼	0 ▼
19	<input type="checkbox"/>	0 ▼	0 ▼
20 (AF22)	<input type="checkbox"/>	0 ▼	0 ▼
21	<input type="checkbox"/>	0 ▼	0 ▼
22 (AF23)	<input type="checkbox"/>	0 ▼	0 ▼
23	<input type="checkbox"/>	0 ▼	0 ▼
24 (CS3)	<input type="checkbox"/>	0 ▼	0 ▼
25	<input type="checkbox"/>	0 ▼	0 ▼
26 (AF31)	<input type="checkbox"/>	0 ▼	0 ▼
27	<input type="checkbox"/>	0 ▼	0 ▼
28 (AF32)	<input type="checkbox"/>	0 ▼	0 ▼
29	<input type="checkbox"/>	0 ▼	0 ▼
30 (AF33)	<input type="checkbox"/>	0 ▼	0 ▼

Table 2.93 Descriptions of DSCP-Based Configuration of QoS:

La- bel	Description	Fac- tory De- fault
DSCP	Maximum number of supported DSCP values is 64.	-
Trust	Controls whether a specific DSCP value is trusted. Only frames with trusted DSCP values are mapped to a specific QoS class and Drop Precedence Level (DPL). Frames with untrusted DSCP values are treated as a non-IP frame.	Unchecked
CoS	CoS class value can be any of (0-7)	0
DPL	Drop Precedence Level (0-1)	0

Click **Save** button to save the setting configuration. Click **Reset** button to keep to the original setting.

2.14.9 DSCP Translation

DSCP Translation webpage as shown in Figure 2.105 allows you to configure the basic QoS DSCP Translation settings for the managed switch. DSCP translation can be done in Ingress or Egress. Table 2.94 describes the setting options for DSCP Translation.

Configuration

- System
- Ports
- ERPS
- DHCPv4
- Security
- Aggregation
- Spanning Tree
- IPMC
- LLDP
- LLDP
- SyncE
- MAC Table
- VLANs
 - Configuration
 - SVL
- VCL
 - MAC-based VLAN
 - Protocol-based VLAN
 - Protocol to Group
 - Group to VLAN
 - IP Subnet-based VLAN
- QoS
 - Port Classification
 - Port Policing
 - Queue Policing
 - Port Scheduler
 - Port Shaping
 - Port Tag Remarking
 - Port DSCP
 - DSCP-Based QoS
 - DSCP Translation
 - DSCP Classification
 - QoS Control List
 - Storm Policing
- Mirroring
- PTP
- GVRP
- DDMI
- UDLD
- SD Backup
- Modbus Setting

Monitor

Diagnostics

Maintenance

DSCP Translation

DSCP	Ingress		Egress	
	Translate	Classify	Remap DP0	Remap DP1
*	<> ▼	<input type="checkbox"/>	<> ▼	<> ▼
0 (BE)	0 (BE) ▼	<input type="checkbox"/>	0 (BE) ▼	0 (BE) ▼
1	1 ▼	<input type="checkbox"/>	1 ▼	1 ▼
2	2 ▼	<input type="checkbox"/>	2 ▼	2 ▼
3	3 ▼	<input type="checkbox"/>	3 ▼	3 ▼
4	4 ▼	<input type="checkbox"/>	4 ▼	4 ▼
5	5 ▼	<input type="checkbox"/>	5 ▼	5 ▼
6	6 ▼	<input type="checkbox"/>	6 ▼	6 ▼
7	7 ▼	<input type="checkbox"/>	7 ▼	7 ▼
8 (CS1)	8 (CS1) ▼	<input type="checkbox"/>	8 (CS1) ▼	8 (CS1) ▼
9	9 ▼	<input type="checkbox"/>	9 ▼	9 ▼
10 (AF11)	10 (AF11) ▼	<input type="checkbox"/>	10 (AF11) ▼	10 (AF11) ▼
11	11 ▼	<input type="checkbox"/>	11 ▼	11 ▼
12 (AF12)	12 (AF12) ▼	<input type="checkbox"/>	12 (AF12) ▼	12 (AF12) ▼
13	13 ▼	<input type="checkbox"/>	13 ▼	13 ▼
14 (AF13)	14 (AF13) ▼	<input type="checkbox"/>	14 (AF13) ▼	14 (AF13) ▼
15	15 ▼	<input type="checkbox"/>	15 ▼	15 ▼
16 (CS2)	16 (CS2) ▼	<input type="checkbox"/>	16 (CS2) ▼	16 (CS2) ▼
17	17 ▼	<input type="checkbox"/>	17 ▼	17 ▼
18 (AF21)	18 (AF21) ▼	<input type="checkbox"/>	18 (AF21) ▼	18 (AF21) ▼
19	19 ▼	<input type="checkbox"/>	19 ▼	19 ▼
20 (AF22)	20 (AF22) ▼	<input type="checkbox"/>	20 (AF22) ▼	20 (AF22) ▼
21	21 ▼	<input type="checkbox"/>	21 ▼	21 ▼
22 (AF23)	22 (AF23) ▼	<input type="checkbox"/>	22 (AF23) ▼	22 (AF23) ▼
23	23 ▼	<input type="checkbox"/>	23 ▼	23 ▼
24 (CS3)	24 (CS3) ▼	<input type="checkbox"/>	24 (CS3) ▼	24 (CS3) ▼
25	25 ▼	<input type="checkbox"/>	25 ▼	25 ▼
26 (AF31)	26 (AF31) ▼	<input type="checkbox"/>	26 (AF31) ▼	26 (AF31) ▼
27	27 ▼	<input type="checkbox"/>	27 ▼	27 ▼
28 (AF32)	28 (AF32) ▼	<input type="checkbox"/>	28 (AF32) ▼	28 (AF32) ▼
29	29 ▼	<input type="checkbox"/>	29 ▼	29 ▼
30 (AF33)	30 (AF33) ▼	<input type="checkbox"/>	30 (AF33) ▼	30 (AF33) ▼
31	31 ▼	<input type="checkbox"/>	31 ▼	31 ▼
32 (CS4)	32 (CS4) ▼	<input type="checkbox"/>	32 (CS4) ▼	32 (CS4) ▼
33	33 ▼	<input type="checkbox"/>	33 ▼	33 ▼
34 (AF41)	34 (AF41) ▼	<input type="checkbox"/>	34 (AF41) ▼	34 (AF41) ▼
35	35 ▼	<input type="checkbox"/>	35 ▼	35 ▼

Table 2.94 Descriptions of DSCP Translation Configuration of QoS:

La- bel		Description	Fac- tory De- fault
DSCP		Maximum number of supported DSCP values are 64 and valid DSCP value ranges from 0 to 63.	-
Ingress	Trans- late	Ingress side DSCP can be first translated to new DSCP before using the DSCP for QoS class and DPL map. Translate: DSCP at Ingress side can be translated to any of (0-63) DSCP values.	-
	Clas- sify	Click to enable Classification at Ingress side.	Unchecked
Egress		There are the following configurable parameters for Egress side – 1. Remap DP0 Controls the remapping for frames with DP level 0. 2. Remap DP1 Controls the remapping for frames with DP level 1.	-
DP0 /DP1		Select the DSCP value from select menu to which you want to remap. DSCP value ranges from 0 to 63.	-

Click **Save** button to save the setting configuration. Click **Reset** button to keep to the original setting.

2.14.10 DSCP Classification

The DSCP Classification webpage as shown in Figure 2.106 allows you to configure the mapping of Class of Service (CoS) or QoS Class and Drop Precedence Level (DPL) to DSCP value. Table 2.95 explains the options for DSCP Classification.

Configuration

- System
- Ports
- ERPS
- DHCPv4
- Security
- Aggregation
- Spanning Tree
- IPMC
- LLDP
 - LLDP
- SyncE
- MAC Table
- VLANs
 - Configuration
 - SVL
- VCL
 - MAC-based VLAN
 - Protocol-based VLAN
 - Protocol to Group
 - Group to VLAN
 - IP Subnet-based VLAN
- QoS
 - Port Classification
 - Port Policing
 - Queue Policing
 - Port Scheduler
 - Port Shaping
 - Port Tag Remarking
 - Port DSCP
 - DSCP-Based QoS
 - DSCP Translation
 - DSCP Classification

DSCP Classification


CoS	DSCP DP0	DSCP DP1
*	<> ▼	<> ▼
0	0 (BE) ▼	0 (BE) ▼
1	0 (BE) ▼	0 (BE) ▼
2	0 (BE) ▼	0 (BE) ▼
3	0 (BE) ▼	0 (BE) ▼
4	0 (BE) ▼	0 (BE) ▼
5	0 (BE) ▼	0 (BE) ▼
6	0 (BE) ▼	0 (BE) ▼
7	0 (BE) ▼	0 (BE) ▼

Table 2.95 Descriptions of DSCP Classification Configuration of QoS

Label	Description	Factory Default
QoS Class	Actual QoS class.	-
DSCP DP0	Select the classified DSCP value (0-63) for Drop Precedence Level 0.	0
DSCP DP1	Select the classified DSCP value (0-63) for Drop Precedence Level 1.	0

Click **Save** button to save the setting configuration. Click **Reset** button to keep to the original setting.

2.14.11 QoS Control List

The QoS Control List webpage as shown in Figure 2.107 shows the QoS Control List (QCL), which is made up of the QCEs (QoS Control Entries). Each row describes a QCE that is defined. Table 2.96 describes the definition of each column in the list. The maximum number of QCEs is 256 on each switch. To add a new entry, click on the  plus sign to add a new QCE to the list and the webpage is updated as shown in Figure 2.108. This updated webpage allows the user to edit or insert one single QoS Control Entry at a time. A QCE consists of several parameters as described in Table 2.97. These parameters vary according to the frame type that the user selected.

Managed Switch



Configuration

- System
- Ports
- ERPS
- DHCPv4
- Security
- Aggregation
- Spanning Tree
- IPMC
- LLDP
- LLDP
- SyncE
- MAC Table
- VLANs
 - Configuration
 - SVL
- VCL
 - MAC-based VLAN
 - Protocol-based VLAN
 - Protocol to Group
 - Group to VLAN
 - IP Subnet-based VLAN
- QoS
 - Port Classification
 - Port Policing
 - Queue Policing
 - Port Scheduler
 - Port Shaping
 - Port Tag Remarking
 - Port DSCP
 - DSCP-Based QoS
 - DSCP Translation
 - DSCP Classification
 - QoS Control List







QoS Control List Configuration

QCE	Port	DMAC	SMAC	Tag Type	VID	PCP	DEI	Frame Type	Action					
									CoS	DPL	DSCP	PCP	DEI	Policy

Table 2.96 Descriptions of QoS Control List Configuration:

La- bel	Description	Fac- tory De- fault
QCE	Indicates the QCE id.	-
Port	Indicates the list of ports configured with the QCE or 'Any'.	-
DMAC	Indicates the destination MAC address. Possible values are: Any: Match any DMAC. Unicast: Match unicast DMAC. Multicast: Match multicast DMAC. Broadcast: Match broadcast DMAC. <MAC>: Match specific DMAC. The default value is 'Any'.	-
SMAC	Match specific source MAC address or 'Any'. If a port is configured to match on destination addresses, this field indicates the DMAC.	-
Tag	Indicates tag type. Possible values are: Any: Match tagged and untagged frames. Untagged: Match untagged frames. Tagged: Match tagged frames. C-Tagged: Match C-tagged frames. S-Tagged: Match S-tagged frames. The default value is 'Any'.	-
VID	Indicates (VLAN ID), either a specific VID or range of VIDs. VID can be in the range 14095 or 'Any'	-
PCP	Priority Code Point: Valid values of PCP are specific (0, 1, 2, 3, 4, 5, 6, 7) or range (0-1, 23, 4-5, 6-7, 0-3, 4-7) or 'Any'.	-
DEI	Drop Eligible Indicator: Valid value of DEI are 0, 1 or 'Any'.	-
Frame Type	Indicates the type of frame. Possible values are: Any: Match any frame type. Ethernet: Match EtherType frames. LLC: Match (LLC) frames. SNAP: Match (SNAP) frames. IPv4: Match IPv4 frames. IPv6: Match IPv6 frames.	-
Action Parameters	Indicates the classification action taken on ingress frame if parameters configured are matched with the frame's content. Possible actions are: CoS: Classify Class of Service. DPL: Classify Drop Precedence Level. DSCP: Classify DSCP value. PCP: Classify PCP value. DEI: Classify DEI value. Policy: Classify ACL Policy number.	-

The user can modify each QCE (QoS Control Entry) in the table using the following buttons:

-  : Inserts a new QCE before the current row.
-  : Edits the QCE.
-  : Moves the QCE up the list.
-  : Moves the QCE down the list.
-  : Deletes the QCE.
-  : The lowest plus sign adds a new entry at the bottom of the QCE listings.

Configuration

- System
- Ports
- ERPS
- DHCPv4
- Security
- Aggregation
- Spanning Tree
- IPMC
- LLDP
- LLDP
- SyncE
- MAC Table
- VLANs
 - Configuration
 - SVL
 - VCL
 - MAC-based VLAN
 - Protocol-based VLAN
 - Protocol to Group
 - Group to VLAN
 - IP Subnet-based VLAN
- QoS
 - Port Classification
 - Port Policing
 - Queue Policing
 - Port Scheduler
 - Port Shaping
 - Port Tag Remarking
 - Port DSCP
 - DSCP-Based QoS
 - DSCP Translation
 - DSCP Classification
 - QoS Control List
 - Storm Policing

QCE Configuration

Port Members										
1	2	3	4	5	6	7	8	9	10	11
<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>

Key Parameters

DMAC	Any ▼
SMAC	Any ▼
Tag	Any ▼
VID	Any ▼
PCP	Any ▼
DEI	Any ▼
Inner Tag	Any ▼
Inner VID	Any ▼
Inner PCP	Any ▼
Inner DEI	Any ▼
Frame Type	Any ▼

Action Parameters

CoS	0 ▼
DPL	Default ▼
DSCP	Default ▼
PCP	Default ▼
DEI	Default ▼
Policy	

Table 2.97 Descriptions of QoS Control Entry's Parameters:

La- bel	Description	Fac- tory De- fault
Port Mem- bers	Check the checkbox button to include the port in the QCL entry. By default, all ports are included.	All ports
Key Pa- ram- e- ters	Key configuration is described as below: DMAC: Destination MAC address: Possible values are 'Unicast', 'Multicast', 'Broadcast', 'Specific' (xx-xx-xx-xx-xx-xx) or 'Any'. SMAC: Source MAC address: xx-xx-xx-xx-xx-xx or 'Any'. Tag: Value of Tag field can be 'Untagged', 'Tagged', 'C-Tagged', 'S-Tagged' or 'Any'. VID: Valid value of VLAN ID can be any value in the range 1-4095 or 'Any'; user can enter either a specific value or a range of VIDs. PCP: Valid value PCP are specific (0, 1, 2, 3, 4, 5, 6, 7) or range (0-1, 2-3, 4-5, 6-7, 0-3, 4-7) or 'Any'. DEI: Valid value of DEI can be '0', '1' or 'Any'. Inner Tag: Value of Inner Tag field can be 'Untagged', 'Tagged', 'C-Tagged', 'S-Tagged' or 'Any'. All inner tag parameters depend on the Key Type configuration in QoS Ingress Port Classification Help. Inner: VID Valid value of Inner VLAN ID can be any value in the range 1-4095 or 'Any'; user can enter either a specific value or a range of VIDs. Inner PCP: Valid value of Inner PCP are specific (0, 1, 2, 3, 4, 5, 6, 7) or range (0-1, 2-3, 4-5, 6-7, 0-3, 4-7) or 'Any'. Inner DEI: Valid value of Inner DEI can be '0', '1' or 'Any'. Frame Type: Frame Type can have any of the following values: Any EtherType LLC SNAP IPv4 IPv6 Note: All frame types are explained in the next Table.	Any
Ac- tion Pa- ram- e- ters	CoS: Class of Service: (0-7) or 'Default'. DPL: Drop Precedence Level: (0-1) or 'Default'. DSCP: DSCP: (0-63, BE, CS1-CS7, EF or AF11-AF43) or 'Default'. PCP PCP: (0-7) or 'Default'. Note: PCP and DEI cannot be set individually. DEI: (0-1) or 'Default'. Policy: ACL Policy number: (0-63) or 'Default' (empty field). 'Default' means that the default classified value is not modified by this QCE.	De- fault

Table 2.98 Description of Frame Type:

Fram Type	Description
Any	Allow all types of frames.
Ether Type	Ether Type Valid Ether Type can be 0x600-0xFFFF excluding 0x800(IPv4) and 0x86DD(IPv6) or 'Any'.
LLC	DSAP Address Valid DSAP (Destination Service Access Point) can vary from 0x00 to 0xFF or 'Any'. SSAP Address Valid SSAP(Source Service Access Point) can vary from 0x00 to 0xFF or 'Any'. Control Valid Control field can vary from 0x00 to 0xFF or 'Any'.
SNAP	PID Valid PID (a.k.a Ether Type) can be 0x0000-0xFFFF or 'Any'.
IPv4	Protocol IP protocol number: (0-255, 'TCP' or 'UDP') or 'Any'. Source IP Specific Source IP address in value/mask format or 'Any'. IP and Mask are in the format x.y.z.w where x, y, z, and w are decimal numbers between 0 and 255. When Mask is converted to a 32-bit binary string and read from left to right, all bits following the first zero must also be zero. Destination IP Specific Destination IP address in value/mask format or 'Any'. IP Fragment IPv4 frame fragmented option: 'Yes', 'No' or 'Any'. DSCP Diffserv Code Point value (DSCP): It can be a specific value, range of values or 'Any'. DSCP values are in the range 0-63 including BE, CS1-CS7, EF or AF11-AF43. Sport Source TCP/UDP port:(0-65535) or 'Any', specific or port range applicable for IP protocol UDP/TCP. Dport Destination TCP/UDP port:(0-65535) or 'Any', specific or port range applicable for IP protocol UDP/TCP.
IPv6	Protocol IP protocol number: (0-255, 'TCP' or 'UDP') or 'Any'. Source IP 32 LS bits of IPv6 source address in value/mask format or 'Any'. Destination IP Specific Destination IP address in value/mask format or 'Any'. DSCP Diffserv Code Point value (DSCP): It can be a specific value, range of values or 'Any'. DSCP values are in the range 0-63 including BE, CS1-CS7, EF or AF11-AF43. Sport Source TCP/UDP port:(0-65535) or 'Any', specific or port range applicable for IP protocol UDP/TCP. Dport Destination TCP/UDP port:(0-65535) or 'Any', specific or port range applicable for IP protocol UDP/TCP.

Click **Save** button to save the configuration and move to main QCL page. Click **Reset** button to undo any changes made locally and revert to previously saved values. Click **Cancel** button to return to the previous page without saving the configuration change.

2.14.12 Storm Policing

Global storm policers for the managed switch are configured on this webpage as shown in Figure 2.109. There are unicast storm policer, multicast storm policer, and broadcast storm policer. These only affect flooded frames, i.e., frames with a (VLAN ID, DMAC) pair not present in the MAC Address table. The settings are described in Table 2.99.

Configuration

- System
- Ports
- ERPS
- DHCPv4
- Security
- Aggregation
- Spanning Tree
- IPMC
- LLDP
 - LLDP
- SyncE
- MAC Table
- VLANs
 - Configuration
 - SVL
- VCL
 - MAC-based VLAN
 - Protocol-based VLAN
 - Protocol to Group
 - Group to VLAN
 - IP Subnet-based VLAN
- QoS
 - Port Classification
 - Port Policing
 - Queue Policing
 - Port Scheduler
 - Port Shaping
 - Port Tag Remarking
 - Port DSCP
 - DSCP-Based QoS
 - DSCP Translation
 - DSCP Classification
 - QoS Control List
 - Storm Policing

Global Storm Policer Configuration

Frame Type	Enable	Rate	Unit
Unicast	<input type="checkbox"/>	1	fps ▾
Multicast	<input type="checkbox"/>	1	fps ▾
Broadcast	<input type="checkbox"/>	1	fps ▾

Table 2.99 Descriptions of Storm Policing Configuration of QoS:


La- bel	Description	Fac- tory De- fault
Frame Type	The frame type for which the configuration below applies.	-
En- able	Enable or disable the global storm policer for the given frame type.	Unchecked
Rate	Controls the rate for the global storm policer. This value is restricted to 1-1024000 when "Unit" is fps, and 1-1024 when "Unit" is kfps. The rate is internally rounded up to the nearest value supported by the global storm policer. Supported rates are 1, 2, 4, 8, 16, 32, 64, 128, 256 and 512 fps for rates <= 512 fps and 1, 2, 4, 8, 16, 32, 64, 128, 256, 512 and 1024 kfps for rates > 512 fps.	1
Unit	Controls the unit of measure for the global storm policer rate as fps or kfps.	fps

Click **Save** button to save the setting configuration. Click **Reset** button to undo any changes made locally and revert to previously saved values.

2.15 Mirroring

In order to help the network administrator keeps track of network activities, the managed switch supports port mirroring, which allows incoming and/or outgoing traffic to be monitored by a single port that is defined as a **mirror port**. Note that the mirrored network traffic can be analysed by a network analyser or a sniffer for network performance or security monitoring purposes. Figure 2.111 shows the Mirror Port webpage. The descriptions of port mirroring options are summarized in Table 2.100.

Port mirroring or traffic mirroring enables users to monitor network traffic passing in, or out of, a set of ports. can then pass this traffic to a destination port on the same router. Traffic mirroring copies traffic from one or more source ports and sends the copied traffic to one or more destinations for analysis by a network analyser or other monitoring device. However, traffic from one source port can be copied to only one destination port. Traffic mirroring does not affect the flow of traffic on the source ports, and allows the mirrored traffic to be sent to a destination port. For example, you need to attach a traffic analyser to the router if you want to capture Ethernet traffic that is sent by host A to host B. Traffic between host A and host B is also seen on the destination port.

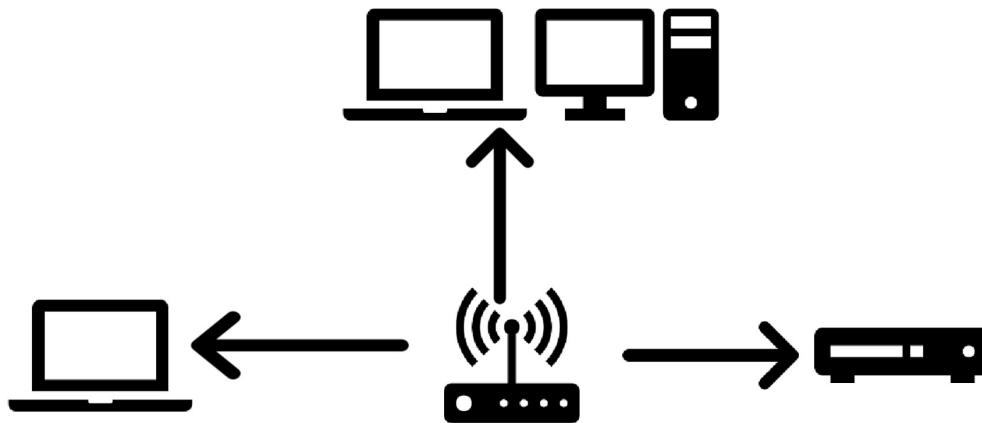

When local traffic mirroring is enabled, the traffic analyser is attached directly to the port of the same router that is configured to receive a copy of every packet that host A sends. This port is called a traffic mirroring port. The other sections of this document describe how you can fine tune this feature.

The following types of traffic mirroring are supported:

- Local traffic mirroring: This is the most basic form of traffic mirroring. The network analyzer or sniffer is directly attached to the destination interface. In other words, all monitored ports are all located on the same router as the destination port.
- Layer 2 or Layer 3 traffic mirroring: Both Layer 2 and Layer 3 source ports can be mirrored.

Mirroring is a feature for switched port analyzer. The administrator can use the Mirroring to debug network problems. The selected traffic can be mirrored or copied on a destination port where a network analyzer can be attached to analyze the network traffic. Remote Mirroring is an extend function of Mirroring. It can extend the destination port in other switch so that the administrator can analyze the network traffic on the other switches. If you want to get the tagged mirrored traffic, you have to set VLAN egress tagging as “Tag All” on the reflector port. On the other hand, if you want to get untagged mirrored traffic, you have to set VLAN egress tagging as “Untag ALL” on the reflector port.



Configuration

- System
- Ports
- ERPS
- DHCPv4
- Security
- Aggregation
- Spanning Tree
- IPMC
- LLDP
- LLDP
- SyncE
- MAC Table
- VLANs
- VCL
- QoS
- Mirroring
- PTP
- GVRP
- DDMI
- UDLD
- SD Backup
- Modbus Setting

Monitor

Diagnostics

Maintenance

Mirror Configuration Table

Session ID	Mode	Type
<u>1</u>	Disabled	Mirror

Table 2.100 Descriptions of Mirroring Webpage

La- bel	Description	Fac- tory De- fault
Ses- sion ID	Display Mirror feature session id.	1
Mode	To Enabled/Disabled the Mirroring function.	Dis- abled
Type	Display switch mirroring type. Mirror: The switch is running on mirror mode. The source port(s) and destination port are located on this switch.	Mir- ror
VLAN ID	The VLAN ID points out where the monitor packet will copy to. The default VLAN ID is 200.	-
Port Con- fig- u- ra- tion	Port: The logical port for the settings contained in the same row. Source: select mirror mode Disabled: Neither frames transmitted nor frames received are mirrored. Both: Frames received and frames transmitted are mirrored on the Destination port. Rx only: Frames received on this port are mirrored on the Destination port. Frames transmitted are not mirrored. Tx only: Frames transmitted on this port are mirrored on the Destination port. Frames received are not mirrored. Destination: select destination port This checkbox is designed for mirror Mirroring. The destination port is a switched port that you receive a copy of traffic from the source port. Note1: On mirror mode, the device only supports one destination port. Note2: The destination port needs to disable MAC Table learning.	-

Configuration

- System
- Ports
- ERPS
- DHCPv4
- Security
- Aggregation
- Spanning Tree
- IPMC
- LLDP
- LLDP
- SyncE
- MAC Table
- VLANs
- VCL
- QoS
- Mirroring
- PTP
- GVRP
- DDMI
- UDLD
- SD Backup
- Modbus Setting

Monitor

Diagnostics

Maintenance

Mirror Configuration

Global Settings

Session ID	1 ▼
Mode	Disabled ▼
Type	Mirror ▼

Source VLAN(s) Configuration

VLAN ID	
---------	--

Port Configuration

Port	Source	Destination
*	<> ▼	<input type="checkbox"/>
Port 1	Disabled ▼	<input type="checkbox"/>
Port 2	Disabled ▼	<input type="checkbox"/>
Port 3	Disabled ▼	<input type="checkbox"/>
Port 4	Disabled ▼	<input type="checkbox"/>
Port 5	Disabled ▼	<input type="checkbox"/>
Port 6	Disabled ▼	<input type="checkbox"/>
Port 7	Disabled ▼	<input type="checkbox"/>
Port 8	Disabled ▼	<input type="checkbox"/>
Port 9	Disabled ▼	<input type="checkbox"/>
Port 10	Disabled ▼	<input type="checkbox"/>
Port 11	Disabled ▼	<input type="checkbox"/>
CPU	Disabled ▼	<input type="checkbox"/>

Save	Reset	Cancel
------	-------	--------

2.16 PTP

Precision Time Protocol (PTP) is defined in IEEE 1588 as Precision Clock Synchronization for Networked Measurements and Control Systems, and was developed to synchronize the clocks in packet-based networks that include distributed device clocks of varying precision and stability. PTP, which is a high-precision time protocol, can be used with measurement and control systems in local area network that require precise time synchronization. PTP is designed specifically for industrial, networked measurement and control systems, and is optimal for use in distributed systems because it requires minimal bandwidth and little processing overhead. Smart grid power automation applications such as peak-hour billing, virtual power generators, and outage monitoring and management, require extremely precise time accuracy and stability. Timing precision improves network monitoring accuracy and troubleshooting ability. In addition to providing time accuracy and synchronization, the PTP message-based

protocol can be implemented on packetbased networks, such as Ethernet networks. The benefits of using PTP in an Ethernet network include:

- Low cost and easy setup in existing Ethernet networks
- Limited bandwidth is required for PTP data packets

In an Ethernet network, switches provide a full-duplex communication path between network devices. Switches send data packets to packet destinations using address information contained in the packets. When the switch attempts to send multiple packets simultaneously, some of the packets are buffered by the switch so that they are not lost before they are sent. When the buffer is full, the switch delays sending packets. This delay can cause device clocks on the network to lose synchronization with one another. Additional delays can occur when packets entering a switch are stored in local memory while the switch searches the MAC address table to verify packet CRC fields. This process causes variations in packet forwarding time latency, and these variations can result in asymmetrical packet delay times. Adding PTP to a network can compensate for these latency and delay problems by correctly adjusting device clocks so that they stay synchronized with one another. PTP enables network switches to function as PTP devices, including boundary clocks (BCs) and transparent clocks (TCs). To ensure clock synchronization, PTP requires an accurate measurement of the communication path delay between the time source or *primary clock* and the client clock. The system clocks can be categorized based on the role of the node in the network. They are broadly categorized into ordinary clocks and boundary clocks. The primary clock and the client clock are known as ordinary clocks. The boundary clock can operate as either a primary clock or a client clock. The following list explains these clocks in detail:

- Primary clock—The primary clock transmits the messages to the PTP clients (also called client node or boundary node). This allows the clients to establish their relative time distance and offset from the primary clock (which is the reference point) for phase synchronization. Delivery mechanism to the clients is either unicast or multicast packets over Ethernet or UDP.
- Member clock—located in the PTP client (also called client node), the client clock performs clock and time recovery operations based on the received and requested timestamps from the primary clock.
- Boundary clock—The boundary clock operates as a combination of the primary and client clocks. The boundary clock endpoint acts as a client clock to the primary clock, and also acts as the primary to all the slaves reporting to the boundary endpoint.

PTP sends messages between the primary clock and client clock device to determine the delay measurement. Then, PTP measures the exact message transmit and receive times and uses these times to calculate the communication path delay. PTP then adjusts current time information contained in network data for the calculated delay, resulting in more accurate time information. This delay measurement principle determines path delay between devices on the network, and the local clocks are adjusted for this delay using a series of messages sent between masters and slaves. The one-way delay time is calculated by averaging the path delay of the transmit and receive messages. This calculation assumes a symmetrical communication path; however, switched networks do not necessarily have symmetrical communication paths, due to the buffering process. PTP provides a method, using transparent clocks, to measure and account for the delay in a time-interval field in network timing packets, making the switches temporarily transparent to the master and slave nodes on the network. An end-to-end transparent clock forwards all messages on the network in the same way that a switch does.

The PTP webpage as shown in Figure 2.113 allows the user to configure and inspect the current PTP clock settings. Table 2.101 summarizes the parameters for PTP Clock Configuration.

Configuration

- System
- Ports
- ERPS
- DHCPv4
- Security
- Aggregation
- Spanning Tree
- IPMC
- LLDP
- LLDP
- SyncE
- MAC Table
- VLANs
- VCL
- QoS
- Mirroring
- PTP
- GVRP
- DDMI
- UDLD
- SD Backup
- Modbus Setting

Monitor

Diagnostics

Maintenance

PTP Clock Configuration

Delete	Clock Instance	HW Domain	Device Type	Profile
No Clock Instances Present				

Configuration

- System
- Ports
- ERPS
- DHCPv4
- Security
- Aggregation
- Spanning Tree
- IPMC
- LLDP
- LLDP
- SyncE
- MAC Table
- VLANs
- VCL
- QoS
- Mirroring
- PTP
- GVRP
- DDMI
- UDLD
- SD Backup
- Modbus Setting

Monitor

Diagnostics

Maintenance

PTP Clock Configuration

Delete	Clock Instance	HW Domain	Device Type	Profile
<input type="button" value="Delete"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="Ord-Bound"/>	<input type="text" value="No Profile"/>

Table 2.101 Descriptions of PTP Clock Configuration:

La- bel	Description	Fac- tory De- fault
Delete	Check this box and click on 'Save' button to delete the clock instance.	-
Clock In- stance	Indicates the Instance of a particular Clock Instance [0...3]. Click on the Clock Instance number to edit the Clock details.	
HW Do- main	Indicates the HW clock domain used by the clock.	
De- vice Type	Indicates the Type of the Clock Instance. There are five Device Types. Ord-Bound - clock's Device Type is Ordinary-Boundary Clock. P2p Transp - clock's Device Type is Peer to Peer Transparent Clock. E2e Transp - clock's Device Type is End to End Transparent Clock. Master Only - clock's Device Type is Master Only. Slave Only - clock's Device Type is Slave Only.	
Pro- file	Indicates the profile used by the clock.	

After Clicking Add NEW PTP Clock button, another webpage will be launched, as shown in Figure 2.114. Table 2.102 summarizes the parameters for new PTP Clock Configuration.

Table 2.102 Descriptions of New PTP Clock Configuration:

La- bel	Description	Fac- tory De- fault
Delete	Check this box and click on 'Save' to delete the clock instance.	-
Clock In- stance	Indicates the instance number of a particular Clock Instance [0..3]. Click on the Clock Instance number to edit the Clock details.	0
HW Do- main	Indicates the HW clock domain used by the clock.	0
De- vice Type	Indicates the Type of the Clock Instance. There are five Device Types. Ord-Bound - clock's Device Type is Ordinary-Boundary Clock. P2p Transp - clock's Device Type is Peer to Peer Transparent Clock. E2e Transp - clock's Device Type is End to End Transparent Clock. Master Only - clock's Device Type is Master Only. Slave Only - clock's Device Type is Slave Only.	Ord- bound
Pro- file	Indicates the profile used by the clock.	No Pro- file

Click **Add New PTP Clock** button to create a new clock instance. Click **Save** button to save the setting configuration. Click **Reset** button to keep to the original setting.

2.17 GVRP

GVRP (GARP VLAN Registration Protocol or Generic VLAN Registration Protocol) is a standard-based protocol that facilitates control of virtual local area networks (VLANs) within a larger network. GVRP conforms to the Institute of Electrical and Electronics Engineers (IEEE) 802.1Q specification, which defines a method of tagging frames with VLAN configuration data over network trunk interconnects. GVRP is based on Generic Attribute Registration Protocol (GARP) and IEEE 802.1r, which defines procedures for end stations and switches in a VLAN to register and deregister attributes, such as identifiers or addresses, with each other. It provides every end station and switch with a current record of all the other end stations and switches that can be reached on the network. GVRP is similar to GARP, as both eliminate unnecessary network traffic by preventing attempts to transmit information to unregistered users. In addition, it is necessary to manually configure only one switch with all the other switches then being updated automatically.

Becoming part of a formal IEEE 802.1ak standard amendment in 2007, Multiple VLAN Registration Protocol replaced GVRP, as it was found to be prone to performance issues that could potentially cause prolonged network convergence. This delay was found to create bandwidth degradation on the network at the point where the delayed convergence appeared. Technically, GVRP is still included as part of the IEEE standard, as the amendment did not completely remove it. It is expected to be removed in the future, but until that happens, GVRP is still being used. GVRP can be used to keep VLAN configurations on trunk interfaces organized across the network on large networks that consist of dozens or even hundreds of VLAN segments. There are three benefits for administrators that enable GVRP on a network:

- It enables switches to automatically delete unused VLANs so that only the VLANs that are in use are transported across 802.1Q trunk links.
- It enables admins to configure a new VLAN on one switch and then have it propagate the configuration across all network switches participating in the GVRP process.
- GVRP can eliminate some unnecessary broadcast traffic on the network, reducing bandwidth overhead used for network management.

GVRP works as follows. When two or more switches are connected via 802.1Q trunk ports with GVRP enabled in a network, these switches will begin to communicate statically or dynamically through VLAN information. Switches with statically configured VLANs will advertise them to connected switches using GVRP data units. Those units are specifically designed management packets used to share VLAN information. If a switch learns of a new VLAN from its neighbor, this VLAN is added to the list of VLAN tags that can be transported across the link. The VLAN that learned the new information can then pass along its own statically configured VLANs, in addition to ones learned from its neighbor. For loop avoidance, switch cannot send dynamically learned VLAN information out the same interface that it was learned on. All the dynamically learned VLAN information is stored in switch memory. So, if power is lost or the switch is rebooted, the dynamically learned VLAN information is lost, and the VLANs are pruned from the trunk interface. But, once the switches begin communication again, they will relearn the shared VLAN information to bring the network and all VLANs back into a fully informed state.

2.17.1 Global config

This GVRP Global config webpage shown in Figure 2.115 allows the user to configure the global GVRP configuration settings that are commonly applied to all GVRP enabled ports.



Configuration

- System
- Ports
- ERPS
- DHCPv4
- Security
- Aggregation
- Spanning Tree
- IPMC
- LLDP
- LLDP
- SyncE
- MAC Table
- VLANs
- VCL
- QoS
- Mirroring
- PTP
- GVRP
 - Global config
 - Port config
- DDMI
- UDLD
- SD Backup
- Modbus Setting

Monitor

Diagnostics

Maintenance

GVRP Configuration

☐ Enable GVRP

Parameter	Value
Join-time:	20
Leave-time:	60
LeaveAll-time:	1000
Max VLANs:	20

Save

Table 2.103 Descriptions of GVRP Globally Configuration:

Label	Description	Factory Default
Join-time	Join-time is a value in the range of 1-20cs, i.e. in units of one hundredth of a second. The default value is 20cs	20
Leave-time	Leave-time is a value in the range of 60-300cs, i.e. in units of one hundredth of a second. The default is 60cs.	60
LeaveAll-time	LeaveAll-time is a value in the range of 1000-5000cs, i.e. in units of one hundredth of a second. The default is 1000cs.	1000
Max VLANs	When GVRP is enabled, a maximum number of VLANs supported by GVRP is specified. By default, this number is 20. This number can only be changed when GVRP is turned off.	20

Click **Save** button to save the setting configuration. Click **Refresh** box to refresh the page immediately. Note that unsaved changes will be lost.

2.17.2 Port config

The GVRP Port Config webpage shown in Figure 2.116 allows the user to enable or disable a port for GVRP operation. This configuration can be performed either before or after GVRP is configured globally; however, the protocol operation will remain the same. Table 2.104 describes the labels on GVRP Port Configuration.



Configuration

- System
- Ports
- ERPS
- DHCPv4
- Security
- Aggregation
- Spanning Tree
- IPMC
- LLDP
 - LLDP
- SyncE
- MAC Table
- VLANs
- VCL
- QoS
- Mirroring
- PTP
- GVRP
 - Global config
 - Port config
- DDMI
- UDLD
- SD Backup
- Modbus Setting

Monitor

Diagnostics

Maintenance

GVRP Port Configuration

Port	Mode
*	<>
1	Disabled
2	Disabled
3	Disabled
4	Disabled
5	Disabled
6	Disabled
7	Disabled
8	Disabled
9	Disabled
10	Disabled
11	Disabled

Table 2.104 Descriptions of GVRP PortConfiguration:

La- bel	Description	Factory Default
Port	The logical port that is to be configured.	-
Mode	Mode can be either 'Disabled' or 'GVRP enabled'. These values turn the GVRP feature off or on respectively for the port in question.	Disabled

Click **Save** button to save the setting configuration. Click **Reset** button to undo any changes made locally and revert to previously saved values.

2.18 DDMI

Digital Diagnostics Monitoring Interface (DDMI) allows users to perform diagnostic tests on transceiver modules such as small form-factor pluggable (SFP). Click Enabled this feature to view the various parameters of the transceiver module, such as temperature, voltage, transmission power, and so on. Figure 2.117 shows the DDMI configuration webpage. Table 2.105 describes the option on DDMI Configuration webpage.



Configuration

- System
- Ports
- ERPS
- DHCPv4
- Security
- Aggregation
- Spanning Tree
- IPMC
- LLDP
- LLDP
- SyncE
- MAC Table
- VLANs
- VCL
- QoS
- Mirroring
- PTP
- GVRP
- DDMI
- UDLD
- SD Backup
- Modbus Setting

Monitor

Diagnostics

Maintenance

DDMI Configuration

Mode

Disabled ▼

Save

Reset

Table 2.105 Descriptions of DDMI Configuration:

La- bel	Description	Factory Default
Mode	Indicates the DDMI mode operation. Possible modes are: Enabled: Enable DDMI mode operation. Disabled: Disable DDMI mode operation.	Disabled

Click **Save button** to save changes. Click **Reset button** to undo any changes made locally and revert to previously saved values.

2.19 UDLD

Unidirectional Link Detection (UDLD) is a layer 2 protocol used to determine the physical status of a link. The purpose of UDLD is to detect and deter issues that arise from Unidirectional Links. UDLD helps to prevent forwarding loops and blackholding of traffic by identifying and acting on logical one-way links that would otherwise go undetected. UDLD works with the Layer 1 mechanisms to determine the physical status of a link. At Layer 1, auto-negotiation takes care of physical signaling and fault detection. UDLD performs tasks that auto-negotiation cannot perform, such as detecting the identities of neighbors and shutting down misconnected ports. When users enable both auto-negotiation and UDLD, Layer 1 and Layer 2 detections work together to prevent physical and logical unidirectional connections and the malfunctioning of other protocols.

UDLD works by exchanging **UDLD** protocol packets that include information about the port's **device and port ID** between the neighboring devices. In order for UDLD to work, both devices on the link must support UDLD and have it enabled on respective ports. Each switch port configured for UDLD sends UDLD protocol packets that contain the port's own device/port ID, and the neighbor's device/port IDs seen by UDLD on that port. Neighboring ports should see their own device/port ID (echo) in the packets received from the other side.

Because of this, a port should receive its own device and port ID information from its neighbor if the link is bi-directional. If a port does not receive information about its own device and port ID from its neighbor for a specific duration of time, the link is considered to be unidirectional. This can also occur when the link is up on both sides, but one side is not receiving packets, or when wiring mistakes occur, causing the transmit and receive wires to not be connected to the same ports on both ends of a link.

This echo-algorithm allows detection of these issues:

- Link is up on both sides; however, packets are only received by one side.
- Wiring mistakes when receive and transmit fibers are not connected to the same port on the remote side.

Once the unidirectional link is detected by UDLD, the respective port is disabled. Port shutdown by UDLD remains disabled until it is manually reenabled, or until errdisable timeout expires (if configured).

UDLD can operate in two modes: normal and aggressive. In normal mode, if the link state of the port was determined to be bidirectional and the UDLD information times out, no action is taken by UDLD. The port state for UDLD is marked as undetermined. The port bRSASaves according to its STP state. In aggressive mode, if the link state of the port is determined to be bi-directional and the UDLD information times out while the link on the port is still up, UDLD tries to re-establish the state of the port. If not successful, the port is put into the **errdisable** state.

Aging of UDLD information happens when the port that runs UDLD does not receive UDLD packets from the neighbor port for duration of hold time. The hold time for the port is dictated by the remote port and depends on the message interval at the remote side. The shorter the message interval, the shorter the hold time and the faster the detection. Recent implementations of UDLD allow configuration of message interval.

UDLD information can age out due to the high error rate on the port caused by some physical issue or duplex mismatch. Such packet drop does not mean that the link is unidirectional and UDLD in normal mode will not disable such link.

It is important to be able to choose the right message interval in order to ensure proper detection time. The message interval should be fast enough to detect the unidirectional link before the forwarding loop is created, however, it should not overload the switch CPU. The default message interval is 7 seconds, and is fast enough to detect the unidirectional link before the forwarding loop is created with default STP timers. The detection time is approximately equal to three times the message interval.

For example: $T_{\text{detection}} \sim \text{message_interval} \times 3$ This is 21 seconds for the default message interval of 7 seconds.

It takes $T_{\text{reconvergence}} = \text{max_age} + 2 \times \text{forward_delay}$ for the STP to reconverge in case of unidirectional link failure. With the default timers, it takes $20 + 2 \times 7 = 34$ seconds.

It is recommended to keep $T_{\text{detection}} < T_{\text{reconvergence}}$ by choosing an appropriate message interval.

In aggressive mode, once the information is aged, UDLD will attempt to re-establish the link state by sending packets every second for eight seconds. If the link state is still not determined, the link is disabled.

Aggressive mode adds additional detection of these situations:

- The port is stuck (on one side the port neither transmits nor receives, however, the link is up on both sides).
- The link is up on one side and down on the other side. This issue might be seen on fiber ports. When transmit fiber is unplugged on the local port, the link remains up on the local side. However, it is down on the remote side.

Most recently, fiber FastEthernet hardware implementations have Far End Fault Indication (FEFI) functions in order to bring the link down on both sides in these situations. On Gigabit Ethernet, a similar function is provided by link negotiation. Copper ports are normally not susceptible to this type of issue, as they use Ethernet link pulses to monitor the link. It is important to mention that, in both cases, no forwarding loop occurs because there is no connectivity between the ports. If the link is up on one side and down on the other, however, blackholing of traffic might occur. Aggressive UDLD is designed to prevent this.

This UDLD webpage shown Figure 2.118 allows the user to inspect the current UDLD configurations, and possibly change them as well. Table 2.106 provides the descriptions of UDLD Port Configuration.



Configuration

System
Ports
ERPS
DHCPv4
Security
Aggregation
Spanning Tree
IPMC
LLDP
LLDP
SyncE
MAC Table
VLANs
VCL
QoS
Mirroring
PTP
GVRP
DDMI
UDLD
SD Backup
Modbus Setting

Monitor

Diagnostics

Maintenance

UDLD Port Configuration

Port	UDLD mode
*	<> ▼
1	Disable ▼
2	Disable ▼
3	Disable ▼
4	Disable ▼
5	Disable ▼
6	Disable ▼
7	Disable ▼
8	Disable ▼
9	Disable ▼
10	Disable ▼
11	Disable ▼

Save

Reset

Table 2.106 Descriptions of UDLD Port Configuration:

La- bel	Description	Fac- tory De- fault
Port	Port number of the switch.	1- 11
UDLD Mode	Configures the UDLD mode on a port. Valid values are Disable, Normal and Aggressive. Default mode is Disable. Disable in disabled mode, UDLD functionality doesn't exist on port. Normal in normal mode, if the link state of the port was determined to be unidirectional, it will not affect the port state. Aggressive in aggressive mode, unidirectional detected ports will get shutdown. To bring back the ports up, need to disable UDLD on that port.	Dis- able

Click **Save** button to save the setting configuration. Click **Reset** button to undo any changes made locally and revert to previously saved values.

2.20 SD Backup

The SD card can be used instead of the internal flash memory of the switch to update or restore configuration settings. In addition, the SD card can be used to boot the switch. User can also copy IOS software and switch configuration settings from a PC or from the switch to the SD card, and then use the SD card to copy this software and settings to other switches.

SD Backup can be configured on this page as shown in Figure 2.119. Options for SD Backup can be set according to the descriptions in Table 2.107.



Configuration

- System
- Ports
- ERPS
- DHCPv4
- Security
- Aggregation
- Spanning Tree
- IPMC
- LLDP
- LLDP
- SyncE
- MAC Table
- VLANs
- VCL
- QoS
- Mirroring
- PTP
- GVRP
- DDMI
- UDLD
- SD Backup
- Modbus Setting

Monitor

Diagnostics

Maintenance

SD Backup Configuration

Use the configuration file in the SD card as the startup config	Disabled ▼
Automatic backup	Enabled ▼
Periodic backup	Enabled ▼
Backup period time (hour)	720 (1~720)

Note: Supported format: FAT32, exFAT.

Table 2.107 Descriptions of SD Backup Configuration:

Label	Description	Factory Default
Use the configuration file from sd	The startup-config file will be replaced from the newest config file in sd card when booting switch.	Dis-abled
Automatic backup	Backup the startup-config into sd card folder "Automatic_backup" when saving startup-config. Only have one file be saved.	En-abled
Periodic backup	Backup the startup-config into sd card folder "Period_backup" when saving startup-config. Multiple files can be saved which depend on "Backup period time".	En-abled
Backup period time (Hr)	The backup Periodic time setting.	720

Click **Save** button to save the setting configuration. Click **Reset** button to undo any changes made locally and revert to previously saved values.

2.21 Modbus Setting

Welotec's managed switch can be connected to a Modbus network using Modbus TCP/IP protocol which is an industrial network protocol for controlling automation equipment. The managed switch's status and settings can be read and written through Modbus TCP/IP protocol which operates similar to a Management Information Base (MIB) browser. The managed switch will be a Modbus slave which can be remotely configured by a Modbus master. The Modbus slave address must be set to match the setting inside the Modbus master. In order to access the managed switch, a **Modbus Address** must be assigned as described in this subsection. Figure 2.120 shows the Modbus Setting webpage.

Configuration

- System
- Ports
- ERPS
- DHCPv4
- Security
- Aggregation
- Spanning Tree
- IPMC
- LLDP
- LLDP
- SyncE
- MAC Table
- VLANs
- VCL
- QoS
- Mirroring
- PTP
- GVRP
- DDMI
- UDLD
- SD Backup
- Modbus Setting

Monitor

Diagnostics

Maintenance

Modbus Setting

Modbus Address(Unit Identifier / Slave Address)		
Modbus Address(1~247)	1	

Table 2.108 Descriptions of Modbus Setting PortConfiguration:

Label	Description	Factory Default
Modbus Address	Identifier for modbus slave device, range from 1 to 247	1


Click **Save** button to save the setting configuration. Click **Reset** button to undo any changes made locally and revert to previously saved values.

Users can use Modbus TCP/IP compatible applications such as **Modbus Poll** to configure the switch. Note that Modbus Poll can be download from <http://www.modbustools.com/download.html>. The Modbus Poll 64-bit version 9.2.2, Build 1343 was used in this document. Welotec does not provide this software to the users. Tutorial of Modbus read and write examples are illustrated below. Note:** The switch only supports Modbus function code 03, 04 (for Read) and 06 *(for Write).


Read Registers (This example shows how to read the switch's IP address.)

Address	Data Type	Read/Write	Description
0x0051 (81)	2 words	R	IP Address of switch Ex: IP = 10.0.50.1 Word 0 Hi byte = 0x0A Word 0 Lo byte = 0x00 Word 1 Hi byte = 0x32 Word 1 Lo byte = 0x01


1. Make sure that a supervising computer (Modbus Master) is connected to your target switch (Modbus Slave) over Ethernet network.
2. Launch **Modbus Poll** in the supervising computer. Note a registration key may be required for a long-term use of Modbus Poll after 30-day evaluation period. Additionally, there is a 10-minute trial limitation for the connection to the managed switch.
3. Click **Connect** button on the top toolbar to enter Connection Setup dialog by selecting **Connect...** menu as shown in Figure 2.120

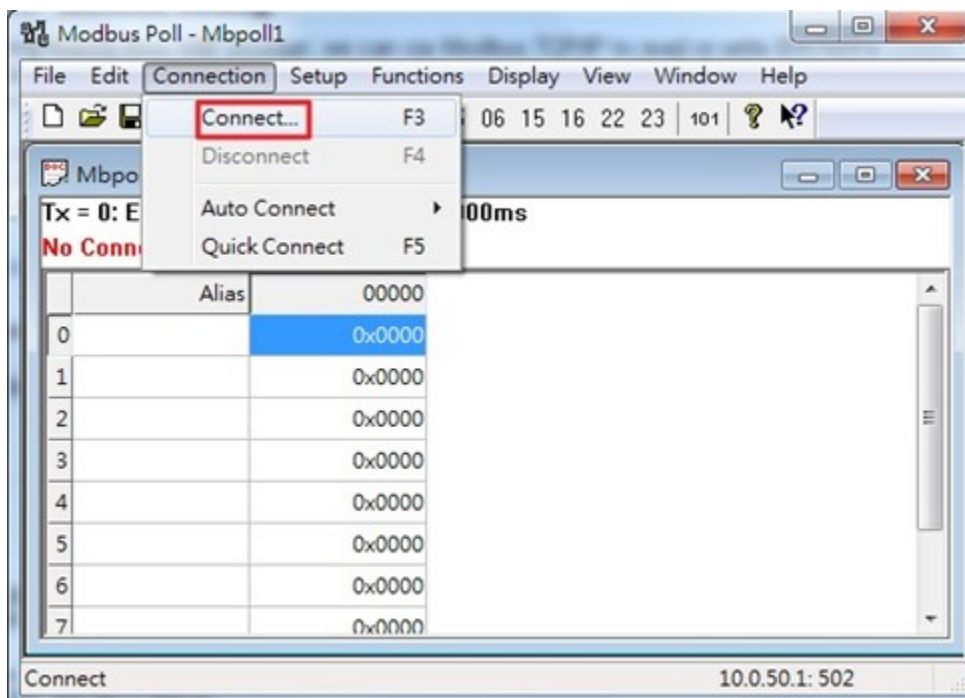


4. Select **Modbus TCP/IP** as the **Connection** mode and enter the switch's IP address inside the **Remote Modbus Server's IP Address or Node Name** field at the bottom as shown in Figure 2.121. The **Port** number should be set to 502. Then click **OK** button.

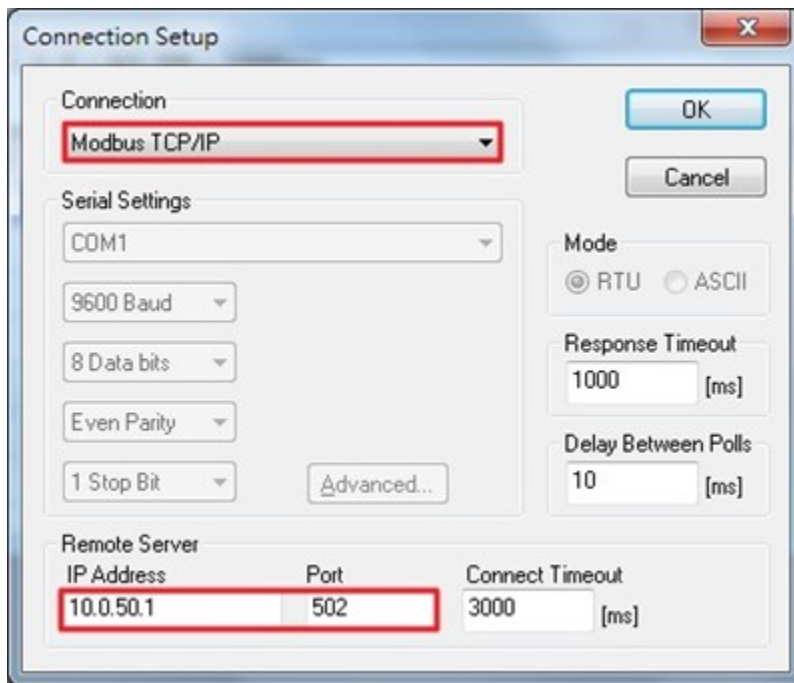


- On the window Mbpoll1, select multiple cells from row 0 to row 2 by clicking on cells in second column of row 0 and row 2 while holding the shift key as shown in Figure 2.122.

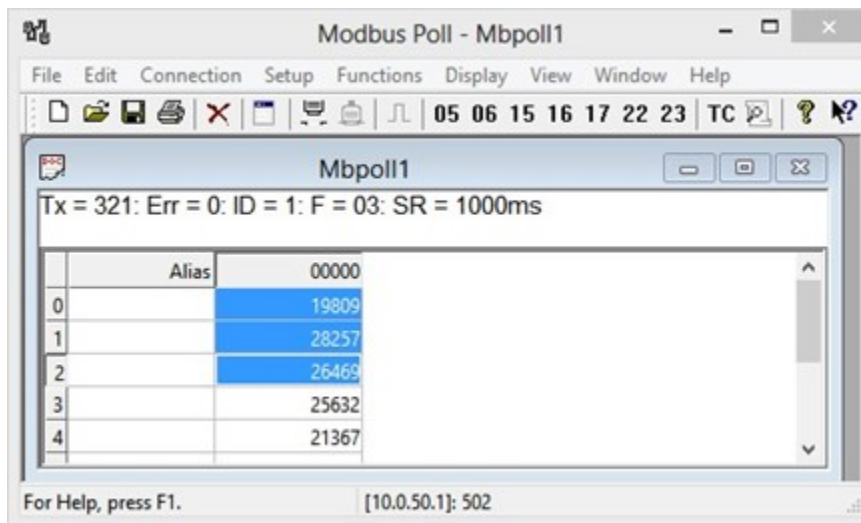


- Set **Display** mode of the selected cells in previous step to HEX (hexadecimal) by selecting **Display** pull-down menu and choosing the **Hex** as shown in Figure 2.123.

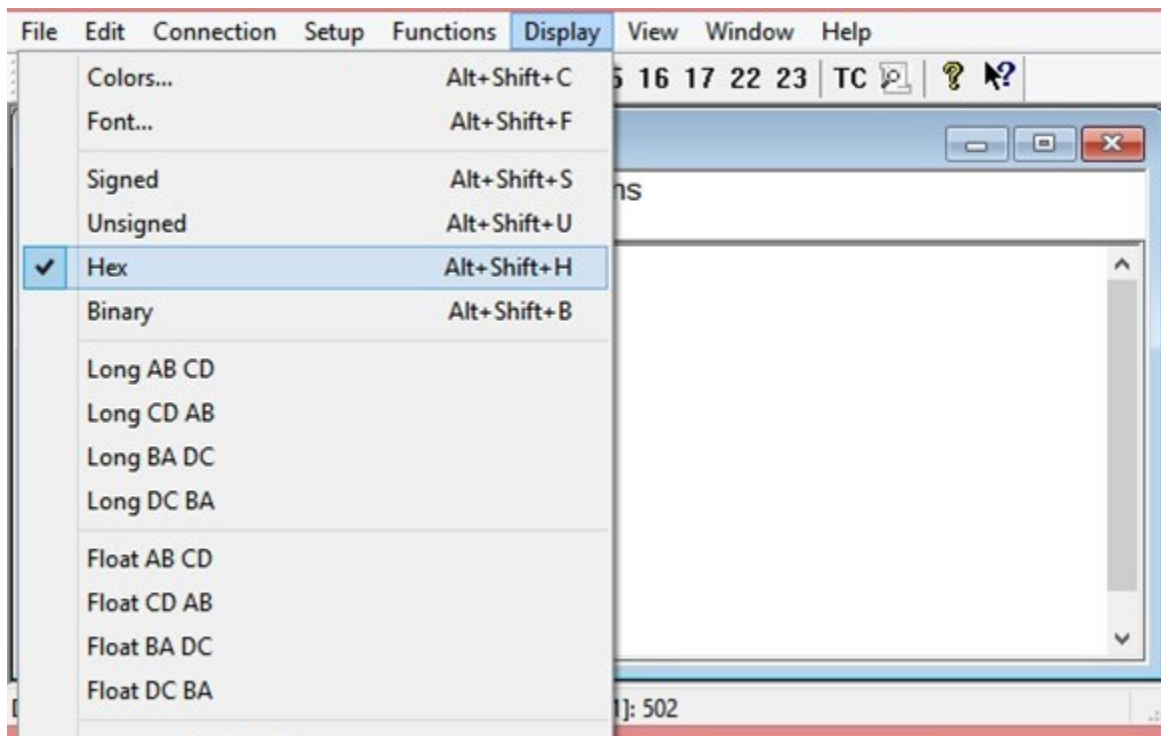

7. Click on the **Setup** pull-down menu and choose **Read/Write Definition...** as shown in Figure 2.124.

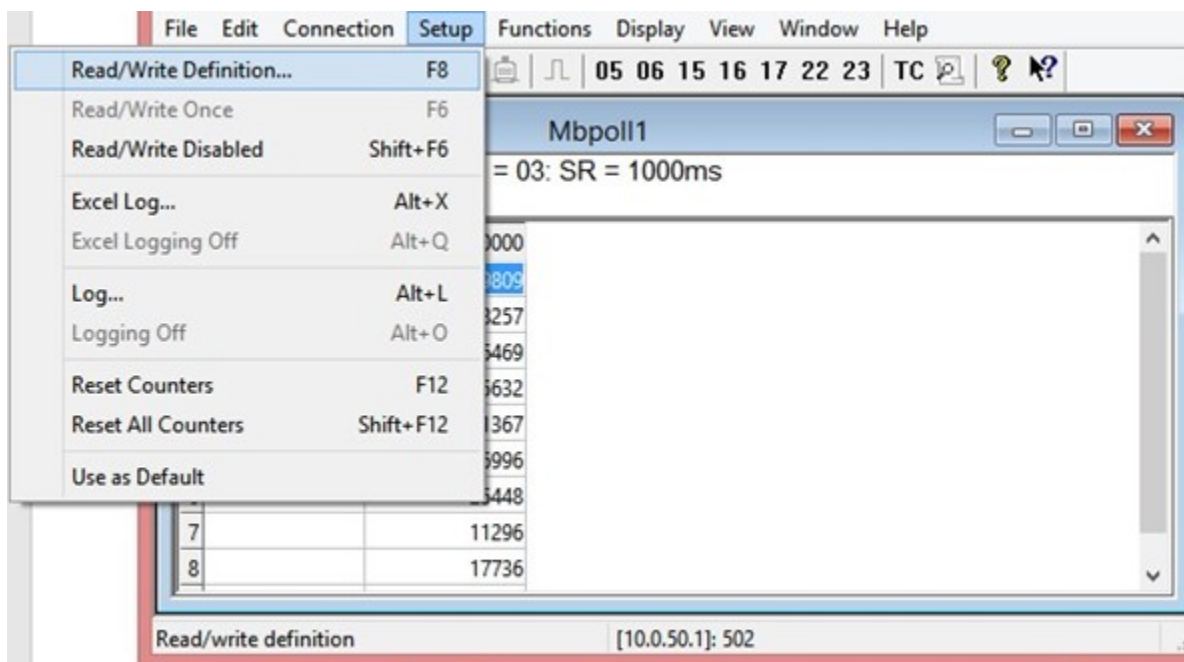

8. Enter the **Slave ID** in the Modbus Poll function as shown in Figure 2.125, which should match the Modbus Address = 1 entered in Figure 2.118.

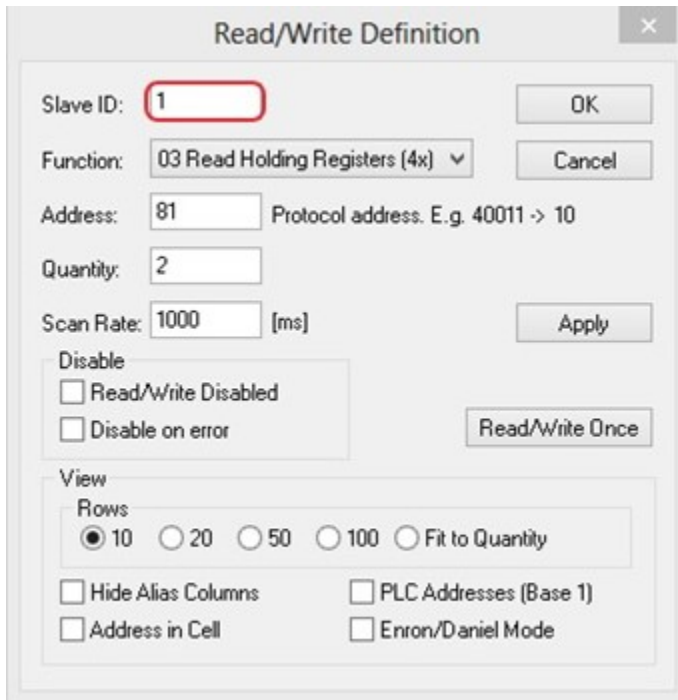

Read/Write Definition

Slave ID: OK

Function: Cancel

Address: Protocol address. E.g. 40011 -> 10

Quantity:

Scan Rate: [ms] Apply

Disable

☐ Read/Write Disabled

☐ Disable on error

Read/Write Once

View

Rows

☒ 10 ☐ 20 ☐ 50 ☐ 100 ☐ Fit to Quantity

☐ Hide Alias Columns ☐ PLC Addresses (Base 1)

☐ Address in Cell ☐ Enron/Daniel Mode

9. Select **Function 03** or **04** because the managed switch supports function code 03 and 04 as shown in Figure 2.126.



Read/Write Definition

Slave ID: OK

Function: Cancel

Address: Protocol address. E.g. 40011 -> 10

Quantity:

Scan Rate: [ms] Apply

Disable

☐ Read/Write Disabled

☐ Disable on error

Read/Write Once

View


Rows

☒ 10 ☐ 20 ☐ 50 ☐ 100 ☐ Fit to Quantity

☐ Hide Alias Columns ☐ PLC Addresses (Base 1)

☐ Address in Cell ☐ Enron/Daniel Mode


10. Set starting **Address** to 81 and **Quantity** to 2 as shown in Figure 2.127.

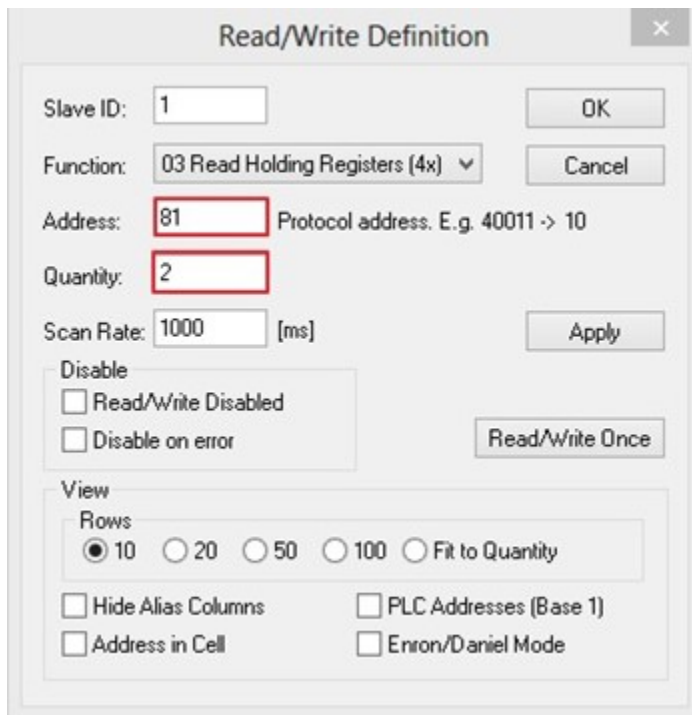

The 'Read/Write Definition' dialog box is shown with the following settings:

- Slave ID: 1
- Function: 03 Read Holding Registers (4x)
- Address: 81 (highlighted with a red box)
- Quantity: 2 (highlighted with a red box)
- Scan Rate: 1000 [ms]
- Buttons: OK, Cancel, Apply, Read/Write Once
- Disable section:
 - ☐ Read/Write Disabled
 - ☐ Disable on error
- View section:
 - Rows: ☒ 10, ☐ 20, ☐ 50, ☐ 100, ☐ Fit to Quantity
 - ☐ Hide Alias Columns
 - ☐ PLC Addresses (Base 1)
 - ☐ Address in Cell
 - ☐ Enron/Daniel Mode

11. Click OK button to read the IP address of the switch.

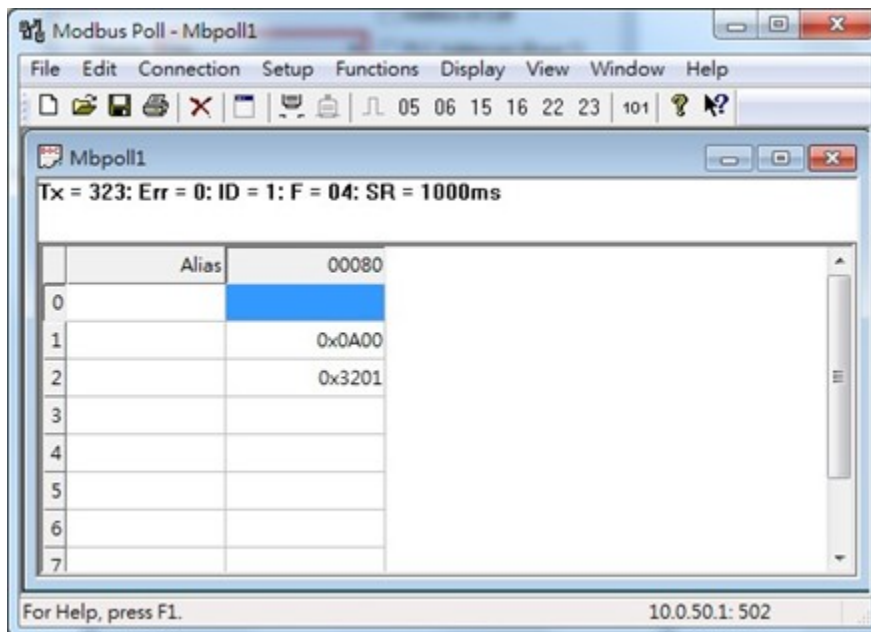

The 'Modbus Poll - Mbpoll1' window displays the following information:

- File Edit Connection Setup Functions Display View Window Help
- 05 06 15 16 22 23 | 101 ? ?
- Mbpoll1
- Tx = 323; Err = 0; ID = 1; F = 04; SR = 1000ms
- Table with 2 columns: Alias, Value
- Table data:

	Alias	Value
0		00080
1		0x0A00
2		0x3201
3		
4		
5		
6		
7		
- For Help, press F1.
- 10.0.50.1: 502

12. Modbus Poll will get the values 0x0A, 0x00, 0x32, 0x01, which means that the switch's IP is 192.168.2.1 as shown in Figure 2.128.

Write Registers (This example shows how to clear the switch's Port Count (Statistics).)


Address	Data Type	Read/Write	Description
0x0100 (256)	1 word	W	Clear Port Statistics 0x0001: Do clear action

1. Check the switch's Port TX/RX counts in **Port Statistics** page as shown in Figure 2.130.

Port Statistics Overview Auto-refresh ☐

Port	Packets		Bytes		Errors		Drops		Filtered
	Received	Transmitted	Received	Transmitted	Received	Transmitted	Received	Transmitted	Received
1	0	0	0	0	0	0	0	0	0
2	0	0	0	0	0	0	0	0	0
3	0	0	0	0	0	0	0	0	0
4	0	0	0	0	0	0	0	0	0
5	0	0	0	0	0	0	0	0	0
6	0	0	0	0	0	0	0	0	0
7	0	0	0	0	0	0	0	0	0
8	0	0	0	0	0	0	0	0	0
9	0	0	0	0	0	0	0	0	0
10	7561	6791	1480609	2256480	5	0	0	0	2425
11	0	0	0	0	0	0	0	0	0

2. Click function **06** on the toolbar as shown in Figure 2.131.

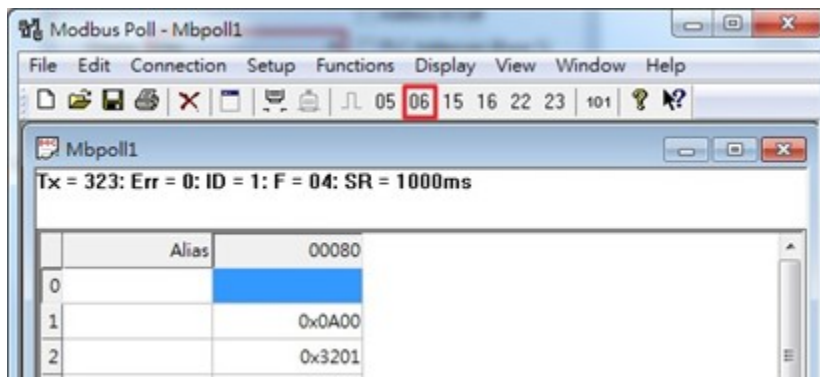

3. Set **Address** to 256 and **Value (HEX)** to 1 as shown in Figure 2.132, then click “**Send**” button.



4. Check **Port Statistics** in the managed switch's Web UI as shown in Figure 2.133. The packet count is now cleared.

Port Statistics Overview

Auto-refresh ☐

Port	Packets		Bytes		Errors		Drops		Filtered
	Received	Transmitted	Received	Transmitted	Received	Transmitted	Received	Transmitted	
1	0	0	0	0	0	0	0	0	0
2	0	0	0	0	0	0	0	0	0
3	0	0	0	0	0	0	0	0	0
4	0	0	0	0	0	0	0	0	0
5	0	0	0	0	0	0	0	0	0
6	0	0	0	0	0	0	0	0	0
7	0	0	0	0	0	0	0	0	0
8	0	0	0	0	0	0	0	0	0
9	0	0	0	0	0	0	0	0	0
10	0	0	0	0	0	0	0	0	0
11	0	0	0	0	0	0	0	0	0

2.22 Modbus Memory Map

1. Read Registers (Support Function Code 3, 4).
2. Write Register (Support Function Code 6).
3. 1 Word = 2 Bytes.

Address	Data Type	Read/Write	Description
System Information			
0x0000 (0)	32 words	R	System Description = "Managed Switch RSAES" Word 0 Hi byte = 'M' Word 0 Lo byte = 'A'
0x0020 (32)	1 word	R	Firmware Version = Ex: Version = 1.02 Word 0 Hi byte = 0x01 Word 0 Lo byte = 0x02
0x0021 (33)	3 words	R	Ethernet MAC Address Ex: MAC = 00-01-02-03-04-05 Word 0 Hi byte = 0x00 Word 0 Lo byte = 0x01
0x0024 (36)	1 word	R	Kernel Version Ex: Version = 1.03 Word 0 Hi byte = 0x01 Word 0 Lo byte = 0x03
Console Information			
0x0030 (48)	32 words	R	Baud Rate 0x0000: 4800 0x0001: 9600 0x0002: 14400 0x0003: 19200 0x0004: 28800
0x0031 (49)	1 word	R	Data Bits 0x0007: 7 0x0008: 8
0x0032 (50)	1 word	R	Parity 0x0000: None 0x0001: Odd 0x0002: Even
0x0033 (51)	1 word	R	Stop Bit 0x0001: 1 0x0002: 2
0x0034 (52)	1 word	R	Flow Control 0x0000: None
Power Information			
0x0040 (64)	1 word	R	Power Status Power 1 OK, Hi byte = 0x01 Power 1 Fail, Hi byte = 0x00 Power 2 OK, Hi byte = 0x01 Power 2 Fail, Hi byte = 0x00
IP Information			
0x0050 (80)	1 word	R	DHCP Status 0x0000: Disabled 0x0001: Enabled
0x0051 (81)	2 words	R	IP Address of switch Ex: IP = 192.168.1.1 Word 0 Hi byte = 0xC0 Word 0 Lo byte = 0x01
0x0053 (83)	2 words	R	Subnet Mask of switch Ex: IP = 255.255.255.0 Word 0 Hi byte = 0xFF Word 0 Lo byte = 0x00
0x0055 (85)	2 words	R	Gateway Address of switch Ex: IP = 192.168.1.254 Word 0 Hi byte = 0xC0 Word 0 Lo byte = 0x01
0x0057 (87)	2 words	R	DNS1 of switch Ex: IP = 168.95.1.1 Word 0 Hi byte = 0xA8 Word 0 Lo byte = 0x01
0x0059 (89)	2 words	R	DNS2 of switch Ex: IP = 168.95.1.1 Word 0 Hi byte = 0xA8 Word 0 Lo byte = 0x01
System Status Clear			
0x0100 (256)	1 word	W	Clear Port Statistics 0x0001: Do clear action
0x0101 (257)	1 word	W	Clear Relay Alarm 0x0001: Do clear action
Port Status			
0x1000 (4096)	5 words	R	Port Status 0x0000: Disabled 0x0001: Enabled Word 0 Hi byte = Port 1 Status Word 0 Lo byte = Port 1 Status
0x1020 (4128)	5 words	R	Port Negotiation Status, force = 0x00 Status, auto = 0x01 Word 0 Hi byte = Port 1 Status Word 0 Lo byte = Port 1 Status

Address	Data Type	Read/Write	Description
0x1040 (4160)	5 words	R	Port Speed Status, 10M = 0x01 Status, 100M = 0x02 Status, 1000M = 0x03 Word
0x1060 (4192)	5 words	R	Port Duplex Status, half-duplex = 0x00 Status, full-duplex = 0x01 Word 0 Hi byt
0x1080 (4224)	5 words	R	Port Flow Control Status, disabled = 0x00 Status, enabled = 0x01 Word 0 Hi byt
0x10A0 (4256)	5 words	R	Port Link Status Status, down = 0x00 Status, up = 0x01 Word 0 Hi byte = Port 1
0x1300 (4864)	40 words	R	Count of Good Packets of TX Ex. Port 1 gets 0x2EEEE1FFFF good packets of TX.
0x1400 (5120)	40 words	R	Count of Bad Packets of TX Ex. Port 1 gets 0x2EEEE1FFFF bad packets of TX. W
0x1500 (5376)	40 words	R	Count of Good Packets of RX Ex. Port 1 gets 0x2EEEE1FFFF good packets of RX
0x1600 (5632)	40 words	R	Count of Bad Packets of RX Ex. Port 1 gets 0x2EEEE1FFFF bad packets of RX. W

3 Monitor

The Welotec's RSAES managed switch has an extensive set of status monitoring features on the WebUI. The user can select the submenus under the **Monitor** menu to check for the information or current status of the operations and protocols running on the Welotec's RSAES managed switch. The following sections will describe each submenu under the **Monitor** menu.

3.1 System

3.1.1 Information

System information webpage shown in Figure 3.1 provides information of both hardware and software of the RSAES managed switch. Description of each field is explained in Table 3.1.



Configuration Monitor

- System
 - Information
 - CPU Load
 - IP Status
 - IPv4 Routing Info. Base
 - IPv6 Routing Info. Base
 - Log
 - Detailed Log
 - Power Status
 - Digital input
- Ports
- ERPS
- DHCPv4
- Security
- Aggregation
- Spanning Tree
- IPMC
- LLDP
- PTP
- MAC Table
- VLANs
- DDMI
- UDLD
- SD Status
- Diagnostics**
- Maintenance**

System Information

System	
Contact	
Name	
Location	
Hardware	
MAC Address	78-70-52-00-00-79
Model Name	RSAES-HV
Time	
System Date	1970-01-01T04:22:01+01:00
System Uptime	0d 03:22:01
Software	
Bootloader Version	1.03
Software Version	1.20
Software Date	2023-03-23T16:05:50+08:00
Code Revision	001
Licenses	Details
Serial ID	A2272800000004

Table 3.1 Monitoring Descriptions of System Information:

Label	Description	Factory Default
Contact	The system contact configured in Configuration System Information System Contact.	Null
Name	The system name configured in Configuration System Information System Name.	Null
Location	The system location configured in Configuration System Information System Location.	Null
MAC Address	The MAC Address of this switch.	DUT's MAC address
Model Name	The Chip ID of this switch.	Ex: RSAESS-3SFP-DC
System Date	The current (GMT) system time and date. The system time is obtained through the Timing server running on the switch, if any.	DUT's current time
System Up-time	The period of time the device has been operational.	DUT's bootup time
Bootloader Version	Version of firmware.	DUT's bootloader version
Software Version	The software version of this switch.	DUT's firmware version
Software Date	The date when the switch software was produced.	DUT's firmware build time
Code Revision	The version control identifier of the switch software.	001
Licenses	Summary of the software license e.g., component, name, version, license type, and source.	

Check the **Auto-refresh** box to refresh the page automatically. The automatic refresh occurs every 3 seconds. Otherwise, click **Refresh** box to refresh the page immediately.


After Clicking Licenses, users will be directed to the summary of software license as shown in Figure 3.2.

System licenses				
License summary				

Component	Name	Version	License Type	Source
Appl	WebStax		Microsemi	
Appl	ISC DHCP	4.1.0	ISC	http://www.isc.org/software/dhc
Appl	MDS		BSD	
Appl	Host AP	0.5.9	BSD	http://hostap.epitest.fi/hostap
Appl	WPA Supplicant	0.6.1	BSD	http://hostap.epitest.fi/wpa_su
Appl	NET-SNMP RMON		BSD-like	http://net-snmp.sourceforge.net
Appl	NET-SNMP		NET-SNMP (BSD-style)	
Appl	UCD-SNMP	4.1.2	UCD-SNMP	http://net-snmp.sourceforge.net

3.1.2 CPU Load

This page displays the CPU load, using an SVG graph. The load is measured as averaged over the last 100ms, 1sec and 10 seconds intervals. The last 120 samples are graphed, and the last numbers are displayed as text as well. In order to display the SVG graph, your browser must support the SVG format. Consult the SVG Wiki for more information on browser support. Specifically, at the time of writing, Microsoft Internet Explorer will need to have a plugin installed to support SVG.

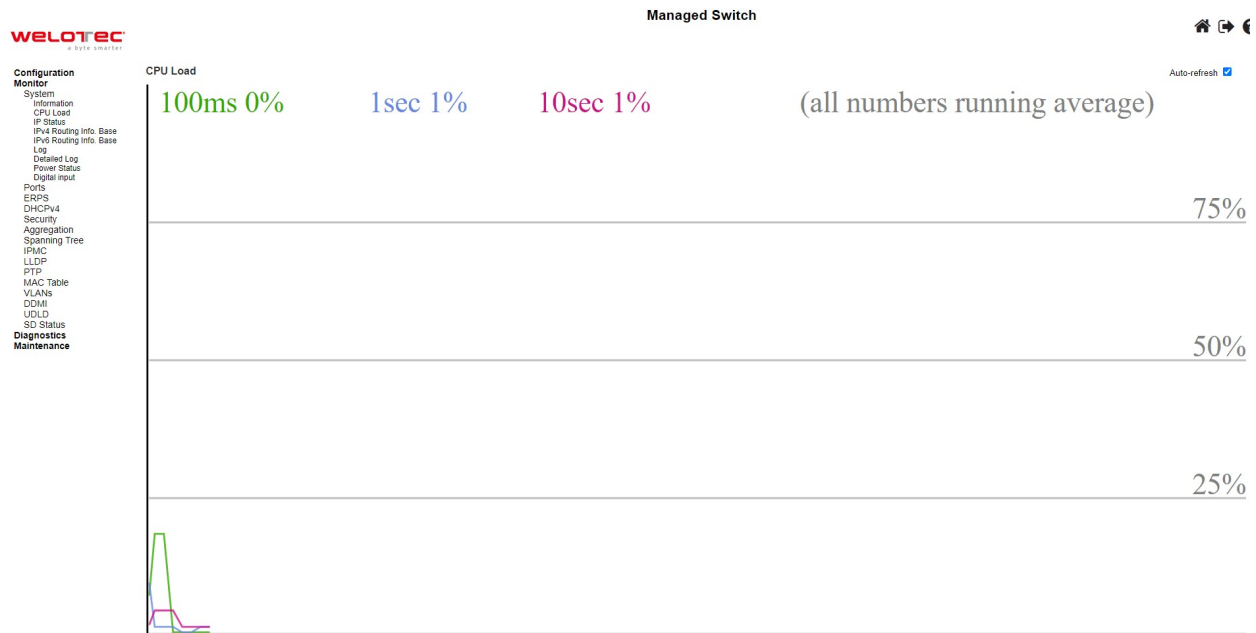

Check the **Auto-refresh** box to refresh the page automatically. The automatic refresh occurs every 3 seconds.

3.1.3 IP Status

This page displays the status of the IP protocol layer. The status is defined by the IP interfaces, the IPv6 routes and the neighbour cache (ARP cache) status.

Configuration Monitor

- System
 - Information
 - CPU Load
 - IP Status
 - IPv4 Routing Info. Base
 - IPv6 Routing Info. Base
 - Log
 - Detailed Log
 - Power Status
 - Digital input
- Ports
- ERPS
- DHCPv4
- Security
- Aggregation
- Spanning Tree
- IPMC
- LLDP
- PTP
- MAC Table
- VLANs
- DDMI
- UDLD
- SD Status
- Diagnostics**
- Maintenance**

IP Interfaces

Interface	Type	Address	Status
VLAN 1	LINK	78-70-52-00-00-79	<BROADCAST MULTICAST>
VLAN 1	IPv4	192.168.2.1/24	
VLAN 2	LINK	78-70-52-00-00-79	<UP BROADCAST MULTICAST>
VLAN 2	IPv4	192.168.130.141/24	
VLAN 2	IPv6	fe80::7a70:52ff:fe00:79/64	

IP Routes

IPv4

Network	Gateway	Status
192.168.130.0/24	VLAN 2	<UP>

IPv6

Network	Gateway	Status
fe80::/64	VLAN 2	<UP>

Neighbor cache

IPv4

IP Address	Link Address
192.168.130.84	VLAN 2:d4-3b-04-d7-34-c1
192.168.130.179	VLAN 2:a4-4e-31-09-34-1c
192.168.130.254	VLAN 2:f4-90-ea-10-12-e4

IPv6

IP Address	Link Address
------------	--------------

Table 3.2 Monitor Descriptions of System's IP Status:

Label	Description	Factory Default
IP Interfaces		
Interface	The name of the interface.	VLAN 1
Type	The address type of the entry. This may be LINK, IPv4, IPv6.	LINK, IPv4, IPv6
Address	The current address of the interface (of the given type).	DUT's MAC address/ IPv4 address/ IPv6 address
Status	The status flags of the interface (and/or address).	<UP BROADCAST MULTICAST>
IP Routes		
Network	The destination IPv4/IPv6 network or host address of this route.	10.0.50.0/24, fe80::/64
Gateway	The gateway address of this route.	VLAN 1
Status	The status flags of the route.	<UP>
Neighbour cache		
IP Address	The IPv4/IPv6 address of the entry.	-
Link Address	The Link (MAC) address for which a binding to the IP address given exist.	-

Check the **Auto-refresh** box to refresh the page automatically. The automatic refresh occurs every 3 seconds.

3.1.4 IPv4 Routing Info. Base

This table in Figure 3.5 provides IPv4 routing status. Each page shows up to 999 table entries, selected through the “entries per page” input field. When first visited, the webpage will show the beginning entries of this table. The “Start from ID” input field allow the user to change the starting point in this table. Clicking the **Refresh** button will update the displayed table starting from that or the closest next entry match. In addition, the input fields on the webpage will upon a **Refresh** button click - assume the value of the first displayed entry, allowing for continuous refresh with the same start input field. Table 3.3 summarizes the description of each label in Routing Information Base webpage.



Configuration

Monitor

- System
 - Information
 - CPU Load
 - IP Status
 - IPv4 Routing Info. Base
 - IPv6 Routing Info. Base
 - Log
 - Detailed Log
 - Power Status
 - Digital input
- Ports
 - ERPS
 - DHCPv4
 - Security
 - Aggregation
 - Spanning Tree
 - IPMC
 - LLDP
 - PTP
 - MAC Table
 - VLANs
 - DDMI
 - UDLD
 - SD Status
- Diagnostics
- Maintenance

Routing Information Base

Start from Network / Protocol NextHop with entries per page.

Codes: C - connected, S - static, O - OSPF, R - RIP, * - selected route, D - DHCP installed route

Protocol	Network/Prefix	NextHop	Distance	Metric	Interface	Uptime (hh:mm:ss)	State
D *	0.0.0.0/0	192.168.130.254	253	0	VLAN 2	02:53:22	Active
C *	192.168.130.0/24	-	-	-	VLAN 2	02:53:22	Active

Table 3.3 Monitoring Descriptions of System's IPv4 Routing Information Base:


Label	Description
Protocol	The protocol that installed this route. DHCP: The route is created by DHCP. Connected: The destination network is connected directly. Static: The route is created by user. OSPF: The route is created by OSPF
Net-work/Prefix	Network and prefix (example 192.168.2.1/24) of the given route entry
NextHop	Next-hop IP address. All-zeroes indicates the link is directly connected
Interface	Next-hop interface.
Distance	Distance of the route
Metric	Metric of the route
Uptime (hh:ss:mm)	Time (in seconds) since this route was created
State	Destination is active

Click **Refresh button** to refresh the page immediately. Check the autorefresh-box to refresh the page automatically.

Automatic refresh occurs every 3 seconds. |<<: Updates the table entries, starting from the first available entry. If the first entry of the table is displayed, the button is disabled. <<: Updates the table entries, ending at the entry prior to the first entry currently displayed. If the first entry of the table is displayed, the button is disabled. >>: Updates the table entries, starting from the entry next to the last entry currently displayed. If the last entry of the table is displayed, the button is disabled. >>|: Updates the table entries, ending at the last available entry. If the last entry of the table is displayed, the button is disabled.

3.1.5 IPv6 Routing Info. Base

This table in Figure 3.6 provides IPv6 routing status. Each page shows up to 999 table entries, selected through the “entries per page” input field. When first visited, the web page will show the beginning entries of this table. The “Start from ID” input field allow the user to change the starting point in this table. Clicking the **Refresh button** will update the displayed table starting from that or the closest next entry match. In addition, these input fields will upon a **Refresh button** click - assume the value of the first displayed entry, allowing for continuous refresh with the same start input field. Table 3.4 summarizes the description of each label in Routing Information Base webpage.

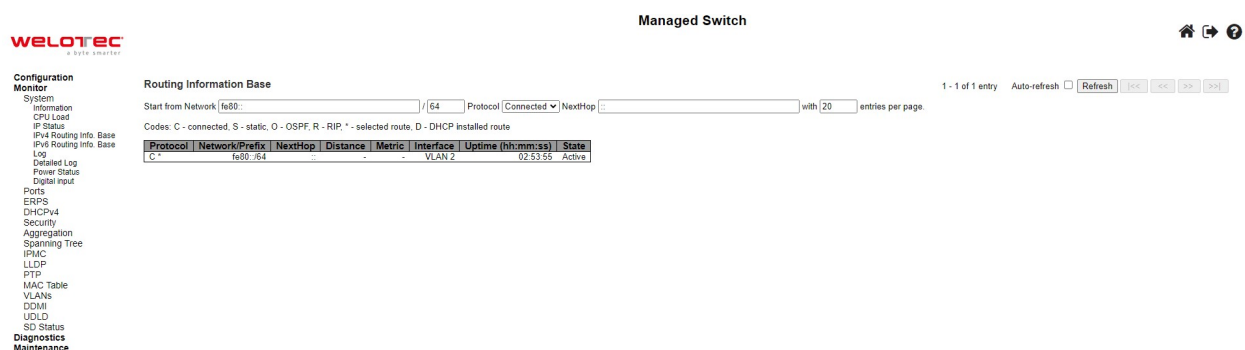

The screenshot shows the 'Managed Switch' web interface. On the left is a 'Configuration Monitor' sidebar with various system and network status links. The main area is titled 'Routing Information Base'. It includes a search bar for 'Start from Network' (set to fe80::/64) and a 'Protocol' dropdown (set to Connected). Below this is a table of routing entries. The table has columns: Protocol, Network/Prefix, NextHop, Distance, Metric, Interface, Uptime (hh:mm:ss), and State. One entry is visible: C, fe80::/64, -, -, VLAN 2, 02:53:55, Active. At the top right of the table area, it says '1 - 1 of 1 entry' and 'Auto-refresh' with a 'Refresh' button and navigation controls.

Table 3.4 Monitoring Descriptions of System's IPv6 Routing Information Base:

Label	Description
Protocol	The protocol that installed this route. DHCP: The route is created by DHCP. Connected: The destination network is connected directly. Static: The route is created by user. OSPF: The route is created by OSPF. RIP: The route is created by RIP.
Network/Prefix	Network and prefix (example 10.0.0.0/16) of the given route entry.
NextHop	Next-hop IP address. All-zeroes indicates the link is directly connected.
Distance	Distance of the route.
Metric	Metric of the route.
Interface	If the next-hop address is a link-local address, then this is the VLAN interface of the linklocal address. Otherwise, this value is not used.
Uptime (hh:ss:mm)	Time (in seconds) since this route was created
State	Destination is active

Click **Refresh button** to refresh the page immediately. Check this autorefresh-box to refresh the page automatically.

Automatic refresh occurs every 3 seconds. |<<: Updates the table entries, starting from the first available entry. If the first entry of the table is displayed, the button is disabled. <<: Updates the table entries, ending at the entry prior to the first entry currently displayed. If the first entry of the table is displayed, the button is disabled. >>: Updates the table entries, starting from the entry next to the last entry currently displayed. If the last entry of the table is displayed, the button is disabled. >>|: Updates the table entries, ending at the last available entry. If the last entry of the table is displayed, the button is disabled.

3.1.6 Log

The managed switch's system log information is provided in this **Log** webpage shown in Figure 3.7. Each page can display up to 999 table entries which can be selected through the “**entries per page**” input field. When first visited, the web page will show the beginning entries of this table. The “**Level**” input field is used to filter the display system log entries. The “**Clear Level**” input field is used to specify which system log entries will be cleared. To clear specific system log entries, select the clear level first then click the **Clear** button.

The “**Start from ID**” input field allows the user to change the starting point in this table. Clicking the **Refresh** button will update the displayed table starting from that or the closest next entry match. In addition, these input fields will upon a **Refresh** button click - assume the value of the first displayed entry, allowing for continuous refresh with the same start input field.

The >> will use the last entry of the currently displayed table as a basis for the next lookup. When the end is reached the text “No more entries” is shown in the displayed table. Use the >>| button to start over.

Configuration Monitor

- System
 - Information
 - CPU Load
 - IP Status
 - IPv4 Routing Info. Base
 - IPv6 Routing Info. Base
 - Log
 - Detailed Log
 - Power Status
 - Digital input
- Ports
- ERPS
- DHCPv4
- Security
- Aggregation
- Spanning Tree
- IPMC
- LLDP
- PTP
- MAC Table
- VLANs
- DDMI
- UDLD
- SD Status
- Diagnostics**
- Maintenance**

System Log Information

Level	All
Clear Level	All

The total number of entries is 14 for the given level.

Start from ID with entries per page.

ID	Level	Time	Message
1	Informational	1970-01-01T01:00:40+01:00	POWER-CHANGED: Power 1, changed state to on .
2	Notice	1970-01-01T01:00:40+01:00	LINK-UPDOWN: Interface FastEthernet 1/2, changed state to up.
3	Informational	1970-01-01T01:00:41+01:00	SYS-BOOTING: Switch just made a cold boot.
4	Notice	1970-01-01T01:00:44+01:00	LINK-UPDOWN: IP Interface VLAN 1 changed state to down.
5	Notice	1970-01-01T01:00:44+01:00	LINK-UPDOWN: IP Interface VLAN 1 changed state to down.
6	Notice	1970-01-01T01:00:49+01:00	LINK-UPDOWN: IP Interface VLAN 1 changed state to up.
7	Notice	1970-01-01T01:05:05+01:00	LINK-UPDOWN: Interface FastEthernet 1/1, changed state to up.
8	Notice	1970-01-01T01:10:25+01:00	LINK-UPDOWN: IP Interface VLAN 2 changed state to down.
9	Notice	1970-01-01T01:10:25+01:00	LINK-UPDOWN: IP Interface VLAN 2 changed state to down.
10	Notice	1970-01-01T01:12:42+01:00	LINK-UPDOWN: Interface FastEthernet 1/2, changed state to down.
11	Notice	1970-01-01T01:13:41+01:00	LINK-UPDOWN: Interface FastEthernet 1/2, changed state to up.
12	Notice	1970-01-01T01:30:18+01:00	LINK-UPDOWN: IP Interface VLAN 2 changed state to up.
13	Notice	1970-01-01T01:38:53+01:00	LINK-UPDOWN: Interface FastEthernet 1/2, changed state to down.
14	Notice	1970-01-01T01:38:54+01:00	LINK-UPDOWN: IP Interface VLAN 1 changed state to down.

Table 3.5 Monitoring Descriptions of System Log:

La- bel	Description
ID	The identification of the system log entry
Level	The level of the system log entry Informational: The system log entry is belonged information level. Warning: The system log entry is belonged warning level. Error: The system log entry is belonged error level
Time	The occurred time of the system log entry
Mes- sage	The detail message of the system log entry

3.1.7 Detailed Log

The managed switch system detailed log information is provided in this webpage shown in Figure 3.8. Table 3.6 provides descriptions for the Detailed System Log Information.



Configuration Monitor

- System
 - Information
 - CPU Load
 - IP Status
 - IPv4 Routing Info. Base
 - IPv6 Routing Info. Base
 - Log
 - Detailed Log
 - Power Status
 - Digital input
- Ports
- ERPS
- DHCPv4
- Security
- Aggregation
- Spanning Tree
- IPMC
- LLDP
- PTP
- MAC Table
- VLANs
- DDMI
- UDLD
- SD Status

Diagnostics Maintenance

Detailed System Log Information

ID	1
----	---

Message

Level	Informational
Time	1970-01-01T01:00:40+01:00
Message	POWER-CHANGED: Power 1, changed state to on .

Table 3.6 Monitoring Descriptions of System Detailed Log:

La- bel	Description
Level	The severity level of the system log entry. Informational: The system log entry is belonged information level. Warning: The system log entry is belonged warning level. Error: The system log entry is belonged error level
ID	The ID (≥ 1) of the system log entry
Mes- sage	The detail message of the system log entry

3.1.8 Power Status

This webpage in Figure 3.9 shows **Power Status** of the device. There are two or three powers: Power1, Power 2, and Power3, and the power state can be either On and Off. Some models support two powers, and some models support three powers.



Configuration Monitor

- System
 - Information
 - CPU Load
 - IP Status
 - IPv4 Routing Info. Base
 - IPv6 Routing Info. Base
 - Log
 - Detailed Log
 - Power Status
 - Digital input
- Ports
- ERPS
- DHCPv4
- Security
- Aggregation
- Spanning Tree
- IPMC
- LLDP
- PTP
- MAC Table
- VLANs
- DDMI
- UDLD
- SD Status
- Diagnostics**
- Maintenance**

Power Status

Power	State
Power 1	On
Power 2	Off
Power 3	Off

3.1.9 Digital Input

Status of Digital Input (DI) can be checked on this webpage shown in Figure 3.10. When it is “ON”, the device detects the signal from DI port. When it is “OFF”, the device will not detect the signal from DI port.



Configuration Monitor

- System
 - Information
 - CPU Load
 - IP Status
 - IPv4 Routing Info. Base
 - IPv6 Routing Info. Base
 - Log
 - Detailed Log
 - Power Status
 - Digital input
- Ports
- ERPS
- DHCPv4
- Security
- Aggregation
- Spanning Tree
- IPMC
- LLDP
- PTP
- MAC Table
- VLANs
- DDMI
- UDLD
- SD Status

Diagnostics Maintenance

Digital input Info

Digital input stauts OFF

3.2 Ports

3.2.1 State

This State webpage shown in Figure 3.11 provides an overview of the current switch port states. The port states are typically illustrated as follows:

Configuration Monitor

- System
- Ports
- State
- Traffic Overview
- QoS Statistics
- QCL Status
- Detailed Statistics
- Name Map
- ERPS
- DHCPv4
- Security
- Aggregation
- Spanning Tree
- IPMC
- LLDP
- PTP
- MAC Table
- VLANs
- DDMI
- UDLD
- SD Status
- Diagnostics**
- Maintenance**

Port State Overview

Front panel



Check the **Auto-refresh** box to refresh the page automatically. Automatic refresh occurs every 3 seconds. Click **Refresh** button to refresh the page immediately.

3.2.2 Traffic Overview

This Traffic Overview webpage provides an overview of general traffic statistics for all ports of managed switch as shown in Figure 3.12. Table 3.7 describes column labels for the Port Statics Overview.


Managed Switch										
<div>  </div> <div> <div> <div>Configuration</div> <div>Monitor</div> <div>System</div> <div>Ports</div> <div>State</div> <div>Traffic Overview</div> <div>QoS Statistics</div> <div>QCL Status</div> <div>Detailed Statistics</div> <div>Name Map</div> <div>ERPS</div> <div>DHCPv4</div> <div>Security</div> <div>Aggregation</div> <div>Spanning Tree</div> <div>IPMC</div> <div>LLDP</div> <div>PTP</div> <div>MAC Table</div> <div>VLANs</div> <div>DDMI</div> <div>UDLD</div> <div>SD Status</div> <div>Diagnostics</div> <div>Maintenance</div> </div> <div>Port Statistics Overview</div> </div>										
Port	Packets		Bytes		Errors		Drops		Filtered	
	Received	Transmitted	Received	Transmitted	Received	Transmitted	Received	Transmitted	Received	Received
1	0	0	0	0	0	0	0	0	0	0
2	0	0	0	0	0	0	0	0	0	0
3	0	0	0	0	0	0	0	0	0	0
4	121450	16228	13432895	4810522	0	0	480	0	87607	0
5	14880	22250	2962238	6858315	0	0	523	0	1865	0
6	0	0	0	0	0	0	0	0	0	0
7	0	0	0	0	0	0	0	0	0	0
8	0	0	0	0	0	0	0	0	0	0
9	0	0	0	0	0	0	0	0	0	0
10	0	0	0	0	0	0	0	0	0	0
11	0	0	0	0	0	0	0	0	0	0

Table 3.7 Monitoring Descriptions of Traffic Overview of Ports:

Label	Description	Factory default	De-
Port	The logical port for the settings contained in the same row.	Port Number	
Pack-ets	The number of received and transmitted packets per port.	0	
Bytes	The number of received and transmitted bytes per port.	0	
Errors	The number of frames received in error and the number of incomplete transmissions per port.	0	
Drops	The number of frames discarded due to ingress or egress congestion.	0	
Fil-tered	The number of received frames filtered by the forwarding process	0	

Check the **Auto-refresh** box to refresh the page automatically. Automatic refresh occurs every 3 seconds. Click **Refresh button** to refresh the page immediately.

3.2.3 QoS Statistics

QoS Statistics webpage in Figure 3.13 provides statistics for different queues on all managed switch's ports. The labels of the Queueing Counters are described in Table 3.8.

Managed Switch



Configuration Monitor

- System
- Ports
- State
- Traffic Overview
- QoS Statistics
- QCL Status
- Detailed Statistics
- Name Map
- ERPS
- DHCPv4
- Security
- Aggregation
- Spanning Tree
- IPMC
- LLDP
- PTP
- MAC Table
- VLANs
- DDMI
- UDLD
- SD Status
- Diagnostics**
- Maintenance**

Queueing Counters

Port	Q0		Q1		Q2		Q3		Q4		Q5		Q6		Q7	
	Rx	Tx	Rx	Tx	Rx	Tx	Rx	Tx	Rx	Tx	Rx	Tx	Rx	Tx	Rx	Tx
1	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
2	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
3	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
4	112701	15770	0	0	0	0	0	0	0	0	0	0	0	0	501	0
5	14771	21954	0	0	0	0	0	0	0	0	0	0	0	0	296	0
6	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
7	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
8	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
9	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
10	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
11	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Table 3.8 Monitoring Descriptions of Queueing Counters:

Label	Description
Port	The logical port for the settings contained in the same row.
Qn	There are 8 QoS queues per port. Q0 is the lowest priority queue
Rx/Tx	The number of received and transmitted packets per queue

Check the **Auto-refresh** box to refresh the page automatically. Automatic refresh occurs every 3 seconds. Click **Clear button** to clears the counters for all ports. Click **Refresh button** to refresh the page immediately.

3.2.4 QCL Status

This webpage in Figure 3.14 shows the QoS Control List (QCL) status by different QCL users. Each row describes the QoS Control Entry (QCE) that is defined. It is a conflict if a specific QCE is not applied to the hardware due to hardware limitations. The maximum number of QCEs is 256 on each switch. Table 3.9 summarizes the descriptions of the labels in the QoS Control List Status.



Configuration Monitor

- System
- Ports
- State
- Traffic Overview
- QoS Statistics
- QCL Status
- Detailed Statistics
- Name Map
- ERPS
- DHCPv4
- Security
- Aggregation
- Spanning Tree
- IPMC
- LLDP
- PTP
- MAC Table
- VLANs
- DDMI
- UDLD
- SD Status
- Diagnostics**
- Maintenance**

QoS Control List Status

User	QCE	Port	Frame Type	Action						Conflict
				CoS	DPL	DSCP	PCP	DEI	Policy	
No entries										

Table 3.9 Monitoring Descriptions of QoS Control List Status:

La- bel	Description
User	Indicates the QCL user
QCE	Indicates the QCE id.
Port	Indicates the list of ports configured with the QCE.
Frame Type	Indicates the type of frame. Possible values are: Any: Match any frame type. Ethernet: Match EtherType frames. LLC: Match (LLC) frames. SNAP: Match (SNAP) frames. IPv4: Match IPv4 frames. IPv6: Match IPv6 frames.
Ac- tion	Indicates the classification action taken on ingress frame if parameters configured are matched with the frame's content. Possible actions are: CoS: Classify Class of Service. DPL: Classify Drop Precedence Level. DSCP: Classify DSCP value. PCP: Classify PCP value. DEI: Classify DEI value. Policy: Classify ACL Policy number.
Con- flict	Displays Conflict status of QCL entries. As H/W resources are shared by multiple applications. It may happen that resources required to add a QCE may not be available, in that case it shows conflict status as 'Yes', otherwise it is always 'No'. Please note that conflict can be resolved by releasing the H/W resources required to add QCL entry on pressing 'Resolve Conflict' button

Select the QCL status from this **Combined** drop-down list. Check the **Auto-refresh** box to refresh the page automatically.

Automatic refresh occurs every 3 seconds. Click **Resolve Conflict button** to release the resources required to add QCL entry, in case the conflict status for any QCL entry is 'yes'. Click **Clear button** to clear the counters for all ports.

Click **Refresh** button to refresh the page immediately

3.2.5 Detailed Statistics

This webpage in Figure 3.15 provides detailed traffic statistics for a specific switch port. The user can use the port select box to select which switch port details to display. The displayed counters are the totals for receive and transmit, the size counters for receive and transmit, and the error counters for receive and transmit. Descriptions of statistics labels are summarized in Table 3.10.

WELOTEC A BYTE SMARTER		Managed Switch	
Configuration Monitor System Ports State Traffic Overview QoS Statistics QCL Status Detailed Statistics Name Map ERPS DHCPv4 Security Aggregation Spanning Tree IP/MC LLDP PTP MAC Table VLANs DDMI UOLD SD Status Diagnostics Maintenance	Detailed Port Statistics Port 1		Port 1 Auto-refresh
	Receive Total		Transmit Total
	Rx Packets	0	Tx Packets
	Rx Octets	0	Tx Octets
	Rx Unicast	0	Tx Unicast
	Rx Multicast	0	Tx Multicast
	Rx Broadcast	0	Tx Broadcast
	Rx Pause	0	Tx Pause
	Receive Size Counters		Transmit Size Counters
	Rx 64 Bytes	0	Tx 64 Bytes
	Rx 65-127 Bytes	0	Tx 65-127 Bytes
	Rx 128-255 Bytes	0	Tx 128-255 Bytes
	Rx 256-511 Bytes	0	Tx 256-511 Bytes
	Rx 512-1023 Bytes	0	Tx 512-1023 Bytes
	Rx 1024-1526 Bytes	0	Tx 1024-1526 Bytes
	Rx 1527- Bytes	0	Tx 1527- Bytes
	Receive Queue Counters		Transmit Queue Counters
	Rx Q0	0	Tx Q0
	Rx Q1	0	Tx Q1
	Rx Q2	0	Tx Q2
	Rx Q3	0	Tx Q3
	Rx Q4	0	Tx Q4
	Rx Q5	0	Tx Q5
	Rx Q6	0	Tx Q6
	Rx Q7	0	Tx Q7
	Receive Error Counters		Transmit Error Counters
	Rx Drops	0	Tx Drops
	Rx CRC/Alignment	0	Tx Late/Exc. Coll.
	Rx Undersize	0	
	Rx Oversize	0	
	Rx Fragments	0	
	Rx Jabber	0	
	Rx Filtered	0	

Table 3.10 Monitoring Descriptions of Detailed Port Statistics:

Label	Description
Receive Total and Transmit Total	
Rx and Tx Packets	The number of received and transmitted (good and bad) packets.
Rx and Tx Octets	The number of received and transmitted (good and bad) bytes. Includes FCS, but excludes framing bits.
Rx and Tx Unicast	The number of received and transmitted (good and bad) unicast packets.
Rx and Tx Multicast	The number of received and transmitted (good and bad) multicast packets.
Rx and Tx Broadcast	The number of received and transmitted (good and bad) broadcast packets.
Rx and Tx Pause	A count of the MAC Control frames received or transmitted on this port that have an opcode indicating a PAUSE operation.
Receive and Transmit Size Counters	The number of received and transmitted (good and bad) multicast packets.
Receive and Transmit Queue Counters	The number of received and transmitted (good and bad) broadcast packets.
Receive Error Counters	
Rx Drops	The number of frames dropped due to lack of receive buffers or egress congestion.
Rx CRC/Alignment	The number of frames received with CRC or alignment errors.
Rx Undersize	The number of short frames received with valid CRC. Short frames are frames that are smaller than 64 bytes.
Rx Oversize	The number of long frames received with valid CRC. Long frames are frames that are longer than the configured maximum frame length for this port.
Rx Fragments	The number of short frames received with invalid CRC. Short frames are frames that are smaller than 64 bytes.
Rx Jabber	The number of long frames received with invalid CRC. Long frames are frames that are longer than the configured maximum frame length for this port.
Rx Filtered	The number of received frames filtered by the forwarding process
Tx Drops	The number of frames dropped due to output buffer congestion
Tx Late/Exc. Coll	The number of frames dropped due to excessive or late collisions

The port select box determines which port is affected by clicking the buttons.

Check the **Auto-refresh** box to refresh the page automatically. Automatic refresh occurs every 3 seconds. Click **Clear button** to clear the counters for all ports. Click **Refresh button** to refresh the page immediately

3.2.6 Name Map

This webpage provides interface name to port number mapping. Many Web pages use a port number to express an interface, whereas Command Line Interface (CLI) uses interface names. The table shown in Figure 3.16 provides a means to convert from one to the other.



Configuration Monitor

- System
- Ports
 - State
 - Traffic Overview
 - QoS Statistics
 - QCL Status
 - Detailed Statistics
 - Name Map

- ERPS
- DHCPv4
- Security
- Aggregation
- Spanning Tree
- IPMC
- LLDP
- PTP
- MAC Table
- VLANs
- DDMI
- UDLD
- SD Status

Diagnostics Maintenance

Interface Name to Port Number Map

Interface Name	Port Number
Gi 1/1	1
Gi 1/2	2
Gi 1/3	3
Fa 1/1	4
Fa 1/2	5
Fa 1/3	6
Fa 1/4	7
Fa 1/5	8
Fa 1/6	9
Fa 1/7	10
Fa 1/8	11

3.3 ERPS

ERPS is an abbreviation for Ethernet Ring Protection Switching defined in ITU/T G.8032. It provides fast protection and recovery switching for Ethernet traffic in a ring topology while also ensuring that the Ethernet layer remains loop-free. This ERPS webpage reports the current status of ERPS instances on the managed switch as shown in Figure 3.17.

Configuration Monitor

- System
- Ports
- ERPS
- DHCPv4
- Security
- Aggregation
- Spanning Tree
- IPMC
- LLDP
- PTP
- MAC Table
- VLANs
- DDMI
- UDLD
- SD Status
- Diagnostics**
- Maintenance

ERPS Status

ERPS #	Oper	Warning	State	TxRapsActive	cFOPTo	UpdateTimeSecs	Request	Version	Tx Info				
1	●	●	Init	✗	✗	0	No Request	0	✗	✗	RingPort0	00:00:00:00:00:00:00:00:00:00:00:00:00:00:00:00	

Table 3.11 Description of ERPS Status:

Label	Description
ERPS	The ID of the ERPS. Click on link to get to ERPS instance page, you can reset counters and issue commands.
Oper	The operational state of ERPS instance. green colour: Active. red colour: Disabled or Internal error.
Warning	Operational warnings of ERPS instance. grey colour: No warnings.yellow colour: There are warnings, use tooltip to see.
State	Specifies protection/node state of ERPS.
TxRapsActive	Specifies whether we are currently supposed to be transmitting R-APS PDUs on our ring ports.
cFOPTo	Failure of Protocol - R-APS Rx Time Out.
Tx Info	
Update-TimeSecs	Time in seconds since boot that this structure was last updated.
Request	Request/state according to G.8032, table 10-3.
Version	Version of received/used R-APS Protocol. 0 means v1, 1 means v2, etc.
Rb	RB (RPL blocked) bit of R-APS info. See Figure 10-3 of G.8032.
Dnf	DNF (Do Not Flush) bit of R-APS info. See Figure 10-3 of G.8032.”
Bpr	BPR (Blocked Port Reference) of R-APS info. See Figure 10-3 of G.8032
Node Id	Node ID of this request
SMAC	The Source MAC address used in the request/state

Figure 3.18 shows detailed status of the EPRS where the parameters and commands are described in Table 3.12

Configuration

Monitor

System
Ports
ERPS
DHCPv4
Snooping Table
Relay Statistics
Detailed Statistics
Security
Aggregation
Spanning Tree
IPMC
LLDP
PTP
MAC Table
VLANs
DDMI
UDLD
SD Status
Diagnostics
Maintenance

ERPS Status

Configuration

ERPS #	Ver	Type	VC	Prop	Port0	Port1	Ring Id	Node Id	Level	VLAN	PCP	Rev	Guard	WTR	HoldOff	Enable
1	v1	Major	✓	✗	10	11	1	00:00:00:00:00:00	1	4090	7	✓	500	10	0	✗

Status

Oper	Warning	State	TxRapsActive	cFOPTo	UpdateTimeSecs	Request	Version	Tx Info				Bpr	Node Id	SMAC
●	●	Init	✗	✗	0	No Request	0	✗	✗	✗	✗	RingPort0	00:00:00:00:00:00	00:00:00:00:00:00

Status Ports

Parameter	Port0	Port1
Blocked	✗	✗
Signal Fail	✗	✗
Failure of Protocol - Provisioning Mismatch	✗	✗
UpdateTimeSecs	0	0
Request state	No Request	No Request
Version of received R-APS. 0 means v1 etc	0	0
RPL blocked bit of R-APS info	✗	✗
Do Not Flush bit of R-APS info	✗	✗
Blocked Port Reference of R-APS info	RingPort0	RingPort0
Node ID of this request	00:00:00:00:00:00	00:00:00:00:00:00
Source MAC address used in the request/state	00:00:00:00:00:00	00:00:00:00:00:00

Counters

Counter type	Port0	Port1
Received erroneous R-APS PDUs	0	0
Received R-APS PDUs with our own node ID	0	0
Received R-APS PDUs during guard timer	0	0
Received R-APS PDUs causing FOP-PM	0	0
Received NR R-APS PDUs	0	0
Received NR, RB R-APS PDUs	0	0
Received SF R-APS PDUs	0	0
Received FS R-APS PDUs	0	0
Received MS R-APS PDUs	0	0
Received Event R-APS PDUs	0	0
Transmitted NR R-APS PDUs	0	0
Transmitted NR, RB R-APS PDUs	0	0
Transmitted SF R-APS PDUs	0	0
Transmitted FS R-APS PDUs	0	0
Transmitted MS R-APS PDUs	0	0
Transmitted Event R-APS PDUs	0	0
Number of local signal fails	0	0
Number of FDB flushes	0	0

Table 3.12 Description of ERPS Detailed Status:

La- bel	Description
Con- fig- u- ra- tion	This table shows the current configuration for this ERPS instance. Go to the ERPS Configuration help page for further explanation.
Sta- tus	This shows the current status of the ERPS instance. Go to the ERPS Status help page for further explanation.
Sta- tus Ports	This shows the current status of the ERPS instance. Go to the ERPS Status help page for further explanation.
Coun- ters	This shows a number of counters useful for debug purpose. The Counter type column indicate the counted frame attribute.
ERPS Com- mand	No request: There is no active local command on this instance. Issuing this command has no effect. Clear: Clear a switchover (FS or MS) request and a WTB/WTR condition and force reversion even if not revertive. Force switch to Port0: Causes a forced switchover. Blocks port1 and unblocks port0. Force switch to Port1: Causes a forced switchover. Blocks port0 and unblocks port1. Manual switch to Port0: Causes a switchover if the signal is good and no forced switch is in effect. Blocks port1 and unblocks port0. Manual switch to Port1: Causes a switchover if the signal is good and no forced switch is in effect. Blocks port0 and unblocks port1

3.4 DHCPv4

3.4.1 Snooping Table

This Snooping Table webpage shown in Figure 3.19 displays the dynamic IP assigned information after DHCP Snooping mode is disabled. All DHCP clients obtained the dynamic IP address from the DHCP server will be listed in this table except for local VLAN interface IP addresses. Entries in the Dynamic DHCP snooping Table are shown on this page.

Each page shows up to 99 entries from the Dynamic DHCP snooping table, default being 20, selected through the “entries per page” input field. When first visited, the web page will show the first 20 entries from the beginning of the Dynamic DHCP snooping Table. The “MAC address” and “VLAN” input fields allow the user to select the starting point in the Dynamic DHCP snooping Table. Clicking the **Refresh** button will update the displayed table starting from that or the closest next Dynamic DHCP snooping Table match. In addition, the two input fields will - upon a **Refresh** button click - assume the value of the first displayed entry, allowing for continuous refresh with the same start address. The >> will use the last entry of the currently displayed table as a basis for the next lookup. When the end is reached the text “No more entries” is shown in the displayed table. Use the << button to start over.



Configuration Monitor

- System
- Ports
- ERPS
- DHCPv4
 - Snooping Table
 - Relay Statistics
 - Detailed Statistics
- Security
- Aggregation
- Spanning Tree
- IPMC
- LLDP
- PTP
- MAC Table
- VLANs
- DDMI
- UDLD
- SD Status
- Diagnostics
- Maintenance

Dynamic DHCP Snooping Table

Start from MAC address , VLAN with entries per page.

MAC Address	VLAN ID	Source Port	IP Address	IP Subnet Mask	DHCP Server
No more entries					

Table 3.13 Monitoring Descriptions of Dynamic DHCP Snooping Table:

Label	Description
MAC Address	User MAC address of the entry.
VLAN ID	VLAN-ID in which the DHCP traffic is permitted.
Source Port	Switch Port Number for which the entries are displayed.
IP Address	User IP address of the entry.
IP Subnet Mask	User IP subnet mask of the entry
DHCP Server	DHCP Server address of the entry

Check **Auto-refresh** box to refresh the page automatically. Automatic refresh occurs every 3 seconds. Click **Clear** button to clear DHCP Message Received Counters and DHCP Message Sent Counters. Click **Refresh** button to refresh the page immediately. Click << to update the table starting from the first entry in the Dynamic DHCP snooping Table. Click >> to update the table entries, starting from the last entry currently displayed.

3.4.2 Relay Statistics

This webpage provides statistics for DHCP relay as shown in Figure 3.20. Description of each Server Statistics is summarized in Table 3.14.

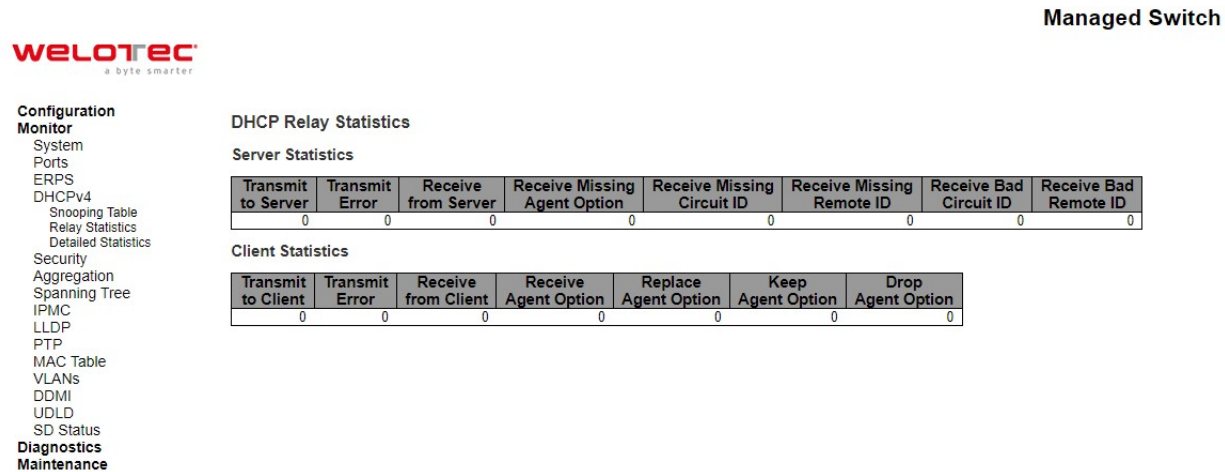



Table 3.14 Monitoring Descriptions of DHCP Relay Statistics:

Label	Description
Server Statistics	
Transmit To Server	The number of packets that are relayed from client to server.
Transmit Error	The number of packets that resulted in errors while being sent to clients.
Receive from Server	The number of packets received from server.
Receive Missing Agent Option	The number of packets received without agent information options.
Receive Missing Circuit ID	The number of packets received with the Circuit ID option missing.
Receive Missing Remote ID	The number of packets received with the Remote ID option missing.
Receive Bad Circuit ID	The number of packets whose Circuit ID option did not match known circuit ID.
Receive Bad Remote ID	The number of packets whose Remote ID option did not match known Remote ID.
Client Statistics	
Transmit To Client	The number of relayed packets from server to client.
Transmit Error	The number of packets that resulted in error while being sent to servers.
Receive from Client	The number of received packets from server.
Receive Agent Option	The number of received packets with relay agent information option.
Replace Agent Option	The number of packets which were replaced with relay agent information option.
Keep Agent Option	The number of packets whose relay agent information was retained.
Drop Agent Option	The number of packets that were dropped which were received with relay agent information

Check **Auto-refresh box** to refresh the page automatically. Automatic refresh occurs every 3 seconds. Click **Refresh button** to refresh the page immediately. Click **Clear button** clear all statistics.

3.4.3 Detailed Statistics

This Detailed Statistics webpage in Figure 3.21 provides statistics for DHCP snooping. Notice that the normal forward perport TX statistics is not increased if the incoming DHCP packet is done by L3 forwarding mechanism. And clear the statistics on specific port may not take effect on global statistics since it gathers the different layer overview. Descriptions of Statistics are summarized in Table 3.15.



Managed Switch

Configuration
Monitor
System
Ports
ERPS
DHCPv4
 Snooping Table
 Relay Statistics
 Detailed Statistics
Security
Aggregation
Spanning Tree
IPMC
LLDP
PTP
MAC Table
VLANs
DDMI
UDLD
SD Status
Diagnostics
Maintenance

DHCP Detailed Statistics Port 1

Receive Packets	0	Transmit Packets	0
Rx Discover	0	Tx Discover	0
Rx Offer	0	Tx Offer	0
Rx Request	0	Tx Request	0
Rx Decline	0	Tx Decline	0
Rx ACK	0	Tx ACK	0
Rx NAK	0	Tx NAK	0
Rx Release	0	Tx Release	0
Rx Inform	0	Tx Inform	0
Rx Lease Query	0	Tx Lease Query	0
Rx Lease Unassigned	0	Tx Lease Unassigned	0
Rx Lease Unknown	0	Tx Lease Unknown	0
Rx Lease Active	0	Tx Lease Active	0
Rx Discarded Checksum Error	0		
Rx Discarded from Untrusted	0		

Table 3.15 Monitoring Descriptions of DHCP Detailed Statistics Port 1:

Label	Description
Rx and Tx Discover	The number of discover (option 53 with value 1) packets received and transmitted.
Rx and Tx Offer	The number of offer (option 53 with value 2) packets received and transmitted.
Rx and Tx Request	The number of request (option 53 with value 3) packets received and transmitted.
Rx and Tx Decline	The number of decline (option 53 with value 4) packets received and transmitted.
Rx and Tx ACK	The number of ACK (option 53 with value 5) packets received and transmitted.
Rx and Tx NAK	The number of NAK (option 53 with value 6) packets received and transmitted.
Rx and Tx Release	The number of release (option 53 with value 7) packets received and transmitted.
Rx and Tx Inform	The number of inform (option 53 with value 8) packets received and transmitted.
Rx and Tx Lease Query	The number of lease query (option 53 with value 10) packets received and transmitted.
Rx and Tx Lease Unassigned	The number of lease unassigned (option 53 with value 11) packets received and transmitted.
Rx and Tx Lease Unknown	The number of lease unknown (option 53 with value 12) packets received and transmitted.
Rx and Tx Lease Active	The number of lease active (option 53 with value 13) packets received and transmitted.
Rx Discarded Checksum Error	The number of discard packet that IP/UDP checksum is error.
Rx Discarded from Untrusted	The number of discarded packets that are coming from untrusted port

The Combined DHCP user select box determines which user is affected by clicking the buttons. Port 1

The port select box determines which port is affected by clicking the buttons. Auto-refresh ☒ : Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds. Click **Refresh** button to refresh the page immediately. Click **Clear** button to clear all statistics.

3.5 Security

3.5.1 Network

Port Security Overview

This webpage in Figure 3.22 shows the Port Security status. Port Security is a module with no direct configuration. Configuration comes indirectly from other modules - the user modules. When a user module has enabled port security on a port, the port is set-up for software-based learning. In this mode, frames from unknown MAC addresses are passed on to the port security module, which in turn asks all user modules whether to allow this new MAC address to forward or block it. For a MAC address to be set in the forwarding state, all enabled user modules must unanimously agree on allowing the MAC address to forward. If only one chooses to block it, it will be blocked until that user module decides otherwise. The status page is divided into two sections - one with a legend of user modules and one with the actual port status. Table 3.16 summarizes the descriptions of Port Security Switch Status.



Configuration Monitor

- System
- Ports
- ERPS
- DHCPv4
- Security
 - Network
 - Port Security
 - Overview
 - Details
 - NAS
 - ACL Status
 - ARP Inspection
 - IP Source Guard
- AAA
- Switch
- Aggregation
- Spanning Tree
- IPMC
- LLDP
- PTP
- MAC Table
- VLANs
- DDMI
- UDLD
- SD Status

Diagnostics Maintenance

Port Security Switch Status

User Module Legend

User Module Name	Abbr
Port Security (Admin)	P
802.1X	8
Voice VLAN	V

Port Status

Clear	Port	Users	Violation Mode	State	MAC Count		
					Current	Violating	Limit
Clear	1	---	Disabled	Disabled	-	-	-
Clear	2	---	Disabled	Disabled	-	-	-
Clear	3	---	Disabled	Disabled	-	-	-
Clear	4	---	Disabled	Disabled	-	-	-
Clear	5	---	Disabled	Disabled	-	-	-
Clear	6	---	Disabled	Disabled	-	-	-
Clear	7	---	Disabled	Disabled	-	-	-
Clear	8	---	Disabled	Disabled	-	-	-
Clear	9	---	Disabled	Disabled	-	-	-
Clear	10	---	Disabled	Disabled	-	-	-
Clear	11	---	Disabled	Disabled	-	-	-

Table 3.16 Monitoring Descriptions of Port Security Switch Status:

La- bel	Description
User Mod- ule Leg- end	
User Mod- ule Name	The full name of a module that may request Port Security services.
Abbr	A one-letter abbreviation of the user module. This is used in the Users column in the port status table.
Port Sta- tus	
Clear	Click to remove all dynamic MAC addresses on all VLANs on this port. The button is only clickable if number of secured MAC addresses is non-zero.
Port	The port number for which the status applies. Click the port number to see the status for this particular port.
Users	Each of the user modules has a column that shows whether that module has enabled Port Security or not. A '-' means that the corresponding user module is not enabled, whereas a letter indicates that the user module abbreviated by that letter (see Abbr) has enabled port security.
Vio- la- tion Mode	Shows the configured Violation Mode of the port. It can take one of four values: Disabled: Port Security is not administratively enabled on this port. Protect: Port Security is administratively enabled in Protect mode. Restrict: Port Security is administratively enabled in Restrict mode. Shutdown: Port Security is administratively enabled in Shutdown mode.
State	Shows the current state of the port. It can take one of four values: Disabled: No user modules are currently using the Port Security service. Ready: The Port Security service is in use by at least one user module, and is awaiting frames from unknown MAC addresses to arrive. Limit Reached: The Port Security service is administratively enabled and the limit is reached. Shut down: The Port Security service is administratively enabled and the port is shut down. No MAC addresses can be learned on the port until it is administratively re opened by administratively taking the port down and then back up on the "Configuration→Ports" page. Alternatively, the switch may be booted or reconfigured Port Security-wise.
MAC Count (Cur- rent, Vio- lat- ing, Limit)	The three columns indicate the number of currently learned MAC addresses (forwarding as well as blocked), the number of violating MAC address (only counting in Restrict mode) and the maximum number of MAC addresses that can be learned on the port, respectively. If no user modules are enabled on the port, the Current column will show a dash (-). If Port Security is not administratively enabled on the port, the Violating and Limit columns will show a dash

Check **Auto-refresh box** to refresh the page automatically. Automatic refresh occurs every 3 seconds. Click **Refresh button** to refresh the page immediately.

3.5.2 Port Security Details

This page shows the MAC addresses secured by the Port Security module. Port Security is a module with no direct configuration. Configuration comes indirectly from other modules - the user modules. When a user module has enabled port security on a port, the port is set-up for software-based learning. In this mode, frames from unknown MAC addresses are passed on to the port security module, which in turn asks all user modules whether to allow this new MAC address to forward or block it. For a MAC address to be set in the forwarding state, all enabled user modules must unanimously agree on allowing the MAC address to forward. If only one chooses to block it, it will be blocked until that user module decides otherwise.



Configuration Monitor


- System
- Ports
- ERPS
- DHCPv4
- Security
 - Network
 - Port Security
 - Overview
 - Details
 - NAS
 - ACL Status
 - ARP Inspection
 - IP Source Guard
 - AAA
 - Switch
- Aggregation
- Spanning Tree
- IPMC
- LLDP
- PTP
- MAC Table
- VLANs
- DDMI
- UDLD
- SD Status
- Diagnostics
- Maintenance

Port Security Port Status All Ports

Delete	Port	VLAN ID	MAC Address	Type	State	Age/Hold
No MAC addresses attached						

Table 3.17 Monitoring Descriptions of Port Security Port Status All Ports:

La- bel	Description
Delete	Click to remove this particular MAC addresses from MAC address table. The button is only clickable if the entry type is Dynamic. Use the “Configuration→Security→Port Security→MAC Addresses” page to remove Static and Sticky entries.
Port	If all ports are shown (can be selected through the drop-down box on the top right), this one shows the port to which the MAC address is bound.
MAC Ad- dress & VLAN ID	The MAC address and VLAN ID that is seen on this port. If no MAC addresses are learned, a single row stating “No MAC addresses attached” is displayed.
Type	Indicates the type of entry. Takes one of three values: Dynamic: The entry is learned through learn frames coming to the Port Security module while the port in question is not in sticky mode. Static: The entry is entered by the end-user through management. Entry is not subject to aging. Sticky: When the port is in sticky mode, all entries that would otherwise have been learned as dynamic are learned as sticky. Sticky entries are part of the running-config and can therefore be saved to startup-config. An important aspect of sticky MAC addresses is that they survive link changes (in contrast to Dynamic, which will have to be learned again). They also survive reboots if running-config is saved to startup-config.
State	Indicates whether the corresponding MAC address is blocked or forwarding. In the blocked state, it will not be allowed to transmit or receive traffic.
Age/hold	Indicates how long at least one user module has decided to block this MAC address, it will stay in the blocked state until the hold time (measured in seconds) expires. If all user modules have decided to allow this MAC address to forward, and aging is enabled, the Port Security module will periodically check that this MAC address still forwards traffic. If the age period (measured in seconds) expires and no frames have been seen, the MAC address will be removed from the MAC table. Otherwise, a new age period will begin. If aging is disabled or a user module has decided to hold the MAC address indefinitely, a dash (-) will be shown

Use the port select box  to select which port to show status for. Click on **Auto-refresh** box to refresh the page automatically. Automatic refresh occurs every 3 seconds. Click **Refresh** button to refresh the page immediately

3.5.3 NAS Switch

This page provides an overview of the current NAS port states. NAS is an acronym for **Network Access Server**. The NAS is meant to act as a gateway to guard access to a protected source. A client connects to the NAS, and the NAS connects to another resource asking whether the client’s supplied credentials are valid. Based on the answer, the NAS then allows or disallows access to the protected resource. An example of a NAS implementation is IEEE 802.1X.

Configuration

Monitor

- System
- Ports
- ERPS
- DHCPv4
- Security
 - Network
 - Port Security
 - Overview
 - Details
 - NAS
 - Switch
 - Port
 - ACL Status
 - ARP Inspection
 - IP Source Guard
 - AAA
 - Switch
- Aggregation
- Spanning Tree
- IPMC
- LLDP
- PTP
- MAC Table
- VLANs
- DDMI
- UDLD
- SD Status
- Diagnostics
- Maintenance

Network Access Server Switch Status

Port	Admin State	Port State	Last Source	Last ID	QoS Class	Port VLAN ID
1	Force Authorized	Globally Disabled			-	
2	Force Authorized	Globally Disabled			-	
3	Force Authorized	Globally Disabled			-	
4	Force Authorized	Globally Disabled			-	
5	Force Authorized	Globally Disabled			-	
6	Force Authorized	Globally Disabled			-	
7	Force Authorized	Globally Disabled			-	
8	Force Authorized	Globally Disabled			-	
9	Force Authorized	Globally Disabled			-	
10	Force Authorized	Globally Disabled			-	
11	Force Authorized	Globally Disabled			-	

Table 3.18 Monitoring Descriptions of Network Access Server Switch Status:

La- bel	Description
Port	The switch port number. Click to navigate to detailed NAS statistics for this port.
Ad- min State	The port's current administrative state. Refer to NAS Admin State for a description of possible values.
Port State	The current state of the port. Refer to NAS Port State for a description of the individual states.
Last Source	The source MAC address carried in the most recently received EAPOL frame for EAPOL-based authentication, and the most recently received frame from a new client for MAC-based authentication.
Last ID	The user name (supplicant identity) carried in the most recently received Response Identity EAPOL frame for EAPOL-based authentication, and the source MAC address from the most recently received frame from a new client for MAC-based authentication.
QoS Class	QoS Class assigned to the port by the RADIUS server if enabled.
Port VLAN ID	The VLAN ID that NAS has put the port in. The field is blank, if the Port VLAN ID is not overridden by NAS. If the VLAN ID is assigned by the RADIUS server, "(RADIUS-assigned)" is appended to the VLAN ID. Read more about RADIUS-assigned VLANs at Configuration>Security>Network>NAS. If the port is moved to the Guest VLAN, "(Guest)" is appended to the VLAN ID. Read more about Guest VLANs Configuration>Security>Network>NAS

Check **Auto-refresh** box to refresh the page automatically. Automatic refresh occurs every 3 seconds. Click **Refresh button** to refresh the page immediately.

3.5.4 NAS Port

This page provides detailed NAS statistics for a specific switch port running EAPOL-based IEEE 802.1X authentication. For MAC-based ports, it shows selected backend server (RADIUS Authentication Server) statistics, only. Use the port select box to select which port details to be displayed.



Configuration Monitor

- System
- Ports
- ERPS
- DHCPv4
- Security
- Network
 - Port Security
 - Overview
 - Details
 - NAS
 - Switch
 - Port
 - ACL Status
 - ARP Inspection
 - IP Source Guard
- AAA
 - Switch
- Aggregation
- Spanning Tree
- IPMC
- LLDP
- PTP
- MAC Table
- VLANs
- DDMI
- UDLD
- SD Status

Diagnostics Maintenance

NAS Statistics Port 1

Port State

Admin State	Force Authorized
Port State	Globally Disabled

Table 3.19 Monitoring Descriptions of NAS Statistics Port 1:

Label	Description
Port State	
Admin State	The port's current administrative state. Refer to NAS Admin State for a description of possible values.
Port State	The current state of the port. Refer to NAS Port State for a description of the individual states.
QoS Class	The QoS class assigned by the RADIUS server. The field is blank if no QoS class is assigned.
Port VLAN ID	The VLAN ID that NAS has put the port in. The field is blank, if the Port VLAN ID is not overridden by NAS. If the VLAN ID is assigned by the RADIUS server, "(RADIUS-assigned)" is appended to the VLAN ID. Read more about RADIUS-assigned VLANs Configuration > Security > Network > NAS. If the port is moved to the Guest VLAN, "(Guest)" is appended to the VLAN ID. Read more about Guest VLANs Configuration > Security > Network > NAS.
Port Counters	
EAPOL Counters	These supplicant frame counters are available for the following administrative states: • Force Authorized • Force Unauthorized • Port-based 802.1X
Backend Server Counters	These backend (RADIUS) frame counters are available for the following administrative states: • Port-based 802.1X
Last Supplicant/Client Info	Information about the last supplicant/client that attempted to authenticate. This information is available for the following administrative states: • Port-based 802.1X • Single 802.1X • Multi 802.1X • MAC-based Auth.
Selected Counters	
Selected Counters	The Selected Counters table is visible when the port is in one of the following administrative states: • MAC-based Auth. The table is identical to and is placed next to the Port Counters table, and will be empty if no MAC address is currently selected. To populate the table, select one of the attached MAC Addresses from the table below.
Attached MAC Addresses	
Identity	Shows the identity of the supplicant, as received in the Response Identity EAPOL frame. Clicking the link causes the supplicant's EAPOL and Backend Server counters to be shown in the Selected Counters table. If no supplicants are attached, it shows No supplicants attached. This column is not available for MAC-based Auth.
MAC Address	For MAC-based Auth., this column holds the MAC address of the attached client. Clicking the link causes the client's Backend Server counters to be shown in the Selected Counters table. If no clients are attached, it shows No clients attached.
VLAN ID	This column holds the VLAN ID that the corresponding client is currently secured through the Port Security module.
State	The client can either be authenticated or unauthenticated. In the authenticated state, it is allowed to forward frames on the port, and in the unauthenticated state, it is blocked. As long as the backend

The port select box **Port 1** determines which port is affected when clicking the buttons. Check Auto-refresh box to refresh the page automatically. Automatic refresh occurs every 3 seconds. Click **Refresh** button to refresh the page immediately. The **Clear** button is available in the following modes: **Force Authorized**, **Force Unauthorized**, **Port-based 802.1X**, and **Single 802.1X** mode. Click to clear the counters for the selected port. The **Clear All** button is available in the following modes: **Multi 802.1X** and **MAC-based Auth.X**. Click to clear both the port counters and all of the attached client's counters. The "Last Client" will not be cleared. However, the **Clear This** button is available in the following modes: **Multi 802.1X** and **MACbased Auth.X**. Click to clear only the currently selected client's counters.

3.5.5 ACL Status

This page shows the ACL status by different ACL users. Each row describes the ACE that is defined. It is a conflict if a specific ACE is not applied to the hardware due to hardware limitations. The maximum number of ACEs is 512 on each switch.



Configuration Monitor

- System
- Ports
- ERPS
- DHCPv4
- Security
 - Network
 - Port Security
 - Overview
 - Details
 - NAS
 - Switch
 - Port
 - ACL Status
 - ARP Inspection
 - IP Source Guard
 - AAA
 - Switch
- Aggregation
- Spanning Tree
- IPMC
- LLDP
- PTP
- MAC Table
- VLANs
- DDMI
- UDLD
- SD Status
- Diagnostics**
- Maintenance**

ACL Status

User	ACE	Frame Type	Action	Rate Limiter	Mirror	CPU	Counter	Conflict
dhcp	1	IPv4/UDP 67 DHCP Client	Deny	Disabled	Disabled	Yes	57	No
dhcp	2	IPv4/UDP 68 DHCP Server	Deny	Disabled	Disabled	Yes	37	No
IP	1	Any	Permit	Disabled	Disabled	Yes	4818	No
IP	3	Any	Permit	Disabled	Disabled	Yes	12388	No
IP	4	IPv4 DIP:224.0.0.1/32	Permit	Disabled	Disabled	Yes	0	No

Table 3.20 Monitoring Descriptions of ACL Status:

La- bel	Description
User	Indicates the ACL user.
ACE	Indicates the ACE ID on local switch.
Frame Type	Indicates the frame type of the ACE. Possible values are: Any: The ACE will match any frame type. EType: The ACE will match Ethernet Type frames. Note that an Ethernet Type based ACE will not get matched by IP and ARP frames. ARP: The ACE will match ARP/RARP frames. IPv4: The ACE will match all IPv4 frames. IPv4/ICMP: The ACE will match IPv4 frames with ICMP protocol. IPv4/UDP: The ACE will match IPv4 frames with UDP protocol. IPv4/TCP: The ACE will match IPv4 frames with TCP protocol. IPv4/Other: The ACE will match IPv4 frames, which are not ICMP/UDP/TCP. IPv6: The ACE will match all IPv6 standard frames.
Ac- tion	Indicates the forwarding action of the ACE. Permit: Frames matching the ACE may be forwarded and learned. Deny: Frames matching the ACE are dropped. Filter: Frames matching the ACE are filtered.
Rate Lim- iter	Indicates the rate limiter number of the ACE. The allowed range is 1 to 16. When Disabled is displayed, the rate limiter operation is disabled.
CPU	Forward packet that matched the specific ACE to CPU.
Counter	The counter indicates the number of times the ACE was hit by a frame.
Con- flict	Indicates the hardware status of the specific ACE. The specific ACE is not applied to the hardware due to hardware limitations

The select box [224] determines which ACL user is affected by clicking the buttons. Check **Auto-refresh box** to refresh the page automatically. Automatic refresh occurs every 3 seconds. Click **Refresh button** to refresh the page immediately

3.5.6 ARP Inspection

Entries in the Dynamic ARP Inspection Table are shown on this page. The Dynamic ARP Inspection Table contains up to 256 entries, and is sorted first by port, then by VLAN ID, then by MAC address, and then by IP address. All dynamic entries are learning from DHCP Snooping.

Each page shows up to 99 entries from the Dynamic ARP Inspection table, default being 20, selected through the “entries per page” input field. When first visited, the web page will show the first 20 entries from the beginning of the Dynamic ARP Inspection Table. The “Start from port address”, “VLAN”, “MAC address” and “IP address” input fields allow the user to select the starting point in the Dynamic ARP Inspection Table. Clicking the **Refresh button** will update the displayed table starting from that or the closest next Dynamic ARP Inspection Table match. In addition, the two input fields will - upon a **Refresh button** click - assume the value of the first displayed entry, allowing for continuous refresh with the same start address. The >> will use the last entry of the currently displayed table as a basis for the next lookup. When the end is reached the text “No more entries” is shown in the displayed table. Use the << button to start over.

Configuration
Monitor

- System
- Ports
- ERPS
- DHCPv4
- Security
- Network
 - Port Security
 - Overview
 - Details
 - NAS
 - Switch
 - Port
 - ACL Status
 - ARP Inspection
 - IP Source Guard
- AAA
- Switch
- Aggregation
- Spanning Tree
- IPMC
- LLDP
- PTP
- MAC Table
- VLANs
- DDMI
- UDLD
- SD Status
- Diagnostics**
- Maintenance**

Dynamic ARP Inspection Table

Start from , VLAN , MAC address and IP address with entries per page.

Port	VLAN ID	MAC Address	IP Address
No more entries			

Table 3.21 Monitoring Descriptions of Dynamic ARP Inspection Table:

Label	Description
Port	Switch Port Number for which the entries are displayed.
VLAN ID	VLAN-ID in which the ARP traffic is permitted.
MAC Address	User MAC address of the entry.
IP Address	User IP address of the entry

Check **Auto-refresh** box to refresh the page automatically. Automatic refresh occurs every 3 seconds. Click Refresh button to refresh the page immediately. Click **Clear** button to flushes all dynamic entries. Click |<< to update the table starting from the first entry in the Dynamic ARP Inspection Table. Click >> to update the table, starting with the entry after the last entry currently displayed.

3.5.7 IP Source Guard

Entries in the Dynamic IP Source Guard Table are shown on this page. The Dynamic IP Source Guard Table is sorted first by port, then by VLAN ID, then by IP address, and then by MAC address.

Each page shows up to 99 entries from the Dynamic IP Source Guard table, default being 20, selected through the “entries per page” input field. When first visited, the web page will show the first 20 entries from the beginning of the Dynamic IP Source Guard Table. The “Start from port address”, “VLAN” and “IP address” input fields allow the user to select the starting point in the Dynamic IP Source Guard Table. Clicking the Refresh button will update the displayed table starting from that or the closest next Dynamic IP Source Guard Table match. In addition, the two input fields will - upon a Refresh button click - assume the value of the first displayed entry, allowing for continuous refresh with the same start address. The >> will use the last entry of the currently displayed table as a basis for the next lookup. When the end is reached the text “No more entries” is shown in the displayed table. Use the |<< button to start over.

Configuration

Monitor

- System
- Ports
- ERPS
- DHCPv4
- Security
 - Network
 - Port Security
 - Overview
 - Details
 - NAS
 - Switch
 - Port
 - ACL Status
 - ARP Inspection
 - IP Source Guard
 - AAA
 - Switch
- Aggregation
- Spanning Tree
- IPMC
- LLDP
- PTP
- MAC Table
- VLANs
- DDMI
- UDLD
- SD Status
- Diagnostics
- Maintenance

Dynamic IP Source Guard Table

Start from , VLAN and IP address with entries per page.

Port	VLAN ID	IP Address	MAC Address
No more entries			

Table 3.22 Monitoring Descriptions of Dynamic IP Source Guard Table:

Label	Description
Port	Switch Port Number for which the entries are displayed.
VLAN ID	VLAN-ID in which the IP traffic is permitted.
IP Address	User IP address of the entry
MAC Address	Source MAC address

Check Auto-refresh box to refresh the page automatically. Automatic refresh occurs every 3 seconds. Click Refresh button to refresh the page immediately. Click Clear button to flush all dynamic entries. Click |<< to update the table starting from the first entry in the Dynamic ARP Inspection Table. Click >> to update the table, starting with the entry after the last entry currently displayed.

3.5.8 AAA

RADIUS Overview

This page provides an overview of the status of the RADIUS servers configurable on the Authentication configuration page.

Configuration Monitor

- System
- Ports
- ERPS
- DHCPv4
- Security
 - Network
 - Port Security
 - Overview
 - Details
 - NAS
 - Switch
 - Port
 - ACL Status
 - ARP Inspection
 - IP Source Guard
 - AAA
 - RADIUS Overview
 - RADIUS Details
 - Switch
- Aggregation
- Spanning Tree
- IPMC
- LLDP
- PTP
- MAC Table
- VLANs
- DDMI
- UDLD
- SD Status
- Diagnostics**
- Maintenance**

RADIUS Server Status Overview

#	IP Address	Authentication Port	Authentication Status
1			Disabled
2			Disabled
3			Disabled
4			Disabled
5			Disabled

Table 3.23 Monitoring Descriptions of RADIUS Server Status Overview:

La- bel	Description
#	The RADIUS server number. Click to navigate to detailed statistics for this server.
IP Ad- dress	The IP address of this server
Au- then- ti- ca- tion Port	UDP port number for authentication
Au- then- ti- ca- tion Sta- tus	The current status of the server. This field takes one of the following values: Disabled: The server is disabled. Not Ready: The server is enabled, but IP communication is not yet up and running. Ready: The server is enabled, IP communication is up and running, and the RADIUS module is ready to accept access attempts. Dead (X seconds left): Access attempts were made to this server, but it did not reply within the configured timeout. The server has temporarily been disabled, but will get reenabled when the dead-time expires. The number of seconds left before this occurs is displayed in parentheses. This state is only reachable when more than one server is enabled.
Ac- count- ing Port	UDP port number for accounting.
Ac- count- ing Sta- tus	The current status of the server. This field takes one of the following values: Disabled: The server is disabled. Not Ready: The server is enabled, but IP communication is not yet up and running. Ready: The server is enabled, IP communication is up and running, and the RADIUS module is ready to accept access attempts. Dead (X seconds left): Access attempts were made to this server, but it did not reply within the configured timeout. The server has temporarily been disabled, but will get reenabled when the dead-time expires. The number of seconds left before this occurs is displayed in parentheses. This state is only reachable when more than one server is enabled

Check **Auto-refresh** box to refresh the page automatically. Automatic refresh occurs every 3 seconds. Click **Refresh** button to refresh the page immediately

After clicking on each port, the following webpage will be launched, as shown in Figure 3.30. Table 3.24 shows the description of each port's RADIUS server status.

RADIUS Authentication Statistics for Server #1 Server #1 ▼ Auto-refresh ☐ Refresh Clear

Receive Packets		Transmit Packets	
Access Accepts	0	Access Requests	0
Access Rejects	0	Access Retransmissions	0
Access Challenges	0	Pending Requests	0
Malformed Access Responses	0	Timeouts	0
Bad Authenticators	0		
Unknown Types	0		
Packets Dropped	0		
Other Info			
IP Address			
State			Disabled
Round-Trip Time			0 ms

RADIUS Accounting Statistics for Server #1

Receive Packets		Transmit Packets	
Responses	0	Requests	0
Malformed Responses	0	Retransmissions	0
Bad Authenticators	0	Pending Requests	0
Unknown Types	0	Timeouts	0
Packets Dropped	0		
Other Info			
IP Address			
State			Disabled
Round-Trip Time			0 ms

Table 3.24 Monitoring Descriptions of Each Port's RADIUS Server Status:

Label	Description
RA-DIUS Au-thenti-cation Statis-tics for Server#1	RADIUS Authentication Statistics map closely to those specified in RFC4668 - RADIUS Authentication Client MIB. Use the server select box to switch between the backend servers to show details for. For RADIUS authentication server packet counter, there are seven receive and four transmit counters.
Re-ceive Pack-ets	
Access Ac-cepts	The number of RADIUS Access-Accept packets (valid or invalid) received from the server.
Access Re-jects	The number of RADIUS Access-Reject packets (valid or invalid) received from the server.
Access Chal-lenges	The number of RADIUS Access-Challenge packets (valid or invalid) received from the server.
Mal-formed Access Re-sponses	The number of malformed RADIUS Access-Response packets received from the server. Malformed packets include packets with an invalid length. Bad authenticators or Message Authenticator attributes or unknown types are not included as malformed access responses.
Bad Au-thenti-cators	The number of RADIUS Access-Response packets containing invalid authenticators or Message Authenticator attributes received from the server.
Un-known Types	The number of RADIUS packets that were received with unknown types from the server on the authentication port and dropped.
Pack-ets Dropped	The number of RADIUS packets that were received from the server on the authentication port and dropped for some other reason.
Trans-mit Pack-ets	
Access Re-quests	The number of RADIUS Access-Request packets sent to the server. This does not include retransmissions.
Access Re-trans-mission	The number of RADIUS Access-Request packets retransmitted to the RADIUS authentication server.
Pend-ing Re-quests	The number of RADIUS Access-Request packets destined for the server that have not yet timed out or received a response. This variable is incremented when an Access-Request is sent and decremented due to receipt of an Access-Accept, Access-Reject, Access-Challenge, timeout, or retransmission.
Time-outs	The number of authentication timeouts to the server. After a timeout, the client may retry to the same server, send to a different server, or give up. A retry to the same server is counted as a retransmit as well as a timeout. A send to a different server is counted as a Request as well as a timeout.

RADIUS Details

This page provides detailed statistics for a particular RADIUS server.



Configuration

Monitor

- System
- Ports
- ERPS
- DHCPv4
- Security
 - Network
 - Port Security
 - Overview
 - Details
 - NAS
 - Switch
 - Port
 - ACL Status
 - ARP Inspection
 - IP Source Guard
 - AAA
 - RADIUS Overview
 - RADIUS Details
- Switch
- Aggregation
- Spanning Tree
- IPMC
- LLDP
- PTP
- MAC Table
- VLANs
- DDMI
- UDLD
- SD Status

Diagnostics

Maintenance

RADIUS Authentication Statistics for Server #1

Receive Packets		Transmit Packets	
Access Accepts	0	Access Requests	0
Access Rejects	0	Access Retransmissions	0
Access Challenges	0	Pending Requests	0
Malformed Access Responses	0	Timeouts	0
Bad Authenticators	0		
Unknown Types	0		
Packets Dropped	0		
Other Info			
IP Address			
State			Disabled
Round-Trip Time			0 ms

Table 3.25 Monitoring Descriptions of RADIUS Authentication and Accounting Statistics:

Label	Description
RA-DIUS Au-thenti-cation Statis-tics for Server#1	RADIUS Authentication Statistics map closely to those specified in RFC4668 – RADIUS Authentication Client MIB. Use the server select box to switch between the backend servers to show details for. For RADIUS authentication server packet counter, there are seven receive and four transmit counters.
Re-ceive Pack-ets	
Access Ac-cepts	The number of RADIUS Access-Accept packets (valid or invalid) received from the server.
Access Re-jects	The number of RADIUS Access-Reject packets (valid or invalid) received from the server.
Access Chal-lenges	The number of RADIUS Access-Challenge packets (valid or invalid) received from the server.
Mal-formed Access Re-sponses	The number of malformed RADIUS Access Response packets received from the server. Malformed packets include packets with an invalid length. Bad authenticators or Message Authenticator attributes or unknown types are not included as malformed access responses.
Bad Au-thenti-cators	The number of RADIUS Access-Response packets containing invalid authenticators or Message Authenticator attributes received from the server.
Un-known Types	The number of RADIUS packets that were received with unknown types from the server on the authentication port and dropped.
Pack-ets Dropped	The number of RADIUS packets that were received from the server on the authentication port and dropped for some other reason.
Trans-mit Pack-ets	
Access Re-quests	The number of RADIUS Access-Request packets sent to the server. This does not include retransmissions.
Access Re-trans-mission	The number of RADIUS Access-Request packets retransmitted to the RADIUS authentication server.
Pend-ing Re-quests	The number of RADIUS Access-Request packets destined for the server that have not yet timed out or received a response. This variable is incremented when an Access-Request is sent and decremented due to receipt of an Access-Accept, Access-Reject, Access-Challenge, timeout, or retransmission.
Time-outs	The number of authentication timeouts to the server. After timeout a, the client may retry to the same server, send to a different server, or give up. A retry to the same server is counted as a retransmit as well as a timeout. A send to a different server is counted as a Request as well as a timeout.

The server select box determines which server is affected by clicking the buttons. Click check Auto-refresh box to refresh the page automatically. Automatic refresh occurs every 3 seconds. Click Refresh button to refresh the page immediately. Click Clear button to clear the counters for the selected server. The “Pending Requests” counter will not be cleared by this operation.

Switch


RMON Statistics

This page provides an overview of RMON Statistics entries. Each page shows up to 99 entries from the Statistics table, default being 20, selected through the “entries per page” input field. When first visited, the web page will show the first 20 entries from the beginning of the Statistics table. The first displayed will be the one with the lowest ID found in the Statistics table.

The “Start from Control Index” allows the user to select the starting point in the Statistics table. Clicking the Refresh button will update the displayed table starting from that or the next closest Statistics table match.

The >> will use the last entry of the currently displayed entry as a basis for the next lookup. When the end is reached the text “No more entries” is shown in the displayed table. Use the << button to start over.

Managed Switch



Configuration

Monitor

- System
- Ports
- ERPS
- DHCPv4
- Security
- Network
 - Port Security
 - Overview
 - Details
 - NAS
 - Switch
 - Port
 - ACL Status
 - ARP Inspection
 - IP Source Guard
- AAA
- RADIUS Overview
- RADIUS Details
- Switch
 - RMON
 - Statistics
 - History
 - Alarm
 - Event
- Aggregation
- Spanning Tree
- IPMC
- LLDP
- PTP
- MAC Table
- VLANs
- DDMI
- UDLD
- SD Status

Diagnostics

Maintenance

RMON Statistics Status Overview

Start from Control Index with entries per page.

ID	Data Source (ifindex)	Drop	Octets	Pkts	Broad-cast	Multi-cast	CRC Errors	Under-size	Over-size	Frag.	Jabb.	Coll.	64 Bytes	65 ~ 127	128 ~ 255	256 ~ 511	512 ~ 1023	1024 ~ 1588
No more entries																		

Table 3.26 Monitoring Descriptions of RMON Statistics Status Overview:

Label	Description
ID	Indicates the index of Statistics entry.
Data Source (if Index)	The port ID which wants to be monitored.
Drop	The total number of events in which packets were dropped by the probe due to lack of resources.
Octets	The total number of octets of data (including those in bad packets) received on the network.
Pkts	The total number of packets (including bad packets, broadcast packets, and multicast packets) received.
Broadcast	The total number of good packets received that were directed to the broadcast address.
Multicast	The total number of good packets received that were directed to a multicast address.
CRC Errors	The total number of packets received that had a length (excluding framing bits, but including FCS octets) of between 64 and 1518 octets, inclusive, but had either a bad Frame Check Sequence (FCS) with an integral number of octets (FCS Error) or a bad FCS with a non-integral number of octets (Alignment Error).
Under-size	The total number of packets received that were less than 64 octets.
Over-size	The total number of packets received that were longer than 1518 octets.
Frag.	The number of frames which size is less than 64 octets received with invalid CRC.
Jabb.	The number of frames which size is larger than 64 octets received with invalid CRC.
Coll.	The best estimate of the total number of collisions on this Ethernet segment.
64 Bytes	The total number of packets (including bad packets) received that were 64 octets in length.
65~127	The total number of packets (including bad packets) received that were between 65 to 127 octets in length.
128~255	The total number of packets (including bad packets) received that were between 128 to 255 octets in length.
256~511	The total number of packets (including bad packets) received that were between 256 to 511 octets in length.
512~1023	The total number of packets (including bad packets) received that were between 512 to 1023 octets in length.
1024~1588	The total number of packets (including bad packets) received that were between 1024 to 1588 octets in length.

Check Auto-refresh box to refresh the page automatically. Automatic refresh occurs every 3 seconds. Click Refresh button to refresh the page immediately. Click |<< to update the table starting from the first entry in the Statistics table, i.e. the entry with the lowest ID. Click >> to updates the table, starting with the entry after the last entry currently displayed.

RMON History

This page provides an overview of RMON History entries. Each page shows up to 99 entries from the History table, default being 20, selected through the “entries per page” input field. When first visited, the web page will show the first 20 entries from the beginning of the History table. The first displayed will be the one with the lowest History Index and Sample Index found in the History table. The “Start from History Index and Sample Index” allows the user to select the starting point in the History table. Clicking the Refresh button will update the displayed table starting from that or the next closest History table match. The >> will use the last entry of the currently displayed entry as a basis for the next lookup. When the end is reached the text “No more entries” is shown in the displayed table. Use the << button to start over.

Managed Switch



Configuration Monitor

- System
- Ports
- ERPS
- DHCPv4
- Security
 - Network
 - Port Security
 - Overview
 - Details
 - NAS
 - Switch
 - Port
 - ACL Status
 - ARP Inspection
 - IP Source Guard
 - AAA
 - RADIUS Overview
 - RADIUS Details
 - Switch
 - RMON
 - Statistics
 - History
 - Alarm
 - Event
 - Aggregation
 - Spanning Tree
 - IPMC
 - LLDP
 - PTP
 - MAC Table
 - VLANs
 - DDMI
 - UDLD
 - SD Status
- Diagnostics
- Maintenance

RMON History Overview

Start from Control Index and Sample Index with entries per page.

History Index	Sample Index	Sample Start	Drop	Octets	Pkts	Broad-cast	Multi-cast	CRC Errors	Under-size	Over-size	Frag.	Jabb.	Coll.	Utilization
No more entries														

Table 3.27 Monitoring Descriptions of RMON History Overview:

La- bel	Description
His- tory In- dex	Indicates the index of History control entry.
Sam- ple In- dex	Indicates the index of the data entry associated with the control entry.
Sam- ple Start	The value of sysUpTime at the start of the interval over which this sample was measured.
Drop	The total number of events in which packets were dropped by the probe due to lack of resources.
Octets	The total number of octets of data (including those in bad packets) received on the network.
Pkts	The total number of packets (including bad packets, broadcast packets, and multicast packets) received.
Broad- cast	The total number of good packets received that were directed to the broadcast address.
Mul- ti- cast	The total number of good packets received that were directed to a multicast address.
CRCEr- rors	The total number of packets received that had a length (excluding framing bits, but including FCS octets) of between 64 and 1518 octets, inclusive, but had either a bad Frame Check Sequence (FCS) with an integral number of octets (FCS Error) or a bad FCS with a non-integral number of octets (Alignment Error).
Un- der- size	The total number of packets received that were less than 64 octets.
Over- size	The total number of packets received that were longer than 1518 octets.
Frag.	The number of frames which size is less than 64 octets received with invalid CRC.
Jabb.	The number of frames which size is larger than 64 octets received with invalid CRC.
Coll.	The best estimate of the total number of collisions on this Ethernet segment.
Uti- liza- tion	The best estimate of the mean physical layer network utilization on this interface during this sampling interval, in hundredths of a percent

Click Auto-refresh box to refresh the page automatically. Automatic refresh occurs every 3 seconds. Click Refresh button to refresh the page immediately. Click |<< to update the table starting from the first entry in the Statistics table, i.e. the entry with the lowest ID. Click >> to updates the table, starting with the entry after the last entry currently displayed.

RMON Alarm

Configure RMON Alarm table on this page. The entry index key is ID.



Configuration

Monitor

- System
- Ports
- ERPS
- DHCPv4
- Security
 - Network
 - Port Security
 - Overview
 - Details
 - NAS
 - Switch
 - Port
 - ACL Status
 - ARP Inspection
 - IP Source Guard
 - AAA
 - RADIUS Overview
 - RADIUS Details
 - Switch
 - RMON
 - Statistics
 - History
 - Alarm
 - Event
- Aggregation
- Spanning Tree
- IPMC
- LLDP
- PTP
- MAC Table
- VLANs
- DDMI
- UDLD
- SD Status
- Diagnostics**
- Maintenance**

RMON Alarm Overview

Start from Control Index with entries per page.

ID	Interval	Variable	Sample Type	Value	Startup Alarm	Rising Threshold	Rising Index	Falling Threshold	Falling Index
No more entries									

Table 3.28 Monitoring Descriptions of RMON Alarm Overview:

La- bel	Description
Delete	Check to delete the entry. It will be deleted during the next save.
ID	Indicates the index of the entry. The range is from 1 to 65535.
In- ter- val	Indicates the interval in seconds for sampling and comparing the rising and falling threshold. The range is from 1 to $2^{31}-1$.
Vari- able	Indicates the particular variable to be sampled, the possible variables are: InOctets: The total number of octets received on the interface, including framing characters. InUcastPkts: The number of unicast packets delivered to a higher-layer protocol. InNUcastPkts: The number of broad-cast and multicast packets delivered to a higher-layer protocol. InDiscards: The number of inbound packets that are discarded even the packets are normal. InErrors: The number of inbound packets that contained errors preventing them from being deliverable to a higher-layer protocol. InUnknownProtos: the number of the inbound packets that were discarded because of the unknown or un-support protocol. OutOctets: The number of octets transmitted out of the interface, including framing characters. OutUcastPkts: The number of uni-cast packets that request to transmit. OutNUcastPkts: The number of broad-cast and multi-cast packets that request to transmit. OutDiscards: The number of outbound packets that are discarded event the packets are normal. OutErrors: The number of outbound packets that could not be transmitted because of errors. OutQLen: The length of the output packet queue (in packets).
Sam- ple Type	The method of sampling the selected variable and calculating the value to be compared against the thresholds, possible sample types are: Absolute: Get the sample directly. Delta: Calculate the difference between samples (default).
Value	The value of the statistic during the last sampling period.
Start- up Alarm	The method of sampling the selected variable and calculating the value to be compared against the thresholds, possible sample types are: Rising Trigger alarm when the first value is larger than the rising threshold. Falling Trigger alarm when the first value is less than the falling threshold. RisingOrFalling Trigger alarm when the first value is larger than the rising threshold or less than the falling threshold (default).
Ris- ing Thresh- old	Rising threshold value (-2147483648-2147483647).
Ris- ing In- dex	Rising event index (1-65535).
Falling Thresh- old	Falling threshold value (-2147483648-2147483647)
Falling In- dex	Falling event index (1-65535)

Click **Add New Entry button** to add a new access management entry. Click **Save button** to save changes. Click **Reset button** to undo any changes made locally and revert to previously saved values.

RMON Event

Configure RMON Event table on this page. The entry index key is ID.



Configuration Monitor

- System
- Ports
- ERPS
- DHCPv4
- Security
- Network
 - Port Security
 - Overview
 - Details
 - NAS
 - Switch
 - Port
 - ACL Status
 - ARP Inspection
 - IP Source Guard
- AAA
 - RADIUS Overview
 - RADIUS Details
- Switch
 - RMON
 - Statistics
 - History
 - Alarm
 - Event
- Aggregation
- Spanning Tree
- IPMC
- LLDP
- PTP
- MAC Table
- VLANs
- DDMI
- UDLD
- SD Status

Diagnostics Maintenance

RMON Event Overview

Start from Control Index and Sample Index with entries per page.

Event Index	LogIndex	LogTime	LogDescription
No more entries			

Table 3.29 Monitoring Descriptions of RMON Event:

Label	Description
Event Index	Indicates the index of the event entry.
Log Index	Indicates the index of the log entry.
LogTime	Indicates Event log time
LogDescription	Indicates the Event description

3.6 Aggregation

3.6.1 Status

This page is used to see the status of ports in Aggregation group. Using multiple ports in parallel to increase the link speed beyond the limits of a port and to increase the redundancy for higher availability.



Configuration Monitor

- System
- Ports
- ERPS
- DHCPv4
- Security
 - Network
 - AAA
 - Switch
- Aggregation
 - Status
 - LACP
- Spanning Tree
- IPMC
- LLDP
- PTP
- MAC Table
- VLANs
- DDMI
- UDLD
- SD Status

Diagnostics Maintenance

Aggregation Status

Aggr ID	Name	Type	Speed	Configured Ports	Aggregated Ports
No aggregation groups					

Table 3.30 Monitoring Descriptions of Aggregation Status:

Label	Description
Aggr ID	The Aggregation ID associated with this aggregation instance.
Name	Name of the Aggregation group ID.
Type	Type of the Aggregation group (Static or LACP).
Speed	Speed of the Aggregation group.
Configured ports	Configured member ports of the Aggregation group
Aggregated ports	Aggregated member ports of the Aggregation group

Check the **Auto-refresh** box to refresh the page automatically. Automatic refresh occurs every 3 seconds. Click **Refresh** button to refresh the page immediately.

3.6.2 LACP

System Status

This page provides a status overview for all LACP instances. LACP is an IEEE 802.3ad standard protocol. The Link Aggregation Control Protocol, allows bundling several physical ports together to form a single logical port.



Configuration Monitor

- System
- Ports
- ERPS
- DHCPv4
- Security
 - Network
 - AAA
 - Switch
- Aggregation
 - Status
 - LACP
 - System Status
 - Internal Status
 - Neighbor Status
 - Port Statistics
- Spanning Tree
- IPMC
- LLDP
- PTP
- MAC Table
- VLANs
- DDMI
- UDLD
- SD Status
- Diagnostics**
- Maintenance**

LACP System Status

Local System ID

Priority	MAC Address
32768	78-70-52-00-00-79

Partner System Status

Aggr ID	Partner System ID	Partner Prio	Partner Key	Last Changed	Local Ports
No ports enabled or no existing partners					

Table 3.31 Monitoring Descriptions of LACP System Status:

Label	Description
Aggr ID	The Aggregation ID associated with this aggregation instance. For LLAG the id is shown as 'isid:aggr-id' and for GLAGs as 'aggr-id'
Partner System ID	The system ID (MAC address) of the aggregation partner.
Partner Key	The Key that the partner has assigned to this aggregation ID.
Last changed	The time since this aggregation changed.
Local Ports	Shows which ports are a part of this aggregation for this switch

Check **Auto-refresh box** to refresh the page automatically. Automatic refresh occurs every 3 seconds. Click **Refresh button** to refresh the page immediately.

Internal Status

This page provides a status overview for the [LACP] internal (i.e. local system) status for all ports. Only ports that are part of an LACP group are shown. For details on the shown parameters please refer to IEEE 801.AX-2014.

Managed Switch



Configuration Monitor

- System
- Ports
- ERPS
- DHCPv4
- Security
 - Network
 - AAA
 - Switch
- Aggregation
 - Status
 - LACP
 - System Status
 - Internal Status
 - Neighbor Status
 - Port Statistics
- Spanning Tree
- IPMC
- LLDP
- PTP
- MAC Table
- VLANs
- DDMI
- UDLD
- SD Status
- Diagnostics**
- Maintenance**

LACP Internal Port Status

Port	State	Key	Priority	Activity	Timeout	Aggregation	Synchronization	Collecting	Distributing	Defaulted	Expired
No LACP ports enabled											

Table 3.32 Monitoring Descriptions of LACP Internal Port Status:

Label	Description
Port	The switch port number.
State	The current port state: Down: The port is not active. Active: The port is in active state. Standby: The port is in standby state.
Key	The key assigned to this port. Only ports with the same key can aggregate together.
Prior-ity	The priority assigned to this aggregation group.
Activ-ity	The LACP mode of the group (Active or Passive).
Time-out	The timeout mode configured for the port (Fast or Slow).
Ag-gre-ga-tion	Show whether the system considers this link to be “aggregable”; i.e., a potential candidate for aggregation.
Syn-chron-iza-tion	Show whether the system considers this link to be “IN_SYNC”; i.e., it has been allocated to the correct LAG, the group has been associated with a compatible Aggregator, and the identity of the LAG is consistent with the System ID and operational Key information transmitted.
Col-lect-ing	Show if collection of incoming frames on this link is enabled.
Dis-tribut-ing	Show if distribution of outgoing frames on this link is enabled.
De-faulted	Show if the Actor’s Receive machine is using Defaulted operational Partner information.
Ex-pired	Show if that the Actor’s Receive machine is in the EXPIRED state

Check **Auto-refresh box** to refresh the page automatically. Automatic refresh occurs every 3 seconds. Click **Refresh button** to refresh the page immediately.

Neighbor Status

This page provides a status overview for the [LACP] neighbour status for all ports. Only ports that are part of an LACP group are shown. For details on the shown parameters please refer to IEEE 801.AX-2014.

Configuration

Monitor

- System
- Ports
- ERPS
- DHCPv4
- Security
 - Network
 - AAA
 - Switch
- Aggregation
 - Status
 - LACP
 - System Status
 - Internal Status
 - Neighbor Status
 - Port Statistics
- Spanning Tree
- IPMC
- LLDP
- PTP
- MAC Table
- VLANs
- DDMI
- UDLD
- SD Status
- Diagnostics
- Maintenance

LACP Neighbor Port Status

Port	State	Aggr ID	Partner Key	Partner Port	Partner Port Prio	Activity	Timeout	Aggregation	Synchronization	Collecting	Distributing	Defaulted	Expired
No LACP neighbor status available													

Table 3.33 Monitoring Descriptions of LACP Neighbour Port Status:

Label	Description
Port	The switch port number.
State	The current port state: Down: The port is not active. Active: The port is in active state. Standby: The port is in standby state.
Aggr ID	The aggregation group ID which the port is assigned to.
Part- ner Key	The key assigned to this port by the partner.
Part- ner Port	The partner port number associated with this link.
Part- ner Port Prior- ity	The priority assigned to this partner port.
Activ- ity	The LACP mode of the group (Active or Passive).
Time- out	The timeout mode configured for the partner port (Fast or Slow).
Aggre- gation	Show whether the partner considers this link to be “aggregable”; i.e., a potential candidate for aggregation.
Syn- chro- niza- tion	Show whether the partner considers this link to be “IN_SYNC”; i.e., it has been allocated to the correct LAG, the group has been associated with a compatible Aggregator, and the identity of the LAG is consistent with the System ID and operational Key information transmitted.
Col- lecting	Show if collection of incoming frames on this link is enabled.
Dis- tribut- ing	Show if distribution of outgoing frames on this link is enabled.
De- faulted	Show if the partners Receive machine is using Defaulted operational Partner information.
Ex- pired	Show if that the partners Receive machine is in the EXPIRED state

Check **Auto-refresh box** to refresh the page automatically. Automatic refresh occurs every 3 seconds. Click **Refresh button** to refresh the page immediately.

Port Statistics

This page provides an overview for LACP statistics for all ports.



Configuration Monitor

- System
- Ports
- ERPS
- DHCPv4
- Security
 - Network
 - AAA
 - Switch
- Aggregation
 - Status
 - LACP
 - System Status
 - Internal Status
 - Neighbor Status
 - Port Statistics
- Spanning Tree
- IPMC
- LLDP
- PTP
- MAC Table
- VLANs
- DDMI
- UDLD
- SD Status

Diagnostics Maintenance

LACP Statistics

Port	LACP Received	LACP Transmitted	Discarded	
			Unknown	Illegal
No ports enabled				

Table 3.34 Monitoring Descriptions of LACP Statistics:

Label	Description
Port	The switch port number.
LACP Received	Shows how many LACP frames have been received at each port.
LACP Transmitted	Shows how many LACP frames have been sent from each port.
Discarded	Shows how many unknown or illegal LACP frames have been discarded at each port.

Check **Auto-refresh** box to refresh the page automatically. Automatic refresh occurs every 3 seconds. Click **Re-fresh button** to refresh the page immediately. Click **Clear button** to clear the counters for the selected server. The “Pending Requests” counter will not be cleared by this operation

3.7 Spanning Tree

3.7.1 Bridge Status

This page provides a status overview of all STP bridge instances.



Configuration Monitor

- System
- Ports
- ERPS
- DHCPv4
- Security
- Network
- AAA
- Switch
- Aggregation
- Status
- LACP
- Spanning Tree
- Bridge Status
- Port Status
- Port Statistics
- IPMC
- LLDP
- PTP
- MAC Table
- VLANs
- DDMI
- UDLD
- SD Status
- Diagnostics
- Maintenance

STP Bridges

MSTI	Bridge ID	Root			Topology Flag	Topology Change Last
		ID	Port	Cost		
CIST	32768.78-70-52-00-00-79	32768.78-70-52-00-00-79	-	0	Steady	-

Table 3.35 Monitoring Descriptions of STP Bridges:

Label	Description
Bridge ID	The Bridge ID of this Bridge instance.
Root ID	The Bridge ID of the currently elected root bridge.
Root Port	The switch port currently assigned the root port role.
Root Cost	Root Path Cost. For the Root Bridge it is zero. For all other Bridges, it is the sum of the Port Path Costs on the least cost path to the Root Bridge.
Topology Flag	The current state of the Topology Change Flag of this Bridge instance.
Topology Change Last	The time since last Topology Change occurred

Check the **Auto-refresh box** to refresh the page automatically. Automatic refresh occurs every 3 seconds. Click **Refresh button** to refresh the page immediately.

3.7.2 Port Status

This page displays the STP CIST port status for physical ports of the switch.



Configuration Monitor

- System
- Ports
- ERPS
- DHCPv4
- Security
 - Network
 - AAA
 - Switch
- Aggregation
 - Status
 - LACP
- Spanning Tree
 - Bridge Status
 - Port Status
 - Port Statistics
- IPMC
- LLDP
- PTP
- MAC Table
- VLANs
- DDMI
- UDLD
- SD Status

Diagnostics Maintenance

STP Port Status

Port	CIST Role	CIST State	Uptime
1	Non-STP	Forwarding	-
2	Non-STP	Forwarding	-
3	Non-STP	Forwarding	-
4	Non-STP	Forwarding	-
5	Non-STP	Forwarding	-
6	Non-STP	Forwarding	-
7	Non-STP	Forwarding	-
8	Non-STP	Forwarding	-
9	Non-STP	Forwarding	-
10	Non-STP	Forwarding	-
11	Non-STP	Forwarding	-

Table 3.36 Monitoring Descriptions of STP Port Status:

Label	Description
Port	The switch port number of the logical STP port.
CIST Role	The current STP port role of the CIST port. The port role can be one of the following values: AlternatePort BackupPort RootPort DesignatedPort Disabled.
CIST State	The current STP port state of the CIST port. The port state can be one of the following values: Discarding Learning Forwarding.
Up-time	The time since the bridge port was last initialized

Check the **Auto-refresh** box to refresh the page automatically. Automatic refresh occurs every 3 seconds. Click **Refresh** button to refresh the page immediately.

3.7.3 Port Statistics

This page displays the STP port statistics counters of bridge ports in the switch.



Configuration Monitor

- System
- Ports
- ERPS
- DHCPv4
- Security
 - Network
 - AAA
 - Switch
- Aggregation
 - Status
 - LACP
- Spanning Tree
 - Bridge Status
 - Port Status
 - Port Statistics
- IPMC
- LLDP
- PTP
- MAC Table
- VLANs
- DDMI
- UDLD
- SD Status

Diagnostics Maintenance

STP Statistics

Port	Transmitted				Received				Discarded	
	MSTP	RSTP	STP	TCN	MSTP	RSTP	STP	TCN	Unknown	Illegal
No ports enabled										

Table 3.37 Monitoring Descriptions of STP Statistics:

Label	Description
Port	The switch port number of the logical STP port.
Transmitted/Received MSTP	The number of MSTP BPDU's received/transmitted on the port.
Transmitted/Received RSTP	The number of RSTP BPDU's received/transmitted on the port.
Transmitted/Received STP	The number of legacy STP Configuration BPDU's received/transmitted on the port.
Transmitted/Received TCN	The number of (legacy) Topology Change Notification BPDU's received/transmitted on the port.
Discarded Unknown	The number of unknown Spanning Tree BPDU's received (and discarded) on the port
Discarded Illegal	The number of illegal Spanning Tree BPDU's received (and discarded) on the port

Check the **Auto-refresh box** to refresh the page automatically. Automatic refresh occurs every 3 seconds. Click **Refresh button** to refresh the page immediately.

3.8 IPMC

3.8.1 IGMP Snooping



Configuration	
Monitor	I
System	S
Ports	
ERPS	
DHCPv4	
Security	
Network	F
AAA	
Switch	
Aggregation	
Status	
LACP	
Spanning Tree	
IPMC	
IGMP Snooping	
Status	
Groups Information	
IPv4 SFM Information	
MLD Snooping	

Status

This page provides IGMP Snooping status.

Managed Switch



Configuration

Monitor
System
Ports
ERPS
DHCPv4
Security
Network
AAA
Switch
Aggregation
Status
LACP
Spanning Tree
IPMC
IGMP Snooping
Status
Groups Information
IPv4 SFM Information
MLD Snooping
LLDP
Neighbors
Port Statistics
PTP
MAC Table
VLANs
DDMI
UDLD
SD Status
Diagnostics
Maintenance

IGMP Snooping Status

Statistics

VLAN ID	Querier Version	Host Version	Querier Status	Queries Transmitted	Queries Received	V1 Reports Received	V2 Reports Received	V3 Reports Received	V2 Leaves Received
---------	-----------------	--------------	----------------	---------------------	------------------	---------------------	---------------------	---------------------	--------------------

Router Port

Port	Status
1	-
2	-
3	-
4	-
5	-
6	-
7	-
8	-
9	-
10	-
11	-

Table 3.38 Descriptions of DHCP Server Statistics Monitoring:

Label	Description
Statistics	
VLAN ID	The VLAN ID of the entry.
Querier Version	Working Querier Version currently.
Host Version	Working Host Version currently.
Querier Status	Shows the Querier status is "ACTIVE" or "IDLE". "DISABLE" denotes the specific interface is administratively disabled.
Queries Transmitted	The number of Transmitted Queries.
Queries Received	The number of Received Queries.
V1 Reports Received	The number of Received V1 Reports.
V2 Reports Received	The number of Received V2 Reports.
V3 Reports Received	The number of Received V3 Reports.
V2 Leaves Received	The number of Received V2 Leaves.
Router Port	Display which ports act as router ports. A router port is a port on the Ethernet switch that leads towards the Layer 3 multicast device or IGMP querier. Static denotes the specific port is configured to be a router port. Dynamic denotes the specific port is learnt to be a router port. Both denote the specific port is configured or learnt to be a router port.
Port	Switch port number
Status	Indicate whether specific port is a router port or not

Check the **Auto-refresh box** to refresh the page automatically. Automatic refresh occurs every 3 seconds. Click **Refresh button** to refresh the page immediately. Click **Clear button** to clear all Statistics counters.

Groups Information

Entries in the IGMP Group Table are shown on this page. The IGMP Group Table is sorted first by VLAN ID, and then by group.

Each page shows up to 99 entries from the IGMP Group table, default being 20, selected through the “entries per page” input field. When first visited, the web page will show the first 20 entries from the beginning of the IGMP Group Table. The “Start from VLAN”, and “group” input fields allow the user to select the starting point in the IGMP Group Table. Clicking the **Refresh** button will update the displayed table starting from that or the closest next IGMP Group Table match. In addition, the two input fields will - upon a **Refresh** button click - assume the value of the first displayed entry, allowing for continuous refresh with the same start address. The >> will use the last entry of the currently displayed table as a basis for the next lookup. When the end is reached the text “No more entries” is shown in the displayed table. Use the |<< button to start over.



Configuration Monitor

- System
- Ports
- ERPS
- DHCPv4
- Security
 - Network
 - AAA
 - Switch
- Aggregation
 - Status
 - LACP
- Spanning Tree
- IPMC
 - IGMP Snooping
 - Status
 - Groups Information
 - IPv4 SFM Information
 - MLD Snooping
- LLDP
 - Neighbors
 - Port Statistics
- PTP
- MAC Table
- VLANs
- DDMI
- UDLD
- SD Status
- Diagnostics**
- Maintenance**

IGMP Snooping Group Information

Start from VLAN and group address with entries per page.

		Port Members										
VLAN ID	Groups	1	2	3	4	5	6	7	8	9	10	11
No more entries												

Table 3.39 Monitoring Descriptions of IGMP Snooping Group Information:

Label	Description
VLAN ID	VLAN ID of the group.
Groups	Group address of the group displayed.
Port Members	Ports under this group

Check the Auto-refresh box to refresh the page automatically. Automatic refresh occurs every 3 seconds. Click Refresh button to refresh the displayed table starting from the input fields. Click |<< to update the table starting from the first entry in the MVR Channels (Groups) Information Table. Click >> to updates the table, starting with the entry after the last entry currently displayed.

IPv4 SFM Information

Entries in the IGMP SFM Information Table are shown on this page. The IGMP SFM (Source-Filtered Multicast) Information Table also contains the SSM (Source-Specific Multicast) information. This table is sorted first by VLAN ID, then by group, and then by Port. Different source addresses belong to the same group are treated as single entry.



Configuration Monitor

- System
- Ports
- ERPS
- DHCPv4
- Security
 - Network
 - AAA
 - Switch
- Aggregation
 - Status
 - LACP
- Spanning Tree
- IPMC
 - IGMP Snooping
 - Status
 - Groups Information
 - IPv4 SFM Information
 - MLD Snooping
- LLDP
 - Neighbors
 - Port Statistics
- PTP
- MAC Table
- VLANs
- DDMI
- UDLD
- SD Status
- Diagnostics**
- Maintenance**

IGMP SFM Information

Start from VLAN and Group with entries per page.

VLAN ID	Group	Port	Mode	Source Address	Type	Hardware Filter/Switch
No more entries						

Table 3.40 Monitoring Descriptions IGMP SFM Information:

Label	Description
VLAN ID	VLAN ID of the group.
Group	Group address of the group displayed.
Port	Switch port number.
Mode	Indicates the filtering mode maintained per (VLAN ID, port number, Group Address) basis. It can be either Include or Exclude.
Source Address	IP Address of the source. Currently, the maximum number of IPv4 source address for filtering (per group) is 8. When there is no any source filtering address, the text "None" is shown in the Source Address field.
Type	Indicates the Type. It can be either Allow or Deny.
Hardware Filter/Switch	Indicates whether data plane destined to the specific group address from the source IPv4 address could be handled by chip or not

Check the **Auto-refresh** box to refresh the page automatically. Automatic refresh occurs every 3 seconds. Click **Refresh** button to refresh the displayed table starting from the input fields. Click << to update the table starting from the first entry in the IGMP SFM Information Table. Click >> to update the table, starting with the entry after

the last entry currently displayed

3.8.2 MLD Snooping

Status

This page provides MLD Snooping status.



Configuration

Monitor

- System
- Ports
- ERPS
- DHCPv4
- Security
 - Network
 - AAA
 - Switch
- Aggregation
 - Status
 - LACP
- Spanning Tree
- IPMC
 - IGMP Snooping
 - Status
 - Groups Information
 - IPv4 SFM Information
 - MLD Snooping
 - Status
 - Groups Information
 - IPv6 SFM Information
- LLDP
 - Neighbors
 - Port Statistics
- PTP
- MAC Table
- VLANs
- DDMI
- UDLD
- SD Status
- Diagnostics**
- Maintenance**

MLD Snooping Status

Statistics

VLAN ID	Querier Version	Host Version	Querier Status	Queries Transmitted	Queries Received	V1 Reports Received	V2 Reports Received	V1 Leaves Received
---------	-----------------	--------------	----------------	---------------------	------------------	---------------------	---------------------	--------------------

Router Port

Port	Status
1	-
2	-
3	-
4	-
5	-
6	-
7	-
8	-
9	-
10	-
11	-

Table 3.41 Monitoring Descriptions of MLD Snooping Status:

Label	Description
VLAN ID	The VLAN ID of the entry.
Querier Version	Working Querier Version currently.
Host Version	Working Host Version currently.
Querier Status	Shows the Querier status is “ACTIVE” or “IDLE”. “DISABLE” denotes the specific interface is administratively disabled.
Queries Transmitted	The number of Transmitted Queries.
Queries Received	The number of Received Queries.
V1 Reports Received	The number of Received V1 Reports.
V2 Reports Received	The number of Received V2 Reports. V1 Leaves Received
V1 Leaves Received	The number of Received V1 Leaves.
Router Port	Display which ports act as router ports. A router port is a port on the Ethernet switch that leads towards the Layer 3 multicast device or MLD querier. Static denotes the specific port is configured to be a router port. Dynamic denotes the specific port is learnt to be a router port. Both denote the specific port is configured or learnt to be a router port.
Port	Switch port number.
Status	Indicate whether specific port is a router port or not

Check the **Auto-refresh box** to refresh the page automatically. Automatic refresh occurs every 3 seconds. Click **Refresh button** to refresh the page immediately. Click **Clear button** to clear all Statistics counters.

Groups Information

Entries in the MLD Group Table are shown on this page. The MLD Group Table is sorted first by VLAN ID, and then by group.

Managed Switch



Configuration Monitor

- System
- Ports
- ERPS
- DHCPv4
- Security
 - Network
 - AAA
 - Switch
- Aggregation
 - Status
 - LACP
- Spanning Tree
- IPMC
 - IGMP Snooping
 - Status
 - Groups Information
 - IPv4 SFM Information
 - MLD Snooping
 - Status
 - Groups Information
 - IPv6 SFM Information
- LLDP
 - Neighbors
 - Port Statistics
- PTP
- MAC Table
- VLANs
- DDMI
- UDLD
- SD Status
- Diagnostics**
- Maintenance**

MLD Snooping Group Information

Start from VLAN and group address with entries per page.

		Port Members										
VLAN ID	Groups	1	2	3	4	5	6	7	8	9	10	11
No more entries												

Table 3.42 Monitoring Descriptions of MLD Snooping Group Information:

Label	Description
VLAN ID	VLAN ID of the group.
Groups	Group address of the group displayed.
Port Members	Ports under this group

Check the **Auto-refresh** box to refresh the page automatically. Automatic refresh occurs every 3 seconds. Click **Refresh** button to refresh the displayed table starting from the input fields. Click |<< to update the table starting from the first entry in the MLD Group Table. Click >> to update the table, starting with the entry after the last entry currently displayed.

IPv6 SFM Information

Entries in the MLD SFM Information Table are shown on this page. The MLD SFM (Source-Filtered Multicast) Information Table also contains the SSM (Source-Specific Multicast) information. This table is sorted first by VLAN ID, then by group, and then by Port. Different source addresses belong to the same group are treated as single entry.



Configuration Monitor

- System
- Ports
- ERPS
- DHCPv4
- Security
 - Network
 - AAA
 - Switch
- Aggregation
 - Status
 - LACP
- Spanning Tree
- IPMC
 - IGMP Snooping
 - Status
 - Groups Information
 - IPv4 SFM Information
 - MLD Snooping
 - Status
 - Groups Information
 - IPv6 SFM Information
- LLDP
 - Neighbors
 - Port Statistics
- PTP
- MAC Table
- VLANs
- DDMI
- UDLD
- SD Status
- Diagnostics**
- Maintenance**

MLD SFM Information

Start from VLAN and Group with entries per page.

VLAN ID	Group	Port	Mode	Source Address	Type	Hardware Filter/Switch
No more entries						

Table 3.43 Monitoring Descriptions of MLD SFM Information:

Label	Description
VLAN ID	VLAN ID of the group.
Group	Group address of the group displayed.
Port	Switch port number.
Mode	Indicates the filtering mode maintained per (VLAN ID, port number, Group Address) basis. It can be either Include or Exclude.
Source Address	IP Address of the source. Currently, the maximum number of IPv6 source address for filtering (per group) is 8. When there is no any source filtering address, the text "None" is shown in the Source Address field.
Type	Indicates the Type. It can be either Allow or Deny.
Hardware Filter/Switch	Indicates whether data plane destined to the specific group address from the source IPv6 address could be handled by chip or not

Check the Auto-refresh box to refresh the page automatically. Automatic refresh occurs every 3 seconds. Click **Refresh button** to refresh the displayed table starting from the input fields: Click |<< to update the table starting from the first entry in the MLD SFM Table. Click >> to update the table, starting with the entry after the last entry currently displayed.

3.9 LLDP

3.9.1 Neighbors

This page provides a status overview for all LLDP neighbours. The displayed table contains a row for each interface on which an LLDP neighbour is detected. The columns hold the following information.

LLDP Neighbor Information

LLDP Remote Device Summary						
Local Interface	Chassis ID	Port ID	Port Description	System Name	System Capabilities	Management Address
FastEthernet 1/8	74-27-EA-51-E9-95	74-27-EA-51-E9-95				

Table 3.44 Monitoring Descriptions of LLDP Neighbour Information:

Label	Description
Local Interface	The interface on which the LLDP frame was received.
Chassis ID	The identification of the neighbour's LLDP frames.
Port ID	The identification of the neighbour port.
Port Description	The port description advertised by the neighbour unit.
System Name	The name advertised by the neighbour unit.
System Capabilities	Describes the neighbour unit's capabilities. The possible capabilities are: 1. Other 2. Repeater 3. Bridge 4. WLAN Access Point 5. Router 6. Telephone 7. DOCSIS cable device 8. Station only 9. Reserved When a capability is enabled, the capability is followed by (+). If the capability is disabled, the capability is followed by (-).
Management Address	The neighbour unit's address that is used for higher layer entities to assist discovery by the network management. This could for instance hold the neighbour's IP address

Check the Auto-refresh box to refresh the page automatically. Automatic refresh occurs every 3 seconds. Click **Refresh button** to refresh this page.

3.9.2 Port Statistics

This page provides an overview of all LLDP traffic. Two types of counters are shown. Global counters are counters that refer to the whole switch, while local counters refer to per interface counters for the currently selected switch.

Configuration

Monitor

- System
- Ports
- ERPS
- DHCPv4
- Security
 - Network
 - AAA
 - Switch
- Aggregation
 - Status
 - LACP
- Spanning Tree
- IPMC
 - IGMP Snooping
 - Status
 - Groups Information
 - IPv4 SFM Information
 - MLD Snooping
 - Status
 - Groups Information
 - IPv6 SFM Information
- LLDP
 - Neighbors
 - Port Statistics
- PTP
- MAC Table
- VLANs
- DDMI
- UDLD
- SD Status
- Diagnostics
- Maintenance

LLDP Global Counters

Global Counters	
Clear global counters	<input checked="" type="checkbox"/>
Neighbor entries were last changed: 1970-01-01T02:29:33+01:00 (7937 secs. ago)	
Total Neighbors Entries Added	4
Total Neighbors Entries Deleted	2
Total Neighbors Entries Dropped	0
Total Neighbors Entries Aged Out	1

LLDP Statistics Local Counters

Local Interface	Tx Frames	Rx Frames	Rx Errors	Frames Discarded	TLVs Discarded	TLVs Unrecognized	Org. Discarded	Age-Outs	Clear
	*	*	*	*	*	*	*	*	<input checked="" type="checkbox"/>
GigabitEthernet 1/1	0	0	0	0	0	0	0	0	<input checked="" type="checkbox"/>
GigabitEthernet 1/2	0	0	0	0	0	0	0	0	<input checked="" type="checkbox"/>
GigabitEthernet 1/3	0	0	0	0	0	0	0	0	<input checked="" type="checkbox"/>
FastEthernet 1/1	438	901	0	0	0	0	3206	0	<input checked="" type="checkbox"/>
FastEthernet 1/2	85	12	0	0	0	0	0	1	<input checked="" type="checkbox"/>
FastEthernet 1/3	0	0	0	0	0	0	0	0	<input checked="" type="checkbox"/>
FastEthernet 1/4	0	0	0	0	0	0	0	0	<input checked="" type="checkbox"/>
FastEthernet 1/5	0	0	0	0	0	0	0	0	<input checked="" type="checkbox"/>
FastEthernet 1/6	0	0	0	0	0	0	0	0	<input checked="" type="checkbox"/>
FastEthernet 1/7	0	0	0	0	0	0	0	0	<input checked="" type="checkbox"/>
FastEthernet 1/8	0	0	0	0	0	0	0	0	<input checked="" type="checkbox"/>

Table 3.45 Monitoring Descriptions of LLDP Global and Statistics Local Counters:

Label	Description
LLDP Global Counters	
Clear global counters	If checked the global counters are cleared when Clear button is pressed.
Neighbor entries were last changed	Shows the time when the last entry was last deleted or added. It also shows the time elapsed since the last change was detected.
Total Neighbors Entries Added	Shows the number of new entries added since switch reboot.
Total Neighbors Entries Deleted	Shows the number of new entries deleted since switch reboot.
Total Neighbors Entries Dropped	Shows the number of LLDP frames dropped due to the entry table being full.
Total Neighbors Entries Aged Out	Shows the number of entries deleted due to Time-To-Live expiring.
LLDP Statistics Local Counters	
Local Interface	The interface on which LLDP frames are received or transmitted.
Tx Frames	The number of LLDP frames transmitted on the interface.
Rx Frames	The number of LLDP frames received on the interface.
Rx Errors	The number of received LLDP frames containing some kind of error.
Frames Discarded	If a LLDP frame is received on an interface, and the switch's internal table has run full, the LLDP frame is counted and discarded. This situation is known as "Too Many Neighbours" in the LLDP standard. LLDP frames require a new entry in the table when the Chassis ID or Remote Port ID is not already contained within the table. Entries are removed from the table when a given interface's link is down, an LLDP shutdown frame is received, or when the entry ages out.

Check the **Auto-refresh box** to refresh the page automatically. Automatic refresh occurs every 3 seconds. Click **Refresh button** to refresh the page immediately. Click **Clear button** to clear all Statistics counters.

3.10 PTP

3.10.1 PTP

This page allows the user to inspect the current PTP clock settings.



Configuration

Monitor

- System
- Ports
- ERPS
- DHCPv4
- Security
- Network
- AAA
- Switch
- Aggregation
- Status
- LACP
- Spanning Tree
- IPMC
- LLDP
- PTP
- PTP
- 802.1AS Statistics
- MAC Table
- VLANs
- DDMI
- UDLD
- SD Status

Diagnostics

Maintenance

PTP Clock Configuration

			Port List										
Inst	ClkDom	Device Type	1	2	3	4	5	6	7	8	9	10	11
No Clock Instances Present													


Table 3.46 Monitoring Descriptions of PTP External Clock Mode and Clock Configuration:




Label	Description
PTP Clock Configuration	
Inst	Indicates the Instance of a particular Clock Instance [0..3]. Click on the Clock Instance number to monitor the Clock details.
Clk-Dom	Indicates the Clock domain used by the Instance of a particular Clock Instance [0..3].
Device Type	Indicates the Type of the Clock Instance. There are five Device Types. Ord-Bound - Clock's Device Type is Ordinary-Boundary Clock. P2p Transp - Clock's Device Type is Peer to Peer Transparent Clock. E2e Transp - Clock's Device Type is End to End Transparent Clock. Master Only - Clock's Device Type is Master Only. Slave Only - Clock's Device Type is Slave Only.
Port List	Shows the ports configured for that Clock Instance

Check the **Auto-refresh** box to refresh the page automatically. Automatic refresh occurs every 3 seconds. Click **Refresh button** to refresh the page immediately

802.1AS Statistics

This page allows the user to inspect the current **PTP** configurations, and possibly change them as well.


A T&T COMPANY

Managed Switch

Configuration

Monitor

System

Ports

ERPS

VLANs

Security

Network

AAA

Session

Aggregation

LACP

Spanning Tree

IPMG

LLDP

PTP

PTPv

MAC Table

VLAN

QoS

SIO

SD Status

Diagnostics

Maintenance

802.1AS Clock Instance Specific Statistics

Port	AnnounceCount		FollowUpCount		FollowUpResponseCount		FollowUpResponseFollowUpCount		AnnounceCount		PTPPacketDiscardCount	syncReceiptTimeoutCount	announceReceiptTimeoutCount	pdelayAllowedLostResponsesExceededCount
	Rx	Tx	Rx	Tx	Rx	Tx	Rx	Tx	Rx	Tx				
<i>Selected instance is not enabled.</i>														

Clock Instance 0 ▼ Auto-refresh ☐
Refresh
Clear

Table 3.47 Monitoring Descriptions of 802.1AS Statistics:

Label	Description
SyncCount	A counter that increments every time when synchronization information is received.
FollowUpCount	A counter that increments every time when a Follow Up message is received.
PdelayRequestCount	A counter that increments every time when a Pdelay_Req message is received.
PdelayResponseCount	A counter that increments every time when a Pdelay_Resp message is received.
PdelayResponseFollowUp-Count	A counter that increments every time when a Pdelay_Resp_Follow_Up message is received.
AnnounceCount	A counter that increments every time when an Announce message is received.
PTPPacketDiscardCount	A counter that increments every time when announce receipt timeout occurs.
pdelayAllowedLostResponsesExceededCount	A counter that increments every time the value of the variable lostResponses exceeds the value of the variable allowedLostResponses.
802.1As Transmit Counters	
SyncCount	A counter that increments every time synchronization information is transmitted.
FollowUpCount	A counter that increments every time a Follow_Up message is transmitted.
PdelayRequestCount	A counter that increments every time a Pdelay_Resp message is transmitted.
PdelayResponseFollowUp-Count	A counter that increments every time a Pdelay_Resp_Follow_Up message is transmitted.
AnnounceCount	A counter that increments every time an Announce message is transmitted.
PTPPacketDiscardCount	A counter that increments every time when a PTP message is discarded.
syncReceiptTimeoutCount	A counter that increments every time when sync receipt timeout occurs.
announceReceiptTimeout-Count	A counter that increments every time when announce receipt timeout occurs.
pdelayAllowedLostResponsesExceededCount	A counter that increments everytime the value of the variable lostResponses exceeds the value of the variable allowedLostResponses

3.11 MAC Table

Entries in the MAC Table are shown on this page. The MAC Table contains up to 8192 entries, and is sorted first by VLAN ID, then by MAC address.

Navigating through the MAC table, users will realize the followings. Each page shows up to 999 entries from the MAC table, default being 20, selected through the “entries per page” input field. When first visited, the web page will show the first 20 entries from the beginning of the MAC Table. The first displayed will be the one with the lowest VLAN ID and the lowest MAC address found in the MAC Table. The “Start from MAC address” and “VLAN” input fields allow the user to select the starting point in the MAC Table. Clicking the **Refresh button** will update the displayed table starting from that or the closest next MAC Table match. In addition, the two input fields will - upon a **Refresh button** click - assume the value of the first displayed entry, allowing for continuous refresh with the same start address. The >> will use the last entry of the currently displayed VLAN/MAC address pairs as a basis for the next lookup. When the end is reached the text “No more entries” is shown in the displayed table. Use the |<< button to start over.

Configuration Monitor

- System
- Ports
- ERPS
- DHCPv4
- Security
- Network
- AAA
- Switch
- Aggregation
- Status
- LACP
- Spanning Tree
- IPMC
- LLDP
- PTP
- MAC Table
- VLANs
- DDMI
- UDLD
- SD Status
- Diagnostics**
- Maintenance**

MAC Address Table

Start from VLAN and MAC address with entries per page.

			Port Members												
Type	VLAN	MAC Address	CPU	1	2	3	4	5	6	7	8	9	10	11	
Static	1	78-70-52-00-00-79	✓												
Dynamic	2	00-0C-29-7F-35-3D					✓								
Dynamic	2	00-11-32-BD-31-4B					✓								
Dynamic	2	00-11-32-BD-31-4C					✓								
Dynamic	2	00-11-32-BD-31-4D					✓								
Dynamic	2	00-11-32-BD-31-4E					✓								
Dynamic	2	00-90-0B-71-69-AE					✓								
Static	2	33-33-00-00-00-01	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
Static	2	33-33-FF-00-00-79	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
Dynamic	2	40-71-83-5C-B8-98					✓								
Dynamic	2	4C-02-89-11-56-B3					✓								
Dynamic	2	70-EE-50-71-5C-B0					✓								
Static	2	78-70-52-00-00-79	✓												
Dynamic	2	78-70-52-00-00-BA					✓								
Dynamic	2	80-6D-97-0A-24-0C					✓								
Dynamic	2	9C-A2-F4-ED-65-26					✓								
Dynamic	2	B8-27-EB-9E-B8-88					✓								
Dynamic	2	D8-3B-BF-37-C2-92					✓								
Dynamic	2	F4-90-EA-10-12-E4					✓								

Table 3.48 Monitoring Descriptions of MAC Address Table:

Label	Description
Type	Indicates whether the entry is a static or a dynamic entry.
MAC address	The MAC address of the entry.
VLAN	The VLAN ID of the entry.
Port Members	The ports that are members of the entry

3.12 VLANs

The following describes how to navigate the VLAN Membership Status page. Each page shows up to 99 entries from the VLAN table (default being 20), selected through the “entries per page” input field. When first visited, the web page will show the first 20 entries from the beginning of the VLAN Table. The first displayed will be the one with the lowest VLAN ID found in the VLAN Table. The “VLAN” input field allows the user to select the starting point in the VLAN Table. Clicking the **Refresh** button will update the displayed table starting from that or the closest next VLAN Table match. The >> will use the last entry of the currently displayed VLAN entry as a basis for the next lookup. When the end is reached, the text “No data exists for the selected user” is shown in the table. Use the << button to start over.

Configuration Monitor

- System
- Ports
- ERPS
- DHCPv4
- Security
 - Network
 - AAA
 - Switch
- Aggregation
 - Status
 - LACP
- Spanning Tree
- IPMC
- LLDP
- PTP
- MAC Table
- VLANs
 - Membership
 - Ports
- DDMI
- UDLD
- SD Status

Diagnostics Maintenance

VLAN Membership Status for Combined users

Start from VLAN with entries per page.

VLAN ID	Port Members										
	1	2	3	4	5	6	7	8	9	10	11
1	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
2	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Table 3.49 Monitoring Descriptions of VLAN Membership Status for Combined Users:

La- bel	Description
VLAN User	Various internal software modules may use VLAN services to configure VLAN memberships on the fly. The drop-down list on the right allows for selecting between showing VLAN memberships as configured by an administrator (Admin) or as configured by one of these internal software modules. The “Combined” entry will show a combination of the administrator and internal software modules configuration, and basically reflects what is actually configured in hardware.
VLAN ID	VLAN ID for which the Port members are displayed.
Port Mem- bers	A row of check boxes for each port is displayed for each VLAN ID. If a port is included in a VLAN, the following image will be displayed: green <input checked="" type="checkbox"/> . If a port is in the forbidden port list, the following image will be displayed: red <input type="checkbox"/> . If a port is in the forbidden port list and at the same time attempted included in the VLAN, the following image will be displayed: red <input type="checkbox"/> . The port will not be a member of the VLAN in this case.

Click combined buttons to select VLAN Users from this drop-down list. Check the **Auto-refresh box** to refresh the page automatically. Automatic refresh occurs every 3 seconds. Click **Refresh button** to refresh the page immediately.

3.12.1 Ports

This page provides VLAN Port Status.

Managed Switch



Configuration Monitor

- System
- Ports
- ERPS
- DHCPv4
- Security
- Network
- AAA
- Switch
- Aggregation
- Status
- LACP
- Spanning Tree
- IPMC
- LLDP
- PTP
- MAC Table
- VLANs
- Membership
- Ports
- DDMI
- UDLD
- SD Status
- Diagnostics**
- Maintenance**

VLAN Port Status for Combined users

Port	Port Type	Ingress Filtering	Frame Type	Port VLAN ID	Tx Tag	Untagged VLAN ID	Conflicts
1	C-Port	<input checked="" type="checkbox"/>	All	1	Untag All		No
2	C-Port	<input checked="" type="checkbox"/>	All	1	Untag All		No
3	C-Port	<input checked="" type="checkbox"/>	All	1	Untag All		No
4	C-Port	<input checked="" type="checkbox"/>	All	2	Untag All		No
5	C-Port	<input checked="" type="checkbox"/>	All	1	Untag All		No
6	C-Port	<input checked="" type="checkbox"/>	All	1	Untag All		No
7	C-Port	<input checked="" type="checkbox"/>	All	1	Untag All		No
8	C-Port	<input checked="" type="checkbox"/>	All	1	Untag All		No
9	C-Port	<input checked="" type="checkbox"/>	All	1	Untag All		No
10	C-Port	<input checked="" type="checkbox"/>	All	1	Untag All		No
11	C-Port	<input checked="" type="checkbox"/>	All	1	Untag All		No

Table 3.50 Monitoring Descriptions of VLAN Port Status for Combined Users:

La- bel	Description
VLAN User	Various internal software modules may use VLAN services to configure VLAN port configuration on the fly. The drop-down list on the right allows for selecting between showing VLAN memberships as configured by an administrator (Admin) or as configured by one of these internal software modules. The “Combined” entry will show a combination of the administrator and internal software modules configuration, and basically reflects what is actually configured in hardware. If a given software modules hasn’t overridden any of the port settings, the text “No data exists for the selected user” is shown in the table.
Port	The logical port for the settings contained in the same row.
Port Type	Shows the port type (Unaware, C-Port, S-Port, S-Custom-Port.) that a given user wants to configure on the port. The field is empty if not overridden by the selected user.
Ingress Fil- ter- ing	Shows whether a given user wants ingress filtering enabled or not. The field is empty if not overridden by the selected user.
Frame Type	Shows the acceptable frame types (All, Tagged, Untagged) that a given user wants to configure on the port. The field is empty if not overridden by the selected user.
Port VLAN ID	Shows the Port VLAN ID (PVID) that a given user wants the port to have. The field is empty if not overridden by the selected user.
Tx Tag	Shows the Tx Tag requirements (Tag All, Tag PVID, Tag UVID, Untag All, Untag PVID, Untag UVID) that a given user has on a port. The field is empty if not overridden by the selected user.
Un- tagged VLAN ID	If Tx Tag is overridden by the selected user and is set to Tag or Untag UVID, then this field will show the VLAN ID the user wants to tag or untag on egress. The field is empty if not overridden by the selected user.
Con- flicts	Two users may have conflicting requirements to a port’s configuration. For instance, one user may require all frames to be tagged on egress while another requires all frames to be untagged on egress. Since both users cannot win, this gives rise to a conflict, which is solved in a prioritized way. The Administrator has the least priority. Other software modules are prioritized according to their position in the drop-down list: The higher in the list, the higher priority. If conflicts exist, it will be displayed as “Yes” for the “Combined” user and the offending software module. The “Combined” user reflects what is actually configured in hardware

Click combined buttons to select VLAN Users from this drop-down list. Check the **Auto-refresh box** to refresh the page automatically. Automatic refresh occurs every 3 seconds. Click **Refresh button** to refresh the page immediately

3.13 DDMI

3.13.1 Overview

Display DDMI overview information on this page.

Configuration

Monitor

- System
- Ports
- ERPS
- DHCPv4
- Security
 - Network
 - AAA
 - Switch
- Aggregation
 - Status
 - LACP
- Spanning Tree
- IPMC
- LLDP
- PTP
- MAC Table
- VLANs
- DDMI
 - Overview
 - Detailed
- UDLD
- SD Status

Diagnostics

Maintenance

DDMI Overview

Port	Vendor	Part Number	Serial Number	Revision	Data Code	Transceiver
1	-	-	-	-	-	-
2	-	-	-	-	-	-
3	-	-	-	-	-	-

Table 3.51 Monitoring Descriptions of DDMI Overview:

Label	Description
Port	DDMI port.
Vendor	Indicates Vendor name SFP vendor name.
Part Number	Indicates Vendor PN Part number provided by SFP vendor.
Serial Number	Indicates Vendor SN Serial number provided by vendor.
Revision	Indicates Vendor rev Revision level for part number provided by vendor.
Data Code	Indicates Date code Vendor's manufacturing date code.
Transceiver	Indicates Transceiver compatibility

3.13.2 Detailed

Display DDMI detailed information on this page. DDMI is an acronym for **D**igital **D**iagnostics **M**onitoring **I**nterface. It provides an enhanced digital diagnostic monitoring interface for optical transceivers which allows real time access to device operating parameters.

Configuration Monitor

- System
- Ports
- ERPS
- DHCPv4
- Security
- Network
- AAA
- Switch
- Aggregation
- Status
- LACP
- Spanning Tree
- IPMC
- LLDP
- PTP
- MAC Table
- VLANs
- DDMI
- Overview
- Detailed
- UDLD
- SD Status
- Diagnostics**
- Maintenance**

Transceiver Information

Vendor	-
Part Number	-
Serial Number	-
Revision	-
Data Code	-
Transceiver	-

DDMI Information

Type	Current	Alarm/Warning	Low Warning Threshold	High Warning Threshold	Low Alarm Threshold	High Alarm Threshold
Temperature [C]	-	-	-	-	-	-
Voltage [V]	-	-	-	-	-	-
Tx Bias [mA]	-	-	-	-	-	-
Tx Power [mW]	-	-	-	-	-	-
Rx Power [mW]	-	-	-	-	-	-

Table 3.52 Monitoring Descriptions of DDMI Detailed:

Label	Description
Transceiver Information	
Vendor	Indicates SFP vendor name.
Part Number	Indicates part number provided by SFP vendor.
Serial Number	Indicates serial number provided by SFP vendor.
Revision	Indicates revision level for part number provided by SFP vendor.
Data Code	Indicates vendor's manufacturing date code.
Transceiver	Indicates SFP transceiver compatibility.
DDMI Information	
Current	The current value of temperature, voltage, Tx bias, Tx power, and Rx power.
Alarm/Warning	Indicates whether there is an alarm or warning.
Low Warning Threshold	The low warning threshold value of temperature, voltage, Tx bias, Tx power, and Rx power.
High Warning Threshold	The high warning threshold value of temperature, voltage, Tx bias, Tx power, and Rx power.
Low Alarm Threshold	The low alarm threshold value of temperature, voltage, Tx bias, Tx power, and Rx power.
High Alarm Threshold	The high alarm threshold value of temperature, voltage, Tx bias, Tx power, and Rx power

3.14 UDLD

This page displays the UDLD status of the ports. UDLD is an acronym for Uni Directional Link Detection. UDLD protocol monitors the physical configuration of the links between devices and ports that support UDLD. It detects the existence of unidirectional links. Its functionality is to provide mechanisms useful for detecting one-way connections before they create a loop or other protocol malfunction. RFC 5171 specifies a way at data link layer to detect Uni directional link.



Configuration Monitor

- System
- Ports
- ERPS
- DHCPv4
- Security
- Network
- AAA
- Switch
- Aggregation
- Status
- LACP
- Spanning Tree
- IPMC
- LLDP
- PTP
- MAC Table
- VLANs
- DDMI
- UDLD
- SD Status

Diagnostics Maintenance

Detailed UDLD Status for Port 1

UDLD status	
UDLD Admin state	Disable
Device ID(local)	78-70-52-00-00-79
Device Name(local)	-
Bidirectional State	Indeterminant

Neighbor Status

Port	Device Id	Link Status	Device Name
No Neighbor ports enabled or no existing partners			

Table 3.53 Monitoring Descriptions of Detailed UDLD Status for Port 1 and Neighbour Status:

Label	Description
Detailed UDLD Status	
UDLD Admin State	The current port state of the logical port. Enabled if any of state (Normal, Aggressive) is Enabled.
Device ID (local)	The ID of Device.
Device Name(local)	Name of the Device.
Bidirectional State	The current state of the port.
Neighbour Status	
Port	The current port of neighbour device.
Device ID	The current ID of neighbour device.
Link Status	The current link status of neighbour port.
Device Name	Name of the Neighbour Device

The port select box ![] [285] determines which port is affected by clicking the buttons. Check the **Auto-refresh box** to refresh the page automatically. Automatic refresh occurs every 3 seconds. Click **Refresh button** to refresh the page immediately

4 Diagnostics

The **Diagnostics** menu is a collection of software tools that can be used to check the network connection for your managed switch. The submenus under the **Diagnostics** menu are shown in Figure 4.1. The available network diagnostic tools are **Ping (IPv4)**, **Ping (IPv6)**, **Traceroute (IPv4)**, and **Traceroute (IPv6)**.



Configuration
Monitor
Diagnostics
 Ping (IPv4)
 Ping (IPv6)
 Traceroute (IPv4)
 Traceroute (IPv6)
Maintenance

4.1 Ping (IPv4)

Welotec's managed switch provides a network tool called **Ping** for testing network connectivity in this subsection. Ping is a network diagnostic utility for testing reachability between a destination device and the managed switch. It utilizes ICMP (Internet Control Message Protocol) packet to troubleshoot IP connectivity issues. Note that this utility is only for IPv4 address. The Ping utility for IPv6 will be provided in the next subsection. Figure 4.2 shows the user interface for using the Ping command for IP version 4. The user must at least enter the **Hostname or IP Address** for the destination to be checked with Ping tool. Description of each parameter for Ping tool is summarized in Table 4.1.



Configuration
Monitor
Diagnostics
 Ping (IPv4)
 Ping (IPv6)
 Traceroute (IPv4)
 Traceroute (IPv6)
Maintenance

Ping (IPv4)

Fill in the parameters as needed and press "Start" to initiate the Ping session.

Hostname or IP Address	<input type="text"/>	
Payload Size	<input type="text" value="56"/>	bytes
Payload Data Pattern	<input type="text" value="0"/>	(single byte value; integer or hex with prefix '0x')
Packet Count	<input type="text" value="5"/>	packets
TTL Value	<input type="text" value="64"/>	
VID for Source Interface	<input type="text"/>	
Source Port Number	<input type="text"/>	
IP Address for Source Interface	<input type="text"/>	
Quiet (only print result)	<input type="checkbox"/>	
<input type="button" value="Start"/>		

Table 4.1 Descriptions of Options for Ping (IPv4) Diagnostic Tool:

Label	Description
Host-name or IP Address	The address of the destination host, either as a symbolic hostname or an IP Address.
Payload Size	Determines the size of the ICMP data payload in bytes (excluding the size of Ethernet, IP and ICMP headers). The default value is 56 bytes. The valid range is 2-1452 bytes.
Label	Description
Payload Data Pattern	Determines the data pattern used in the ICMP data payload in single byte value. The default value is 0. The valid range is 0-255.
Packet Count	Determines the number of PING requests (ICMP packets) to be sent to the destination. The default value is 5. The valid range is 1-60.
TTL Value	Determines the Time-To-Live (TTL) field value in the IPv4 header. This is the integer value to be set for the number of hops that the ping packet can traverse the network. If TTL reaches zero (deducted by a host after it reached a host), the ping packet will be discarded. The default value is 64. The valid range is 1-255.
VID for source Interface	This field can be used to force the Ping test to use a specific local VLAN interface as the source interface. Leave this field empty for automatic selection based on routing configuration. Note: You may only specify either the VID or the IP Address for the source interface.
Source Port Number	This field can be used to force the Ping test to use a specific local interface with the specified port number as the source interface. The specified port must be configured with a suitable IP address. Leave this field empty for automatic selection based on routing configuration. Note: You may only specify either the Source Port Number or the IP Address for the source interface.
IP Address for Source Interface	This field can be used to force the test to use a specific local interface with the specified IP address as the source interface. The specified IP address must be configured on a local interface. Leave this field empty for automatic selection based on routing configuration. Note: You may only specify either the VID or the IP Address for the source interface.
Quiet (only print result)	Checking this option will enable the quiet mode which only print the ping's final results without the result of each ping request.

After the user enters an IP address or a domain name into the field to verify network connectivity. Click **Start** button to run the ping tool. After you press **Start**, ICMP packets are transmitted, and the sequence number and round-trip-time are displayed upon reception of a reply. The amount of data received inside of an IP packet of type ICMP ECHO_REPLY will always be 8 bytes more than the requested payload data size (the difference is the ICMP header). The page refreshes automatically until responses to all packets are received, or until a timeout occurs.

An example of successful ping to an IPv4 address is shown in Figure 4.3 while an example of a failure ping is depicted in Figure 4.4. Note that the user can initiate another ping command by clicking the **New Ping** button at the end of the **Ping (IPv4) Output** webpage.

Ping (IPv4) Output

```
PING 10.0.50.102 (10.0.50.102): 56 data bytes
64 bytes from 10.0.50.102: seq=0 ttl=128 time=2.377 ms
64 bytes from 10.0.50.102: seq=1 ttl=128 time=2.073 ms
64 bytes from 10.0.50.102: seq=2 ttl=128 time=2.082 ms
64 bytes from 10.0.50.102: seq=3 ttl=128 time=2.078 ms
64 bytes from 10.0.50.102: seq=4 ttl=128 time=2.201 ms

--- 10.0.50.102 ping statistics ---
5 packets transmitted, 5 packets received, 0% packet loss
round-trip min/avg/max = 2.073/2.162/2.377 ms

Ping session completed.
```

New Ping

Ping (IPv4) Output

```
PING 10.0.50.102 (10.0.50.102): 56 data bytes

--- 10.0.50.102 ping statistics ---
5 packets transmitted, 0 packets received, 100% packet loss

Ping session completed.
```

New Ping

4.2 Ping (IPv6)

This page allows you to issue ICMPv6 PING packets to troubleshoot IPv6 connectivity issues. The user can enter an IP address or a domain name into the Hostname or IP Address field to verify network connectivity for IP version 6 network as shown in Figure 4.5. After entering the IP address or hostname, click **Start** button to run the Ping (IPv6) function. An example of successful ping result is shown in Figure 4.6 while a failure ping result is depicted in Figure 4.6. Note that the user can initiate another ping command by clicking the **New Ping** button at the end of the Ping (IPv6) Output webpage. Description of each parameter for Ping (IPv6) tool is summarized in Table 4.2

Managed Switch



Configuration
Monitor
Diagnostics
Ping (IPv4)
Ping (IPv6)
Traceroute (IPv4)
Traceroute (IPv6)
Maintenance

Ping (IPv6)

Fill in the parameters as needed and press "Start" to initiate the Ping session.

Hostname or IP Address	<input type="text"/>	
Payload Size	<input type="text" value="56"/>	bytes
Payload Data Pattern	<input type="text" value="0"/>	(single byte value; integer or hex with prefix '0x')
Packet Count	<input type="text" value="5"/>	packets
VID for Source Interface	<input type="text"/>	
Source Port Number	<input type="text"/>	
IP Address for Source Interface	<input type="text"/>	
Quiet (only print result)	<input type="checkbox"/>	
<input type="button" value="Start"/>		

Ping (IPv6) Output

```

PING fe80::c0a3:98e6:54b3:c9fa (fe80::c0a3:98e6:54b3:c9fa): 56 data bytes
64 bytes from fe80::c0a3:98e6:54b3:c9fa: seq=0 ttl=128 time=6.678 ms
64 bytes from fe80::c0a3:98e6:54b3:c9fa: seq=1 ttl=128 time=2.200 ms
64 bytes from fe80::c0a3:98e6:54b3:c9fa: seq=2 ttl=128 time=2.216 ms
64 bytes from fe80::c0a3:98e6:54b3:c9fa: seq=3 ttl=128 time=2.255 ms
64 bytes from fe80::c0a3:98e6:54b3:c9fa: seq=4 ttl=128 time=3.134 ms

```

```

--- fe80::c0a3:98e6:54b3:c9fa ping statistics ---
5 packets transmitted, 5 packets received, 0% packet loss
round-trip min/avg/max = 2.200/3.296/6.678 ms

Ping session completed.

```

New Ping

Ping (IPv6) Output

```

PING fe80::c0a3:98e6:54b3:c9fb (fe80::c0a3:98e6:54b3:c9fb): 56 data bytes

```

```

--- fe80::c0a3:98e6:54b3:c9fb ping statistics ---
5 packets transmitted, 0 packets received, 100% packet loss

Ping session completed.

```

New Ping

Table 4.2 Descriptions of Options for Ping (IPv6) Diagnostic Tool:

Label	Description
Host-name or IP Address	The address of the destination host, either as a symbolic hostname or an IP Address.
Payload Size	Determines the size of the ICMP data payload in bytes (excluding the size of Ethernet, IP and ICMP headers). The default value is 56 bytes. The valid range is 2-1452 bytes.
Payload Data Pattern	Determines the data pattern used in the ICMP data payload in single byte value. The default value is 0. The valid range is 0-255.
Packet Count	Determines the number of PING requests (ICMP packets) to be sent to the destination. The default value is 5. The valid range is 1-60.
VID for source Interface	This field can be used to force the Ping test to use a specific local VLAN interface as the source interface. Leave this field empty for automatic selection based on routing configuration. Note: You may only specify either the VID or the IP Address for the source interface.
Source Port Number	This field can be used to force the Ping test to use a specific local interface with the specified port number as the source interface. The specified port must be configured with a suitable IP address. Leave this field empty for automatic selection based on routing configuration. Note: You may only specify either the Source Port Number or the IP Address for the source interface.
IP Address for Source Interface	This field can be used to force the test to use a specific local interface with the specified IP address as the source interface. The specified IP address must be configured on a local interface. Leave this field empty for automatic selection based on routing configuration. Note: You may only specify either the VID or the IP Address for the source interface.
Quiet (only print result)	Checking this option will enable the quiet mode which only print the ping's final results without the result of each ping request.

4.3 Traceroute (IPv4)

Traceroute (IPv4) is another diagnostic tool that allows the user to check the path or route that packets take from the managed switch to a destination host or IP address. This tool could provide information about host or gateway along the path to the specified destination. It can measure transit delays of packets across the IPv4 network. Figure 4.8 shows the webpage for **Traceroute (IPv4)** tool on the managed switch. Table 4.3 provides brief descriptions of all parameters on the webpage. The only required parameter to start the **Traceroute (IPv4)** is the **Hostname or IP Address**. An example of traceroute result is shown in Figure 4.9. Note that the user can initiate another traceroute command by clicking the **New Traceroute** button at the end of the **Traceroute (IPv4) Output** webpage.



Configuration

Monitor

Diagnostics

Ping (IPv4)

Ping (IPv6)

Traceroute (IPv4)

Traceroute (IPv6)

Maintenance

Traceroute (IPv4)

Fill in the parameters as needed and press "Start" to initiate the Traceroute session.

Hostname or IP Address	<input type="text"/>	
DSCP Value	<input type="text" value="0"/>	
Number of Probes Per Hop	<input type="text" value="3"/>	packets
Response Timeout	<input type="text" value="3"/>	seconds
First TTL Value	<input type="text" value="1"/>	
Max TTL Value	<input type="text" value="30"/>	
VID for Source Interface	<input type="text"/>	
IP Address for Source Interface	<input type="text"/>	
Use ICMP instead of UDP	<input type="checkbox"/>	
Print Numeric Addresses	<input type="checkbox"/>	

Table 4.3 Description of each parameter for Traceroute (IPv4):

Label	Description
Host-name or IP Address	Specifies the hostname or IP Address of the destination
DSCP Value	Specifies the DSCP (DiffServ Code Point) priority (value) in packets. The value is an integer that has a range from 0 to 63.
Number of Probes Per Hop	Specifies the number of probe packets sent for each hop which is the number of queries per intermediate host or gateway. The default value is 3 packets. The valid range is 1 – 60.
Response Timeout	Specifies the timeout for the response message or ICMP echo reply after an ICMP echo request message is sent to an intermediate host or gateway. This is the number of seconds to wait for a reply to a sent request. The default number is 3. The valid range is 1 – 86400.
First TTL Value	Specifies the initial Time to Live (TTL) value. This is a field in the IPv4 header in the first packet sent. The default value is 1. The valid range is 1 – 30.
Max TTL Value	Specifies the maximum number of hops traceroute will try to probe. If this value is reached before the specified remote host is reached, the test stops. The default value is 30. The valid range is 1 – 255.
VID for source Interface	This field can be used to force the test to use a specific local VLAN interface as the source interface. Leave this field empty for automatic selection based on routing configuration. Note: You may only specify either the VID or the IP Address for the source interface.
IP Address for Source Interface	This field can be used to force the test to use a specific local interface with the specified IP address as the source interface. The specified IP address must be configured on a local interface. Leave this field empty for automatic selection based on routing configuration. Note: You may only specify either the VID or the IP Address for the source interface.
Use ICMP instead of UDP	By default, the traceroute command will use UDP datagrams. Selecting this option forces it to use ICMP ECHO packets instead.
Print Numeric Addresses	By default, the traceroute command will print out hop information using a reverse DNS lookup for the acquired host IP addresses. This may slow down the display if the DNS information is not available. Selecting this option will prevent the reverse DNS lookup and force the traceroute command to print numeric IP addresses instead.

Traceroute (IPv4) Output

```
traceroute to 10.0.50.102 (10.0.50.102), 30 hops max, 38 byte packets
```

```
1 10.0.50.102 (10.0.50.102) 0.230 ms * 2.159 ms
```

```
Traceroute session completed.
```

New Traceroute

4.4 Traceroute (IPv6)

Traceroute (IPv6) is another diagnostic tool that allows the user to check the path or route that packets take from the managed switch to a destination host or IP address in IP version 6 network. This tool could provide information about host or gateway along the path to the specified destination. It can measure transit delays of packets across the IPv6 network. Figure 4.10 shows the webpage for **Traceroute (IPv6)** tool on the managed switch. Table 4.4 provides brief descriptions of all parameters on this webpage.



Configuration

Monitor

Diagnostics

Ping (IPv4)

Ping (IPv6)

Traceroute (IPv4)

Traceroute (IPv6)

Maintenance

Traceroute (IPv6)

Fill in the parameters as needed and press "Start" to initiate the Traceroute session.

Hostname or IP Address		
DSCP Value	0	
Number of Probes Per Hop	3	packets
Response Timeout	3	seconds
Max TTL Value	30	
VID for Source Interface		
IP Address for Source Interface		
Print Numeric Addresses	<input type="checkbox"/>	

Table 4.4 Description of each parameter for Traceroute (IPv6):

Label	Description
Host-name or IP Address	Specifies the hostname or IP Address of the destination
DSCP Value	Specifies the DSCP (DiffServ Code Point) priority in packets. The value is an integer that has a range from 0 to 255.
Number of Probes Per Hop	Specifies the number of probe packets sent for each hop which is the number of queries per intermediate host or gateway. The default value is 3 packets. The valid range is 1 – 60.
Response Timeout	Specifies the timeout for the response message or ICMP echo reply after an ICMP echo request message is sent to an intermediate host or gateway. Determines the number of seconds to wait for a reply to a sent request. The default number is 3. The valid range is 1- 86400.
Max TTL Value	Specifies the maximum number of hops traceroute will try to probe. If this value is reached before the specified remote host is reached, the test stops. The default number is 255. The valid range is 1-255.
VID for source Interface	This field can be used to force the test to use a specific local VLAN interface as the source interface. Leave this field empty for automatic selection based on routing configuration. Note: You may only specify either the VID or the IP Address for the source interface.
IP Address for Source Interface	This field can be used to force the test to use a specific local interface with the specified IP address as the source interface. The specified IP address must be
Label	Description
	configured on a local interface. Leave this field empty for automatic selection based on routing configuration. Note: You may only specify either the VID or the IP Address for the source interface.
Print Numeric Addresses	By default, the traceroute command will print out hop information using a reverse DNS lookup for the acquired host IP addresses. This may slow down the display if the DNS information is not available. Selecting this option will prevent the reverse DNS lookup and force the traceroute command to print numeric IP addresses instead.

5 Maintenance

Maintenance menu is the last main menu on the WebUI on the RSAES Industrial Managed Ethernet Switch. Figure 5.1 shows all submenus under the **Maintenance** menu. Under this menu, the user can restart the device through the WebUI, reset the configuration of the device to the original factory default settings, upload new firmware image to update the device, and manage the configuration of the device. The following sections will describe each submenu under the **Maintenance** menu.



- Configuration
- Monitor
- Diagnostics
- Maintenance**
 - Restart Device
 - Factory Defaults
 - Software
 - Upload
 - Configuration
 - Save startup-config
 - Download
 - Upload
 - Activate
 - Delete

5.1 Restart Device

To restart the managed switch (or device) through the WebUI, the user can select the **Maintenance** → **Restart Device** menu. The **Restart Device** webpage is showed in Figure 5.2. The user can click on the **Yes** button to restart the device. During the restarting process, the webpage will be displaying the progress of the restarting operation as shown in Figure 5.3. Note that if the user selects the **No** button, the web browser will return to the **Port State Overview** webpage without restarting.



System restart in progress



Poll timeout, retry...

5.2 Factory Defaults

When the managed switch is not working properly, the user can reset it back to the original factory default settings by selecting **Maintenance** → **Factory Defaults** menu. Note that the IP configuration will not be changed after using this menu. The **Factory Defaults** webpage is shown in Figure 5.4. The user can click on the **Yes** button to reset the configuration to factory default settings. When the reset process is done the user will be presented with a message as showed in Figure 5.5. The new configuration will be available immediately and no restart is necessary. Note that if the user selects the **No** button, the web browser will be returned to the **Port State Overview** webpage.



Configuration Factory Reset Done

The configuration has been reset. The new configuration is available immediately.

Note: The switch can also be reset to factory defaults by pressing the reset Button for >10s

5.3 Software

This **Maintenance** → **Software** submenu allows the user to update the firmware for the device and check or select the current software/firmware image on the device.

5.3.1 Upload

The users can update the device firmware via web interface using **Upload** menu as shown in Figure 5.6. To update the firmware, the users can download a new firmware from Welotec's website and save it on a local computer. Then, the users can click **Select File...** button and choose the firmware file that is already downloaded. The switch's firmware typically has a ".dld" extension such as RSAES-KXXXXXXX.dld. After that, the users can click **Start Upgrade** button and wait for the update process to be done. After the software image is uploaded, a webpage will display a message stating that the firmware update is initiated. After a duration of approximately one minute, the firmware will finish update and the switch will be restarted.

Warning: While the firmware is being updated, web access will appear to be defuncted. The front LED flashes Green/Off with a frequency of 10 Hz while the firmware update is in progress. **Do not restart or power off the device during this time** otherwise the switch may fail to function afterwards.

Note: please make sure that the switch is plug-in all the time during the firmware upgrade.



Configuration
Monitor

Diagnostics

Maintenance

Restart Device

Factory Defaults

Software

Upload

Configuration

Save startup-config

Download

Upload

Activate

Delete

Software Upload

Select File ... No file selected

Start Upgrade

Upload status: Idle

5.3.2 Image Select

The user can check the current image's filename, version, and date on the device by selecting **Image Select** menu. An example of the **Software Image Selection** webpage is shown in Figure 5.7. Table 5.1 summarizes the description of **Software Image Selection** webpage.

Note: The firmware version and date information may be empty for older firmware releases. This does not constitute an error.

Table 5.1 Descriptions of Software Image Selection:

Label	Description
Image	The file name of the firmware image, from when the image was last updated.
Version	The version of the firmware image.
Date	The date where the firmware was produced.

5.4 Configuration

The managed switch stores its configuration in a number of text files in command line interface (CLI) format. The files are either virtual (RAM-based) or stored in flash on the switch. The available configuration files are:


- **running-config:** A virtual file that represents the currently active configuration on the switch. This file is volatile or disappeared when the power is off.
- **startup-config:** The start-up configuration for the switch which is read at boot time. If this file does not exist at boot time, the switch will start up in its default configuration.
- **default-config:** A read-only file with vendor-specific configuration. This file is read when the system is restored to default settings.
- Up to 31 other files, typically used for configuration backups or alternative configurations.

The **Configuration** menu enables the user to manage the configuration file on the switch. Under the **Maintenance**→**Configuration** menu, there are **Save startup-config**, **Download**, **Upload**, **Activate**, and **Delete** submenus as shown in Figure 5.8.



5.4.1 Save startup-config

The managed switch can save the start-up configuration inside the device. The webpage shown in Figure 5.9 allows the user to generate the start-up configuration file inside the managed switch. When the configuration file generation was finished, a message as shown in Figure 5.10 will be displayed on the webpage. This menu copies *running-config* to *startup-config*; therefore, ensuring that the current active configuration will be used at the next reboot.

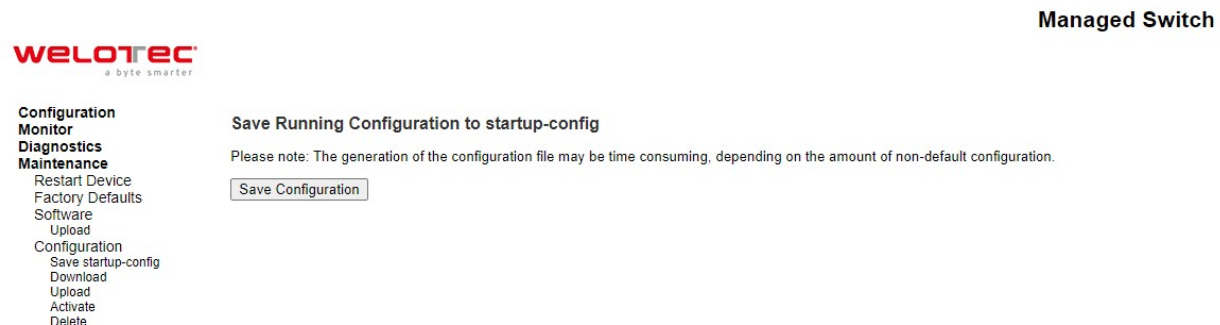

5.4.2 Download

The user can download different configuration files from the managed switch to the local computer using the web browser. There are **running-config**, **default-config**, and **startup-config** files that can be chosen as shown in Figure 5.11. To select the file name to be downloaded, check the radio button in front of the file name, then click on the **Download Configuration** button. The chosen configuration file will be downloaded by the web browser on to your local computer.



Configuration
Monitor
Diagnostics
Maintenance
 Restart Device
 Factory Defaults
 Software
 Upload
 Configuration
 Save startup-config
 Download
 Upload
 Activate
 Delete

Download Configuration

Select configuration file to save.

Please note: running-config may take a while to prepare for download.

File Name
<input type="radio"/> running-config
<input type="radio"/> default-config

5.4.3 Upload

On this web page, the user can upload a local configuration file on the user's computer to the managed switch using web browser. This will be useful when the user would like to use a backup configuration file from another managed switch. To upload a configuration file, select the **Choose File** button as shown in Figure 5.12 to open a file chooser on the personal computer. Then, select a configuration file on your device. Next, the user can select the name of **Destination File** on the managed switch from the two given file names which are either **running-config** or **startup-config**. Note that the runningconfig file name also has two possible parameters or options that can be chosen which are **Replace** or **Merge**. Also, the defaultconfig file is read-only; therefore, the user cannot choose it for uploading. That means the upload configuration file can be used to replace the running-config file on the managed switch or can be merged with the running-config file on the managed switch. The last option for the **File Name** is to create a new file by selecting the radio button in front of **Create new file** option in which the user can enter the new file name in the text field under the **Parameters** column. Finally click on the **Upload Configuration** button to start the upload process. A message "**Upload successfully completed**" will be displayed on the webpage.



Configuration

Monitor

Diagnostics

Maintenance

Restart Device

Factory Defaults

Software

Upload

Configuration

Save startup-config

Download

Upload

Activate

Delete

Upload Configuration

File To Upload

No file chosen

Destination File

File Name	Parameters
<input type="radio"/> running-config	<input checked="" type="radio"/> Replace <input type="radio"/> Merge
<input type="radio"/> Create new file	

If the destination is *running-config*, the file will be applied to the switch configuration. This can be done in two ways:

- Replace mode: The current configuration is fully replaced with the configuration in the uploaded file.
- Merge mode: The uploaded file is merged into *running-config*.

If the flash file system is full (i.e., contains *default-config* and 32 other files, usually including startup-config), it is not possible to create new files. Then, an existing file must be overwritten or another file must be deleted.

5.4.4 Activate

The user can activate different configuration files inside the managed switch, except for *running-config* which represents the currently active configuration. The **Configuration** → **Activate** submenu under the **Maintenance** menu as shown in Figure 5.13 can be used to perform this task. The user can select a configuration file from the list under the **File Name** table by checking on the radio button in front of that file name. Then, click on the **Activate Configuration** button. After the activation process is completed, the webpage will be updated to display the **Status** and **Output** as shown in Figure 5.14.

Managed Switch



Configuration

Monitor

Diagnostics

Maintenance

Restart Device

Factory Defaults

Software

Upload

Configuration

Save startup-config

Download

Upload

Activate

Delete

Activate Configuration

Select configuration file to activate. The previous configuration will be completely replaced, potentially leading to loss of management connectivity.

Please note: The activated configuration file will not be saved to startup-config automatically.

File Name
<input type="radio"/> default-config

5.4.5 Delete

The last submenu under the **Maintenance** Configuration menu is **Delete**. This webpage allows the user to delete usercreated configuration file stored in flash memory, including *startup-config*, as shown in Figure 5.15. Note that **default-config** cannot be deleted by this menu. For example, the **startup-config** file can be created by the **Save startup-config** menu and then can be deleted by this **Delete** menu. To remove a configuration file, select the file name by checking on the radio button in front of that file under the **File Name** table. Then, click on the **Delete Configuration File** button. Note that a pop-up window will be prompted for a confirmation by the user as shown in Figure 5.16. If the user really wants to delete the configuration, the user can click on the **OK** button. If the user wants to change the decision, the user can click on the **Cancel** button. When the deletion is completed, a message will be presented on the webpage such as “**startup-config successfully deleted**”. Note that if this is done and the switch is rebooted without a prior **Save** operation, this effectively resets the switch to default configuration.



Configuration
Monitor
Diagnostics
Maintenance

Restart Device
 Factory Defaults
 Software
 Upload
 Configuration
 Save startup-config
 Download
 Upload
 Activate
 Delete

Delete Configuration File

No files available for deletion.

Delete Configuration File

6 OSS Clearings

6.1 License summary

Component	Name	Version	License Type
Appl	WebStaX		Microsemi
Appl	ISC DHCP	4.1.0	ISC
Appl	MD5		BSD
Appl	Host AP	0.5.9	BSD
Appl	WPA Supplicant	0.6.1	BSD
Appl	NET-SNMP RMON		BSD-like
Appl	NET-SNMP		NET-SNMP (BSD-Style)
Appl	UCD-SNMP	4.1.2	UCD-SNMP
Appl	CPU-load		BSD
Appl	TACACS-plus	libtacplus 0.2	BSD
Appl	avltree	None	MIT
Appl	MooTools		MIT
Appl	libcxx	563647a240b9997cb9e414cbb09c82f19f00c89b	MIT
MESA	MESA-API		MIT
MESA	Aquantia PHY		MIT
MESA	Intel PHY		BSD-3
BSP	bind	9.11.19	MPL-2.0
BSP	busybox	1.31.1	GPL-2.0
BSP	dhcpc	4.4.1	MPL-2.0
BSP	dropbear	2019.78	MIT, BSD-2-Clause, BSD-3-C
BSP	hiawatha	10.10	GPL-2.0
BSP	iptables	1.8.3	GPL-2.0
BSP	json-c	0.13.1	MIT
BSP	libcurl	7.68.0	curl
BSP	libevent	2.1.11	BSD-3-Clause, OpenBSD
BSP	libfcgi	2.4.2	OML
BSP	libnet	1.1.6	BSD-2-Clause, BSD-3-Claus
BSP	libssh2	1.9.0	BSD
BSP	libupnp	1.6.25	BSD-3-Clause
BSP	libzlib	1.2.11	Zlib
BSP	linux	5.4-45-custom-cd97634	GPL-2.0
BSP	mbedtls	2.16.6	Apache-2.0
BSP	msscc-modular-firmware	ae6434d20ebe03932a4b2263472c6308d08604f4	MIT
BSP	mtc	2.1.1	GPL-2.0

Component	Name	Version	License Type
BSP	netshmp	5.8	Various BSD-like
BSP	ntp	4.2.8p14	NTP
BSP	pciutils	3.5.5	GPL-2.0+
BSP	strace	5.4	LGPL-2.1+
BSP	uboot	2019.10-custom-1275c73	GPL-2.0+
BSP	uboot-tools	2020.01	GPL-2.0+
BSP	xz-embedded	20130513	Public Domain
FRR	c-ares	1.16.1	MIT-like
FRR	frr	6.0.3	GPL-2.0
FRR	json-c	0.15-20200726	MIT
Toolchain	glibc	2.30-67-g4748829f86a458b76642f3e98b1d80f7b868e427	GPL-2.0+ (programs), LGPL
Toolchain	libstdc++	8.4.0	GPLv3 (with exception)
Toolchain	linux-headers	5.4.1	GPL-2.0
Toolchain	uclibc	1.0.32	LGPL-2.1+
RedBoot	RedBoot	668849a	GPLv2

6.2 Raw licenses

Appl - WebStaX:

Copyright (c) 2006-2021 Microsemi Corporation "Microsemi". All Rights Reserved.

Unpublished rights reserved under the copyright laws of the United States of America, other countries and international treaties. Permission to use, copy, store and modify, the software and its source code is granted but only in connection with products utilizing the Microsemi switch and PHY products. Permission is also granted for you to integrate into other products, disclose, transmit and distribute the software only in an absolute machine readable format (e.g. HEX file) and only in or with products utilizing the Microsemi switch and PHY products. The source code of the software may not be disclosed, transmitted or distributed without the prior written permission of Microsemi.

This copyright notice must appear in any copy, modification, disclosure, transmission or distribution of the software. Microsemi retains all ownership, copyright, trade secret and proprietary rights in the software and its source code, including all modifications thereto.

THIS SOFTWARE HAS BEEN PROVIDED "AS IS". MICROSEMI HEREBY DISCLAIMS ALL WARRANTIES OF ANY KIND WITH RESPECT TO THE SOFTWARE, WHETHER SUCH WARRANTIES ARE EXPRESS, IMPLIED, STATUTORY OR OTHERWISE INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR USE OR PURPOSE AND

NON-INFRINGEMENT.

Appl - ISC DHCP:

Copyright (c) 2004-2008 by Internet Systems Consortium, Inc. ("ISC")

Copyright (c) 1995-2003 by Internet Software Consortium

Permission to use, copy, modify, and distribute this software for any purpose with or without fee is hereby granted, provided that the above copyright notice and this permission notice appear in all copies.

THE SOFTWARE IS PROVIDED "AS IS" AND ISC DISCLAIMS ALL WARRANTIES WITH REGARD TO THIS SOFTWARE INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS. IN NO EVENT SHALL ISC BE LIABLE FOR ANY SPECIAL, DIRECT, INDIRECT, OR CONSEQUENTIAL DAMAGES OR ANY DAMAGES WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS, WHETHER IN AN ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE.

Appl - MD5:

Copyright (c) 2003-2005, Jouni Malinen <j@w1.fi>

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License version 2 as published by the Free Software Foundation.

Alternatively, this software may be distributed under the terms of BSD license.

Appl - Host AP:

Copyright (c) 2002-2012, Jouni Malinen <j@w1.fi> and contributors

All Rights Reserved.

This program is licensed under the BSD license (the one with advertisement clause removed).

License

This software may be distributed, used, and modified under the terms of BSD license:

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

3. Neither the name(s) of the above-listed copyright holder(s) nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT OWNER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Appl - WPA Supplicant:

Copyright (c) 2003-2012, Jouni Malinen <jo@w1.fi> and contributors

All Rights Reserved.

This program is licensed under the BSD license (the one with advertisement clause removed).

License

This software may be distributed, used, and modified under the terms of BSD license:

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. Neither the name(s) of the above-listed copyright holder(s) nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS
“AS IS” AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT
LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR
A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT
OWNER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL,
SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT
LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE,
DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY
THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT
(INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE
OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Appl - NET-SNMP RMON:

Copyright (C) 2001 Alex Rozin, Optical Access

All Rights Reserved

Permission to use, copy, modify and distribute this software and its
documentation for any purpose and without fee is hereby granted,
provided that the above copyright notice appear in all copies and that
both that copyright notice and this permission notice appear in
supporting documentation.

ALEX ROZIN DISCLAIM ALL WARRANTIES WITH REGARD TO THIS SOFTWARE, INCLUDING
ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS, IN NO EVENT SHALL
ALEX ROZIN BE LIABLE FOR ANY SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES OR
ANY DAMAGES WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS,
WHETHER IN AN ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION,
ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS
SOFTWARE.

Appl - NET-SNMP:

Various copyrights apply to this package, listed in 5 separate parts
below. Please make sure that you read all the parts. Up until 2001,
the project was based at UC Davis, and the first part covers all code
written during this time. From 2001 onwards, the project has been
based at SourceForge, and Networks Associates Technology, Inc hold the
copyright on behalf of the wider Net-SNMP community, covering all
derivative work done since then. An additional copyright section has
been added as Part 3 below also under a BSD license for the work
contributed by Cambridge Broadband Ltd. to the project since 2001.

An additional copyright section has been added as Part 4 below also under a BSD license for the work contributed by Sun Microsystems, Inc. to the project since 2003.

Code has been contributed to this project by many people over the years it has been in development, and a full list of contributors can be found in the README file under the THANKS section.

— Part 1: CMU/UCD copyright notice: (BSD like) —

Copyright 1989, 1991, 1992 by Carnegie Mellon University

Derivative Work - 1996, 1998-2000

Copyright 1996, 1998-2000 The Regents of the University of California

All Rights Reserved

Permission to use, copy, modify and distribute this software and its documentation for any purpose and without fee is hereby granted, provided that the above copyright notice appears in all copies and that both that copyright notice and this permission notice appear in supporting documentation, and that the name of CMU and The Regents of the University of California not be used in advertising or publicity pertaining to distribution of the software without specific written permission.

CMU AND THE REGENTS OF THE UNIVERSITY OF CALIFORNIA DISCLAIM ALL WARRANTIES WITH REGARD TO THIS SOFTWARE, INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS. IN NO EVENT SHALL CMU OR THE REGENTS OF THE UNIVERSITY OF CALIFORNIA BE LIABLE FOR ANY SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES OR ANY DAMAGES WHATSOEVER RESULTING FROM THE LOSS OF USE, DATA OR PROFITS, WHETHER IN AN ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE.

— Part 2: Networks Associates Technology, Inc copyright notice (BSD) —

Copyright (c) 2001-2003, Networks Associates Technology, Inc

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- * Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

- * Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

- * Neither the name of the Networks Associates Technology, Inc nor the

names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS ``AS IS'' AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDERS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

— Part 3: Cambridge Broadband Ltd. copyright notice (BSD) —

Portions of this code are copyright (c) 2001-2003, Cambridge Broadband Ltd.
All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- * Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

- * Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

- * The name of Cambridge Broadband Ltd. may not be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDER ``AS IS'' AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDER BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

— Part 4: Sun Microsystems, Inc. copyright notice (BSD) —

Copyright 2003 Sun Microsystems, Inc., 4150 Network Circle, Santa Clara, California 95054, U.S.A. All rights reserved.

Use is subject to license terms below.

This distribution may include materials developed by third parties.

Sun, Sun Microsystems, the Sun logo and Solaris are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- * Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

- * Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

- * Neither the name of the Sun Microsystems, Inc. nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS ``AS IS'' AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDERS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

— Part 5: Sparta, Inc copyright notice (BSD) —

Copyright (c) 2003-2004, Sparta, Inc

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- * Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

- * Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the

documentation and/or other materials provided with the distribution.

* Neither the name of Sparta, Inc nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS ``AS IS'' AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDERS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Appl - UCD-SNMP:

Various copyrights apply to this package, listed in various separate parts below. Please make sure that you read all the parts.

--- Part 1: CMU/UCD copyright notice: (BSD like) ---

Copyright 1989, 1991, 1992 by Carnegie Mellon University

Derivative Work - 1996, 1998-2000

Copyright 1996, 1998-2000 The Regents of the University of California

All Rights Reserved

Permission to use, copy, modify and distribute this software and its documentation for any purpose and without fee is hereby granted, provided that the above copyright notice appears in all copies and that both that copyright notice and this permission notice appear in supporting documentation, and that the name of CMU and The Regents of the University of California not be used in advertising or publicity pertaining to distribution of the software without specific written permission.

CMU AND THE REGENTS OF THE UNIVERSITY OF CALIFORNIA DISCLAIM ALL WARRANTIES WITH REGARD TO THIS SOFTWARE, INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS. IN NO EVENT SHALL CMU OR THE REGENTS OF THE UNIVERSITY OF CALIFORNIA BE LIABLE FOR ANY SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES OR ANY DAMAGES WHATSOEVER RESULTING FROM THE LOSS OF USE, DATA OR PROFITS, WHETHER IN AN ACTION OF

CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE.

— Part 2: Networks Associates Technology, Inc copyright notice (BSD) —

Copyright (c) 2001-2003, Networks Associates Technology, Inc

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- * Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

- * Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

- * Neither the name of the Networks Associates Technology, Inc nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS ``AS IS'' AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDERS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

— Part 3: Cambridge Broadband Ltd. copyright notice (BSD) —

Portions of this code are copyright (c) 2001-2003, Cambridge Broadband Ltd.

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- * Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

- * Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

- * The name of Cambridge Broadband Ltd. may not be used to endorse or

promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDER ``AS IS'' AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDER BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

--- Part 4: Sun Microsystems, Inc. copyright notice (BSD) ---

Copyright 2003 Sun Microsystems, Inc., 4150 Network Circle, Santa Clara, California 95054, U.S.A. All rights reserved.

Use is subject to license terms below.

This distribution may include materials developed by third parties.

Sun, Sun Microsystems, the Sun logo and Solaris are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- * Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

- * Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

- * Neither the name of the Sun Microsystems, Inc. nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS ``AS IS'' AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDERS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS;

OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

— Part 5: Sparta, Inc copyright notice (BSD) —

Copyright (c) 2003-2009, Sparta, Inc

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- * Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

- * Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

- * Neither the name of Sparta, Inc nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS ``AS IS'' AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDERS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

— Part 6: Cisco/BUPTNIC copyright notice (BSD) —

Copyright (c) 2004, Cisco, Inc and Information Network

Center of Beijing University of Posts and Telecommunications.

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- * Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

- * Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the

documentation and/or other materials provided with the distribution.

* Neither the name of Cisco, Inc, Beijing University of Posts and Telecommunications, nor the names of their contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS ``AS IS'' AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDERS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

— Part 7: Fabasoft R&D Software GmbH & Co KG copyright notice (BSD) —

Copyright (c) Fabasoft R&D Software GmbH & Co KG, 2003

oss@fabasoft.com

Author: Bernhard Penz

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

* Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

* Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

* The name of Fabasoft R&D Software GmbH & Co KG or any of its subsidiaries, brand or product names may not be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDER ``AS IS'' AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDER BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY,

WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

— Part 8: Apple Inc. copyright notice (BSD) —

Copyright (c) 2007 Apple Inc. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. Neither the name of Apple Inc. (“Apple”) nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY APPLE AND ITS CONTRIBUTORS “AS IS” AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL APPLE OR ITS CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

— Part 9: ScienceLogic, LLC copyright notice (BSD) —

Copyright (c) 2009, ScienceLogic, LLC

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- * Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- * Redistributions in binary form must reproduce the above copyright

notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

* Neither the name of ScienceLogic, LLC nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS
` `AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT
LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR
A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT
HOLDERS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT,
INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING,
BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS
OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND
ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR
TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE
USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH
DAMAGE.

Appl - CPU-load:

Copyright (C) 2004-2005 T. Lechat <dev@lechat.org>, Manuel Kasper <mk@neon1.net>
and Jonathan Watt <jwatt@jwatt.org>.

All rights reserved.

Redistribution and use in source and binary forms, with or without
modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice,
this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright
notice, this list of conditions and the following disclaimer in the
documentation and/or other materials provided with the distribution.

THIS SOFTWARE IS PROVIDED ` `AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES,
INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY
AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE
AUTHOR BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY,
OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF
SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS
INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN
CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE)
ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE

POSSIBILITY OF SUCH DAMAGE.

Appl - TACACS-plus:

Copyright 2000,2001 by Roman Volkov

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- * Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

- * Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

- * The names of its contributors may not be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS ``AS IS'' AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDERS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Next LICENSE text MUST be here:

The MD5 Message-Digest Algorithm was derived from the RSA Data Security, Inc.

MD5 Message-Digest Algorithm with next copyright:

Copyright (C) 1991-2, RSA Data Security, Inc. Created 1991. All rights reserved.

License to copy and use this software is granted provided that it is identified as the "RSA Data Security, Inc. MD5 Message-Digest Algorithm" in all material mentioning or referencing this software or this function.

License is also granted to make and use derivative works provided that such works are identified as "derived from the RSA Data Security, Inc. MD5 Message-Digest Algorithm" in all material

mentioning or referencing the derived work.

RSA Data Security, Inc. makes no representations concerning either the merchantability of this software or the suitability of this software for any particular purpose. It is provided “as is” without express or implied warranty of any kind.

These notices must be retained in any copies of any part of this documentation and/or software.

Appl - avltree:

Copyright (c) 2011 Bijal Thanawala

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the “Software”), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED “AS IS”, WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

Appl - MooTools:

The MIT License

Copyright (c) 2006-2009 Valerio Proietti, <<http://mad4milk.net/>>

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the “Software”), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED “AS IS”, WITHOUT WARRANTY OF ANY KIND, EXPRESS OR

IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

Appl - libcxx:

=====

libc++ License

=====

The libc++ library is dual licensed under both the University of Illinois “BSD-Like” license and the MIT license. As a user of this code you may choose to use it under either license. As a contributor, you agree to allow your code to be used under both.

Full text of the relevant licenses is included below.

=====

University of Illinois/NCSA

Open Source License

Copyright (c) 2009-2015 by the contributors listed in CREDITS.TXT

All rights reserved.

Developed by:

LLVM Team

University of Illinois at Urbana-Champaign

<http://llvm.org>

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the “Software”), to deal with the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

* Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimers.

* Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimers in the documentation and/or other materials provided with the distribution.

* Neither the names of the LLVM Team, University of Illinois at Urbana-Champaign, nor the names of its contributors may be used to

endorse or promote products derived from this Software without specific prior written permission.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE CONTRIBUTORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS WITH THE SOFTWARE.

=====

Copyright (c) 2009-2014 by the contributors listed in CREDITS.TXT

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

MESA - MESA-API:

Copyright (c) 2004-2021 Microsemi Corporation "Microsemi".

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR

IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

MESA - Aquantia PHY:

Copyright (c) 2017 Aquantia Corp.

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

MESA - Intel PHY:

Copyright 2016 - 2017 Intel Corporation

Copyright 2015 - 2016 Lantiq Beteiligungs-GmbH & Co. KG

Copyright 2012 - 2014 Lantiq Deutschland GmbH

This software is licensed under

- (a) a 3-clause BSD license; or alternatively
- (b) the GPL v2 license

– A. BSD-3-Clause —————

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice,

this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

3. Neither the name of the copyright holder nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

– B. GPL-2.0 —————

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License, version 2, as published by the Free Software Foundation.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program; if not, see <<http://www.gnu.org/licenses/>>.

—————

SPDX-License-Identifier: (BSD-3-Clause OR GPL-2.0-only)

BSP - bind:

Copyright (C) 1996-2020 Internet Systems Consortium, Inc. ("ISC")

This Source Code Form is subject to the terms of the Mozilla Public License, v. 2.0. If a copy of the MPL was not distributed with this file, You can obtain one at <http://mozilla.org/MPL/2.0/>.

—————

Portions of this code release fall under one or more of the following Copyright notices. Please see individual source files for details.

For binary releases also see: OpenSSL-LICENSE.

Copyright (C) 1996-2001 Nominum, Inc.

Permission to use, copy, modify, and distribute this software for any purpose with or without fee is hereby granted, provided that the above copyright notice and this permission notice appear in all copies.

THE SOFTWARE IS PROVIDED "AS IS" AND NOMINUM DISCLAIMS ALL WARRANTIES WITH REGARD TO THIS SOFTWARE INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS. IN NO EVENT SHALL NOMINUM BE LIABLE FOR ANY SPECIAL, DIRECT, INDIRECT, OR CONSEQUENTIAL DAMAGES OR ANY DAMAGES WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS, WHETHER IN AN ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE.

Copyright (C) 1995-2000 by Network Associates, Inc.

Permission to use, copy, modify, and/or distribute this software for any purpose with or without fee is hereby granted, provided that the above copyright notice and this permission notice appear in all copies.

THE SOFTWARE IS PROVIDED "AS IS" AND ISC AND NETWORK ASSOCIATES DISCLAIMS ALL WARRANTIES WITH REGARD TO THIS SOFTWARE INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS. IN NO EVENT SHALL ISC BE LIABLE FOR ANY SPECIAL, DIRECT, INDIRECT, OR CONSEQUENTIAL DAMAGES OR ANY DAMAGES WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS, WHETHER IN AN ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE.

Copyright (C) 2002 Stichting NLnet, Netherlands, stichting@nlnet.nl.

Permission to use, copy, modify, and distribute this software for any purpose with or without fee is hereby granted, provided that the above copyright notice and this permission notice appear in all copies.

THE SOFTWARE IS PROVIDED "AS IS" AND STICHTING NLNET DISCLAIMS ALL WARRANTIES WITH REGARD TO THIS SOFTWARE INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS. IN NO EVENT SHALL STICHTING NLNET BE LIABLE FOR ANY SPECIAL, DIRECT, INDIRECT, OR CONSEQUENTIAL DAMAGES OR ANY DAMAGES WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS, WHETHER IN AN ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE.

The development of Dynamically Loadable Zones (DLZ) for Bind 9 was conceived and contributed by Rob Butler.

Permission to use, copy, modify, and distribute this software for any purpose with or without fee is hereby granted, provided that the above copyright notice and this permission notice appear in all copies.

THE SOFTWARE IS PROVIDED "AS IS" AND ROB BUTLER
DISCLAIMS ALL WARRANTIES WITH REGARD TO THIS SOFTWARE INCLUDING ALL
IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS. IN NO EVENT SHALL
ROB BUTLER BE LIABLE FOR ANY SPECIAL, DIRECT, INDIRECT, OR
CONSEQUENTIAL DAMAGES OR ANY DAMAGES WHATSOEVER RESULTING FROM LOSS
OF USE, DATA OR PROFITS, WHETHER IN AN ACTION OF CONTRACT, NEGLIGENCE
OR OTHER TORTIOUS ACTION, ARISING OUT OF OR IN CONNECTION WITH THE
USE OR PERFORMANCE OF THIS SOFTWARE.

Copyright (c) 1987, 1990, 1993, 1994

The Regents of the University of California. All rights reserved.

Redistribution and use in source and binary forms, with or without
modification, are permitted provided that the following conditions
are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. Neither the name of the University nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE REGENTS AND CONTRIBUTORS ``AS IS'' AND
ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE
IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE
ARE DISCLAIMED. IN NO EVENT SHALL THE REGENTS OR CONTRIBUTORS BE LIABLE
FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL
DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS
OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION)
HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT
LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY
OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF

SUCH DAMAGE.

Copyright (C) The Internet Society 2005. This version of this module is part of RFC 4178; see the RFC itself for full legal notices.

(The above copyright notice is per RFC 3978 5.6 (a), q.v.)

Copyright (c) 2004 Masarykova universita
(Masaryk University, Brno, Czech Republic)

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. Neither the name of the University nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT OWNER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Copyright (c) 1997 - 2003 Kungliga Tekniska H gskolan
(Royal Institute of Technology, Stockholm, Sweden).

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. Neither the name of the Institute nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE INSTITUTE AND CONTRIBUTORS ``AS IS'' AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE INSTITUTE OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Copyright (c) 1998 Doug Rabson

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR AND CONTRIBUTORS ``AS IS'' AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT

LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Copyright ((c)) 2002, Rice University

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- * Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

- * Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

- * Neither the name of Rice University (RICE) nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

This software is provided by RICE and the contributors on an “as is” basis, without any representations or warranties of any kind, express or implied including, but not limited to, representations or warranties of non-infringement, merchantability or fitness for a particular purpose. In no event shall RICE or contributors be liable for any direct, indirect, incidental, special, exemplary, or consequential damages (including, but not limited to, procurement of substitute goods or services; loss of use, data, or profits; or business interruption) however caused and on any theory of liability, whether in contract, strict liability, or tort (including negligence or otherwise) arising in any way out of the use of this software, even if advised of the possibility of such damage.

Copyright (c) 1993 by Digital Equipment Corporation.

Permission to use, copy, modify, and distribute this software for any purpose with or without fee is hereby granted, provided that the above copyright notice and this permission notice appear in all copies, and that the name of Digital Equipment Corporation not be used in advertising or publicity pertaining to distribution of the document or software without specific, written prior permission.

THE SOFTWARE IS PROVIDED "AS IS" AND DIGITAL EQUIPMENT CORP. DISCLAIMS ALL WARRANTIES WITH REGARD TO THIS SOFTWARE, INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS. IN NO EVENT SHALL DIGITAL EQUIPMENT CORPORATION BE LIABLE FOR ANY SPECIAL, DIRECT, INDIRECT, OR CONSEQUENTIAL DAMAGES OR ANY DAMAGES WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS, WHETHER IN AN ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE.

Copyright 2000 Aaron D. Gifford. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. Neither the name of the copyright holder nor the names of contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR(S) AND CONTRIBUTOR(S) "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR(S) OR CONTRIBUTOR(S) BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Copyright (c) 1998 Doug Rabson.

Copyright (c) 2001 Jake Burkholder.

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions

are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR AND CONTRIBUTORS ``AS IS'' AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Copyright (C) 1995, 1996, 1997, and 1998 WIDE Project.

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. Neither the name of the project nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE PROJECT AND CONTRIBUTORS ``AS IS'' AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE PROJECT OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION)

HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Copyright (c) 1999-2000 by Nortel Networks Corporation

Permission to use, copy, modify, and distribute this software for any purpose with or without fee is hereby granted, provided that the above copyright notice and this permission notice appear in all copies.

THE SOFTWARE IS PROVIDED "AS IS" AND NORTEL NETWORKS DISCLAIMS ALL WARRANTIES WITH REGARD TO THIS SOFTWARE INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS. IN NO EVENT SHALL NORTEL NETWORKS BE LIABLE FOR ANY SPECIAL, DIRECT, INDIRECT, OR CONSEQUENTIAL DAMAGES OR ANY DAMAGES WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS, WHETHER IN AN ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE.

Copyright (c) 2000-2002 Japan Network Information Center. All rights reserved.

By using this file, you agree to the terms and conditions set forth below.

LICENSE TERMS AND CONDITIONS

The following License Terms and Conditions apply, unless a different license is obtained from Japan Network Information Center ("JPNIC"), a Japanese association, Kokusai-Kogyo-Kanda Bldg 6F, 2-3-4 Uchi-Kanda, Chiyoda-ku, Tokyo 101-0047, Japan.

1. Use, Modification and Redistribution (including distribution of any modified or derived work) in source and/or binary forms is permitted under this License Terms and Conditions.
2. Redistribution of source code must retain the copyright notices as they appear in each source code file, this License Terms and Conditions.
3. Redistribution in binary form must reproduce the Copyright Notice, this License Terms and Conditions, in the documentation and/or other materials provided with the distribution. For the purposes of binary distribution the "Copyright Notice" refers to the following language:
"Copyright (c) 2000-2002 Japan Network Information Center. All rights reserved."
4. The name of JPNIC may not be used to endorse or promote products derived from this Software without specific prior written approval of

JPNIC.

5. Disclaimer/Limitation of Liability: THIS SOFTWARE IS PROVIDED BY JPNIC “AS IS” AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL JPNIC BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Copyright (C) 2004 Nominet, Ltd.

Permission to use, copy, modify, and distribute this software for any purpose with or without fee is hereby granted, provided that the above copyright notice and this permission notice appear in all copies.

THE SOFTWARE IS PROVIDED “AS IS” AND NOMINET DISCLAIMS ALL WARRANTIES WITH REGARD TO THIS SOFTWARE INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS. IN NO EVENT SHALL ISC BE LIABLE FOR ANY SPECIAL, DIRECT, INDIRECT, OR CONSEQUENTIAL DAMAGES OR ANY DAMAGES WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS, WHETHER IN AN ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE.

Portions Copyright RSA Security Inc.

License to copy and use this software is granted provided that it is identified as “RSA Security Inc. PKCS #11 Cryptographic Token Interface (Cryptoki)” in all material mentioning or referencing this software.

License is also granted to make and use derivative works provided that such works are identified as “derived from the RSA Security Inc. PKCS #11 Cryptographic Token Interface (Cryptoki)” in all material mentioning or referencing the derived work.

RSA Security Inc. makes no representations concerning either the merchantability of this software or the suitability of this software for any particular purpose. It is provided “as is” without express or implied warranty of any kind.

Copyright (c) 1996, David Mazieres <dm@uun.org>

Copyright (c) 2008, Damien Miller <djm@openbsd.org>

Permission to use, copy, modify, and distribute this software for any purpose with or without fee is hereby granted, provided that the above copyright notice and this permission notice appear in all copies.

THE SOFTWARE IS PROVIDED “AS IS” AND THE AUTHOR DISCLAIMS ALL WARRANTIES WITH REGARD TO THIS SOFTWARE INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS. IN NO EVENT SHALL THE AUTHOR BE LIABLE FOR ANY SPECIAL, DIRECT, INDIRECT, OR CONSEQUENTIAL DAMAGES OR ANY DAMAGES WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS, WHETHER IN AN ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE.

Copyright (c) 2000-2001 The OpenSSL Project. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. All advertising materials mentioning features or use of this software must display the following acknowledgment:
“This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit. (<http://www.OpenSSL.org/>)”
4. The names “OpenSSL Toolkit” and “OpenSSL Project” must not be used to endorse or promote products derived from this software without prior written permission. For written permission, please contact licensing@OpenSSL.org.
5. Products derived from this software may not be called “OpenSSL” nor may “OpenSSL” appear in their names without prior written permission of the OpenSSL Project.
6. Redistributions of any form whatsoever must retain the following acknowledgment:
“This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit (<http://www.OpenSSL.org/>)”

THIS SOFTWARE IS PROVIDED BY THE OpenSSL PROJECT ``AS IS'' AND ANY EXPRESSED OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE OpenSSL PROJECT OR ITS CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Copyright (c) 1995, 1997, 1998 The NetBSD Foundation, Inc.

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

THIS SOFTWARE IS PROVIDED BY THE NETBSD FOUNDATION, INC. AND CONTRIBUTORS ``AS IS'' AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE FOUNDATION OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Copyright (C) 2008-2011 Red Hat, Inc.

Permission to use, copy, modify, and/or distribute this software for any purpose with or without fee is hereby granted, provided that the above

copyright notice and this permission notice appear in all copies.

THE SOFTWARE IS PROVIDED “AS IS” AND Red Hat DISCLAIMS ALL WARRANTIES WITH REGARD TO THIS SOFTWARE INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS. IN NO EVENT SHALL Red Hat BE LIABLE FOR ANY SPECIAL, DIRECT, INDIRECT, OR CONSEQUENTIAL DAMAGES OR ANY DAMAGES WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS, WHETHER IN AN ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE.

Copyright (c) 2013-2014, Farsight Security, Inc.

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. Neither the name of the copyright holder nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS “AS IS” AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Copyright (c) 2014 by Farsight Security, Inc.

Licensed under the Apache License, Version 2.0 (the “License”);

you may not use this file except in compliance with the License.

You may obtain a copy of the License at

<http://www.apache.org/licenses/LICENSE-2.0>

Unless required by applicable law or agreed to in writing, software distributed under the License is distributed on an “AS IS” BASIS, WITHOUT WARRANTIES OR CONDITIONS OF ANY KIND, either express or implied. See the License for the specific language governing permissions and limitations under the License.

BSP - busybox:

— A note on GPL versions

BusyBox is distributed under version 2 of the General Public License (included in its entirety, below). Version 2 is the only version of this license which this version of BusyBox (or modified versions derived from this one) may be distributed under.

GNU GENERAL PUBLIC LICENSE

Version 2, June 1991

Copyright (C) 1989, 1991 Free Software Foundation, Inc.

51 Franklin St, Fifth Floor, Boston, MA 02110-1301 USA

Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change free software—to make sure the software is free for all its users. This General Public License applies to most of the Free Software Foundation’s software and to any other program whose authors commit to using it. (Some other Free Software Foundation software is covered by the GNU Library General Public License instead.) You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs; and that you know you can do these things. To protect your rights, we need to make restrictions that forbid anyone to deny you these rights or to ask you to surrender the rights.

These restrictions translate to certain responsibilities for you if you distribute copies of the software, or if you modify it.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must give the recipients all the rights that you have. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

We protect your rights with two steps: (1) copyright the software, and (2) offer you this license which gives you legal permission to copy, distribute and/or modify the software.

Also, for each author's protection and ours, we want to make certain that everyone understands that there is no warranty for this free software. If the software is modified by someone else and passed on, we want its recipients to know that what they have is not the original, so that any problems introduced by others will not reflect on the original authors' reputations.

Finally, any free program is threatened constantly by software patents. We wish to avoid the danger that redistributors of a free program will individually obtain patent licenses, in effect making the program proprietary. To prevent this, we have made it clear that any patent must be licensed for everyone's free use or not licensed at all.

The precise terms and conditions for copying, distribution and modification follow.

GNU GENERAL PUBLIC LICENSE

TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

0. This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License. The "Program", below, refers to any such program or work, and a "work based on the Program" means either the Program or any derivative work under copyright law: that is to say, a work containing the Program or a portion of it, either verbatim or with modifications and/or translated into another language. (Hereinafter, translation is included without limitation in the term "modification".) Each licensee is addressed as "you".

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running the Program is not restricted, and the output from the Program is covered only if its contents constitute a work based on the

Program (independent of having been made by running the Program).

Whether that is true depends on what the Program does.

1. You may copy and distribute verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and give any other recipients of the Program a copy of this License along with the Program.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Program or any portion of it, thus forming a work based on the Program, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:

a) You must cause the modified files to carry prominent notices stating that you changed the files and the date of any change.

b) You must cause any work that you distribute or publish, that in whole or in part contains or is derived from the Program or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this License.

c) If the modified program normally reads commands interactively when run, you must cause it, when started running for such interactive use in the most ordinary way, to print or display an announcement including an appropriate copyright notice and a notice that there is no warranty (or else, saying that you provide a warranty) and that users may redistribute the program under these conditions, and telling the user how to view a copy of this License. (Exception: if the Program itself is interactive but does not normally print such an announcement, your work based on the Program is not required to print an announcement.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Program, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Program, the distribution of the whole must be on the terms of

this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it. Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Program.

In addition, mere aggregation of another work not based on the Program with the Program (or with a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you also do one of the following:

- a) Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
- b) Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code, to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
- c) Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is allowed only for noncommercial distribution and only if you received the program in object code or executable form with such an offer, in accord with Subsection b above.)

The source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the executable. However, as a special exception, the source code distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

If distribution of executable or object code is made by offering

access to copy from a designated place, then offering equivalent access to copy the source code from the same place counts as distribution of the source code, even though third parties are not compelled to copy the source along with the object code.

4. You may not copy, modify, sublicense, or distribute the Program except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense or distribute the Program is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.

5. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Program or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Program (or any work based on the Program), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Program or works based on it.

6. Each time you redistribute the Program (or any work based on the Program), the recipient automatically receives a license from the original licensor to copy, distribute or modify the Program subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties to this License.

7. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Program at all. For example, if a patent license would not permit royalty-free redistribution of the Program by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Program.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system, which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

8. If the distribution and/or use of the Program is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Program under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.

9. The Free Software Foundation may publish revised and/or new versions of the General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Program specifies a version number of this License which applies to it and “any later version”, you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of this License, you may choose any version ever published by the Free Software Foundation.

10. If you wish to incorporate parts of the Program into other free programs whose distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes

make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

NO WARRANTY

11. BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM “AS IS” WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

12. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

END OF TERMS AND CONDITIONS

How to Apply These Terms to Your New Programs

If you develop a new program, and you want it to be of the greatest possible use to the public, the best way to achieve this is to make it free software which everyone can redistribute and change under these terms.

To do so, attach the following notices to the program. It is safest to attach them to the start of each source file to most effectively convey the exclusion of warranty; and each file should have at least the “copyright” line and a pointer to where the full notice is found.

<one line to give the program’s name and a brief idea of what it does.>

Copyright (C) <year> <name of author>

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful,

but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 51 Franklin St, Fifth Floor, Boston, MA 02110-1301 USA
Also add information on how to contact you by electronic and paper mail.
If the program is interactive, make it output a short notice like this when it starts in an interactive mode:

Gnomovision version 69, Copyright (C) year name of author
Gnomovision comes with ABSOLUTELY NO WARRANTY; for details type `show w'.
This is free software, and you are welcome to redistribute it under certain conditions; type `show c' for details.
The hypothetical commands `show w' and `show c' should show the appropriate parts of the General Public License. Of course, the commands you use may be called something other than `show w' and `show c'; they could even be mouse-clicks or menu items—whatever suits your program.

You should also get your employer (if you work as a programmer) or your school, if any, to sign a “copyright disclaimer” for the program, if necessary. Here is a sample; alter the names:

Yoyodyne, Inc., hereby disclaims all copyright interest in the program
`Gnomovision' (which makes passes at compilers) written by James Hacker.
<signature of Ty Coon>, 1 April 1989

Ty Coon, President of Vice

This General Public License does not permit incorporating your program into proprietary programs. If your program is a subroutine library, you may consider it more useful to permit linking proprietary applications with the library. If this is what you want to do, use the GNU Library General Public License instead of this License.

BSP - dhcp:

Copyright (c) 2004-2018 by Internet Systems Consortium, Inc. (“ISC”)
Copyright (c) 1995-2003 by Internet Software Consortium

7

THE SOFTWARE IS PROVIDED "AS IS" AND ISC DISCLAIMS ALL WARRANTIES
WITH REGARD TO THIS SOFTWARE INCLUDING ALL IMPLIED WARRANTIES OF
MERCHANTABILITY AND FITNESS. IN NO EVENT SHALL ISC BE LIABLE FOR
ANY SPECIAL, DIRECT, INDIRECT, OR CONSEQUENTIAL DAMAGES OR ANY DAMAGES
WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS, WHETHER IN AN
ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING OUT
OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE.

8

Internet Systems Consortium, Inc.

950 Charter Street

Redwood City, CA 94063

<info@isc.org>

<https://www.isc.org/>

9

This Source Code Form is subject to the terms of the Mozilla Public
License, v. 2.0, included below.

10

See the specific source files for any additional copyright or

license statements.

Mozilla Public License, version 2.0

1. Definitions

1.1. “Contributor”

means each individual or legal entity that creates, contributes to the creation of, or owns Covered Software.

1.2. “Contributor Version”

means the combination of the Contributions of others (if any) used by a Contributor and that particular Contributor’s Contribution.

1.3. “Contribution”

means Covered Software of a particular Contributor.

1.4. “Covered Software”

means Source Code Form to which the initial Contributor has attached the notice in Exhibit A, the Executable Form of such Source Code Form, and Modifications of such Source Code Form, in each case including portions thereof.

1.5. “Incompatible With Secondary Licenses”

means

a. that the initial Contributor has attached the notice described in Exhibit B to the Covered Software; or

b. that the Covered Software was made available under the terms of version 1.1 or earlier of the License, but not also under the terms of a Secondary License.

1.6. “Executable Form”

means any form of the work other than Source Code Form.

1.7. “Larger Work”

means a work that combines Covered Software with other material, in a separate file or files, that is not Covered Software.

1.8. “License”

means this document.

1.9. “Licensable”

means having the right to grant, to the maximum extent possible, whether at the time of the initial grant or subsequently, any and all of the

rights conveyed by this License.

1.10. “Modifications”

means any of the following:

- a. any file in Source Code Form that results from an addition to, deletion from, or modification of the contents of Covered Software; or
- b. any new file in Source Code Form that contains any Covered Software.

1.11. “Patent Claims” of a Contributor

means any patent claim(s), including without limitation, method, process, and apparatus claims, in any patent Licensable by such Contributor that would be infringed, but for the grant of the License, by the making, using, selling, offering for sale, having made, import, or transfer of either its Contributions or its Contributor Version.

1.12. “Secondary License”

means either the GNU General Public License, Version 2.0, the GNU Lesser General Public License, Version 2.1, the GNU Affero General Public License, Version 3.0, or any later versions of those licenses.

1.13. “Source Code Form”

means the form of the work preferred for making modifications.

1.14. “You” (or “Your”)

means an individual or a legal entity exercising rights under this License. For legal entities, “You” includes any entity that controls, is controlled by, or is under common control with You. For purposes of this definition, “control” means (a) the power, direct or indirect, to cause the direction or management of such entity, whether by contract or otherwise, or (b) ownership of more than fifty percent (50%) of the outstanding shares or beneficial ownership of such entity.

2. License Grants and Conditions

2.1. Grants

Each Contributor hereby grants You a world-wide, royalty-free, non-exclusive license:

- a. under intellectual property rights (other than patent or trademark) Licensable by such Contributor to use, reproduce, make available, modify, display, perform, distribute, and otherwise exploit its Contributions, either on an unmodified basis, with Modifications, or as part of a Larger Work; and
- b. under Patent Claims of such Contributor to make, use, sell, offer for sale, have made, import, and otherwise transfer either its Contributions or its Contributor Version.

2.2. Effective Date

The licenses granted in Section 2.1 with respect to any Contribution become effective for each Contribution on the date the Contributor first distributes such Contribution.

2.3. Limitations on Grant Scope

The licenses granted in this Section 2 are the only rights granted under this License. No additional rights or licenses will be implied from the distribution or licensing of Covered Software under this License.

Notwithstanding Section 2.1(b) above, no patent license is granted by a Contributor:

- a. for any code that a Contributor has removed from Covered Software; or
- b. for infringements caused by: (i) Your and any other third party's modifications of Covered Software, or (ii) the combination of its Contributions with other software (except as part of its Contributor Version); or
- c. under Patent Claims infringed by Covered Software in the absence of its Contributions.

This License does not grant any rights in the trademarks, service marks, or logos of any Contributor (except as may be necessary to comply with the notice requirements in Section 3.4).

2.4. Subsequent Licenses

No Contributor makes additional grants as a result of Your choice to distribute the Covered Software under a subsequent version of this License (see Section 10.2) or under the terms of a Secondary License (if permitted under the terms of Section 3.3).

2.5. Representation

Each Contributor represents that the Contributor believes its Contributions are its original creation(s) or it has sufficient rights to grant the rights to its Contributions conveyed by this License.

2.6. Fair Use

This License is not intended to limit any rights You have under applicable copyright doctrines of fair use, fair dealing, or other equivalents.

2.7. Conditions

Sections 3.1, 3.2, 3.3, and 3.4 are conditions of the licenses granted in Section 2.1.

3. Responsibilities

3.1. Distribution of Source Form

All distribution of Covered Software in Source Code Form, including any Modifications that You create or to which You contribute, must be under the terms of this License. You must inform recipients that the Source Code Form of the Covered Software is governed by the terms of this License, and how they can obtain a copy of this License. You may not attempt to alter or restrict the recipients' rights in the Source Code Form.

3.2. Distribution of Executable Form

If You distribute Covered Software in Executable Form then:

- a. such Covered Software must also be made available in Source Code Form, as described in Section 3.1, and You must inform recipients of the Executable Form how they can obtain a copy of such Source Code Form by reasonable means in a timely manner, at a charge no more than the cost of distribution to the recipient; and
- b. You may distribute such Executable Form under the terms of this License, or sublicense it under different terms, provided that the license for the Executable Form does not attempt to limit or alter the recipients' rights in the Source Code Form under this License.

3.3. Distribution of a Larger Work

You may create and distribute a Larger Work under terms of Your choice, provided that You also comply with the requirements of this License for the Covered Software. If the Larger Work is a combination of Covered Software with a work governed by one or more Secondary Licenses, and the Covered Software is not Incompatible With Secondary Licenses, this License permits You to additionally distribute such Covered Software under the terms of such Secondary License(s), so that the recipient of the Larger Work may, at their option, further distribute the Covered Software under the terms of either this License or such Secondary License(s).

3.4. Notices

You may not remove or alter the substance of any license notices (including copyright notices, patent notices, disclaimers of warranty, or limitations of liability) contained within the Source Code Form of the Covered Software, except that You may alter any license notices to the extent required to remedy known factual inaccuracies.

3.5. Application of Additional Terms

You may choose to offer, and to charge a fee for, warranty, support, indemnity or liability obligations to one or more recipients of Covered

Software. However, You may do so only on Your own behalf, and not on behalf of any Contributor. You must make it absolutely clear that any such warranty, support, indemnity, or liability obligation is offered by You alone, and You hereby agree to indemnify every Contributor for any liability incurred by such Contributor as a result of warranty, support, indemnity or liability terms You offer. You may include additional disclaimers of warranty and limitations of liability specific to any jurisdiction.

4. Inability to Comply Due to Statute or Regulation

If it is impossible for You to comply with any of the terms of this License with respect to some or all of the Covered Software due to statute, judicial order, or regulation then You must: (a) comply with the terms of this License to the maximum extent possible; and (b) describe the limitations and the code they affect. Such description must be placed in a text file included with all distributions of the Covered Software under this License. Except to the extent prohibited by statute or regulation, such description must be sufficiently detailed for a recipient of ordinary skill to be able to understand it.

5. Termination

5.1. The rights granted under this License will terminate automatically if You fail to comply with any of its terms. However, if You become compliant, then the rights granted under this License from a particular Contributor are reinstated (a) provisionally, unless and until such Contributor explicitly and finally terminates Your grants, and (b) on an ongoing basis, if such Contributor fails to notify You of the non-compliance by some reasonable means prior to 60 days after You have come back into compliance. Moreover, Your grants from a particular Contributor are reinstated on an ongoing basis if such Contributor notifies You of the non-compliance by some reasonable means, this is the first time You have received notice of non-compliance with this License from such Contributor, and You become compliant prior to 30 days after Your receipt of the notice.

5.2. If You initiate litigation against any entity by asserting a patent infringement claim (excluding declaratory judgment actions, counter-claims, and cross-claims) alleging that a Contributor Version directly or indirectly infringes any patent, then the rights granted to You by any and all Contributors for the Covered Software under Section 2.1 of this License shall terminate.

5.3. In the event of termination under Sections 5.1 or 5.2 above, all end user license agreements (excluding distributors and resellers) which have been validly granted by You or Your distributors under this License prior to termination shall survive termination.

6. Disclaimer of Warranty

Covered Software is provided under this License on an “as is” basis, without warranty of any kind, either expressed, implied, or statutory, including, without limitation, warranties that the Covered Software is free of defects, merchantable, fit for a particular purpose or non-infringing. The entire risk as to the quality and performance of the Covered Software is with You. Should any Covered Software prove defective in any respect, You (not any Contributor) assume the cost of any necessary servicing, repair, or correction. This disclaimer of warranty constitutes an essential part of this License. No use of any Covered Software is authorized under this License except under this disclaimer.

7. Limitation of Liability

Under no circumstances and under no legal theory, whether tort (including negligence), contract, or otherwise, shall any Contributor, or anyone who distributes Covered Software as permitted above, be liable to You for any direct, indirect, special, incidental, or consequential damages of any character including, without limitation, damages for lost profits, loss of goodwill, work stoppage, computer failure or malfunction, or any and all other commercial damages or losses, even if such party shall have been informed of the possibility of such damages. This limitation of liability shall not apply to liability for death or personal injury resulting from such party's negligence to the extent applicable law prohibits such limitation. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so this exclusion and limitation may not apply to You.

8. Litigation

Any litigation relating to this License may be brought only in the courts of a jurisdiction where the defendant maintains its principal place of business and such litigation shall be governed by laws of that jurisdiction, without reference to its conflict-of-law provisions. Nothing in this Section shall prevent a party's ability to bring cross-claims or counter-claims.

9. Miscellaneous

This License represents the complete agreement concerning the subject

matter hereof. If any provision of this License is held to be unenforceable, such provision shall be reformed only to the extent necessary to make it enforceable. Any law or regulation which provides that the language of a contract shall be construed against the drafter shall not be used to construe this License against a Contributor.

10. Versions of the License

10.1. New Versions

Mozilla Foundation is the license steward. Except as provided in Section 10.3, no one other than the license steward has the right to modify or publish new versions of this License. Each version will be given a distinguishing version number.

10.2. Effect of New Versions

You may distribute the Covered Software under the terms of the version of the License under which You originally received the Covered Software, or under the terms of any subsequent version published by the license steward.

10.3. Modified Versions

If you create software not governed by this License, and you want to create a new license for such software, you may create and use a modified version of this License if you rename the license and remove any references to the name of the license steward (except to note that such modified license differs from this License).

10.4. Distributing Source Code Form that is Incompatible With Secondary Licenses If You choose to distribute Source Code Form that is Incompatible With Secondary Licenses under the terms of this version of the License, the notice described in Exhibit B of this License must be attached.

Exhibit A - Source Code Form License Notice

This Source Code Form is subject to the terms of the Mozilla Public License, v.

2.0. If a copy of the MPL was not distributed with this file, You can obtain one at

<http://mozilla.org/MPL/2.0/>.

If it is not possible or desirable to put the notice in a particular file, then You may include the notice in a location (such as a LICENSE file in a relevant directory) where a recipient would be likely to look for such a notice.

You may add additional accurate notices of copyright ownership.

Exhibit B - "Incompatible With Secondary Licenses" Notice

This Source Code Form is "Incompatible
With Secondary Licenses", as defined by
the Mozilla Public License, v. 2.0.

BSP - dropbear:

Dropbear contains a number of components from different sources, hence there
are a few licenses and authors involved. All licenses are fairly
non-restrictive.

The majority of code is written by Matt Johnston, under the license below.

Portions of the client-mode work are (c) 2004 Mihnea Stoenescu, under the
same license:

Copyright (c) 2002-2015 Matt Johnston

Portions copyright (c) 2004 Mihnea Stoenescu

All rights reserved.

Permission is hereby granted, free of charge, to any person obtaining a copy
of this software and associated documentation files (the "Software"), to deal
in the Software without restriction, including without limitation the rights
to use, copy, modify, merge, publish, distribute, sublicense, and/or sell
copies of the Software, and to permit persons to whom the Software is
furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all
copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR
IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY,
FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE
AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER
LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM,
OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE
SOFTWARE.

=====

LibTomCrypt and LibTomMath are written by Tom St Denis, and are Public Domain.

=====

sshpty.c is taken from OpenSSH 3.5p1,

Copyright (c) 1995 Tatu Ylonen <ylo@cs.hut.fi>, Espoo, Finland

All rights reserved

"As far as I am concerned, the code I have written for this software

can be used freely for any purpose. Any derived versions of this software must be clearly marked as such, and if the derived work is incompatible with the protocol description in the RFC file, it must be called by a name other than “ssh” or “Secure Shell”. “

=====

loginrec.c

loginrec.h

atomicio.h

atomicio.c

and strlcat() (included in util.c) are from OpenSSH 3.6.1p2, and are licensed under the 2 point BSD license.

loginrec is written primarily by Andre Lucas, atomicio.c by Theo de Raadt.

strlcat() is (c) Todd C. Miller

=====

Import code in keyimport.c is modified from PuTTY’s import.c, licensed as follows:

PuTTY is copyright 1997-2003 Simon Tatham.

Portions copyright Robert de Bath, Joris van Rantwijk, Delian

Delchev, Andreas Schultz, Jeroen Massar, Wez Furlong, Nicolas Barry,

Justin Bradford, and CORE SDI S.A.

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the “Software”), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED “AS IS”, WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

=====

curve25519-donna:

```
/* Copyright 2008, Google Inc.  
* All rights reserved.  
*  
* Redistribution and use in source and binary forms, with or without  
* modification, are permitted provided that the following conditions are  
* met:  
*  
* * Redistributions of source code must retain the above copyright  
* notice, this list of conditions and the following disclaimer.  
* * Redistributions in binary form must reproduce the above  
* copyright notice, this list of conditions and the following disclaimer  
* in the documentation and/or other materials provided with the  
* distribution.  
* * Neither the name of Google Inc. nor the names of its  
* contributors may be used to endorse or promote products derived from  
* this software without specific prior written permission.  
*  
* THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS  
* "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT  
* LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR  
* A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT  
* OWNER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL,  
* SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT  
* LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE,  
* DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY  
* THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT  
* (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE  
* OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.  
*  
* curve25519-donna: Curve25519 elliptic curve, public key function  
*  
* http://code.google.com/p/curve25519-donna/  
*  
* Adam Langley <agl@imperialviolet.org>  
*  
* Derived from public domain C code by Daniel J. Bernstein <djb@cr.yp.to>  
*  
* More information about curve25519 can be found here
```

* <http://cr.yp.to/ecdh.html>
*
* djb's sample implementation of curve25519 is written in a special assembly
* language called qhasm and uses the floating point registers.
*
* This is, almost, a clean room reimplementation from the curve25519 paper. It
* uses many of the tricks described therein. Only the crecip function is taken
* from the sample implementation.
*/

BSP - hiawatha:

GNU GENERAL PUBLIC LICENSE

Version 2, June 1991

Copyright (C) 1989, 1991 Free Software Foundation, Inc.,

51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA

Everyone is permitted to copy and distribute verbatim copies
of this license document, but changing it is not allowed.

Preamble

The licenses for most software are designed to take away your
freedom to share and change it. By contrast, the GNU General Public
License is intended to guarantee your freedom to share and change free
software—to make sure the software is free for all its users. This
General Public License applies to most of the Free Software
Foundation's software and to any other program whose authors commit to
using it. (Some other Free Software Foundation software is covered by
the GNU Lesser General Public License instead.) You can apply it to
your programs, too.

When we speak of free software, we are referring to freedom, not
price. Our General Public Licenses are designed to make sure that you
have the freedom to distribute copies of free software (and charge for
this service if you wish), that you receive source code or can get it
if you want it, that you can change the software or use pieces of it
in new free programs; and that you know you can do these things.
To protect your rights, we need to make restrictions that forbid
anyone to deny you these rights or to ask you to surrender the rights.
These restrictions translate to certain responsibilities for you if you
distribute copies of the software, or if you modify it.

For example, if you distribute copies of such a program, whether

gratis or for a fee, you must give the recipients all the rights that you have. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

We protect your rights with two steps: (1) copyright the software, and (2) offer you this license which gives you legal permission to copy, distribute and/or modify the software.

Also, for each author's protection and ours, we want to make certain that everyone understands that there is no warranty for this free software. If the software is modified by someone else and passed on, we want its recipients to know that what they have is not the original, so that any problems introduced by others will not reflect on the original authors' reputations.

Finally, any free program is threatened constantly by software patents. We wish to avoid the danger that redistributors of a free program will individually obtain patent licenses, in effect making the program proprietary. To prevent this, we have made it clear that any patent must be licensed for everyone's free use or not licensed at all.

The precise terms and conditions for copying, distribution and modification follow.

GNU GENERAL PUBLIC LICENSE

TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

0. This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License. The "Program", below, refers to any such program or work, and a "work based on the Program" means either the Program or any derivative work under copyright law: that is to say, a work containing the Program or a portion of it, either verbatim or with modifications and/or translated into another language. (Hereinafter, translation is included without limitation in the term "modification".) Each licensee is addressed as "you".

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running the Program is not restricted, and the output from the Program is covered only if its contents constitute a work based on the Program (independent of having been made by running the Program). Whether that is true depends on what the Program does.

1. You may copy and distribute verbatim copies of the Program's

source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and give any other recipients of the Program a copy of this License along with the Program.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Program or any portion of it, thus forming a work based on the Program, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:

- a) You must cause the modified files to carry prominent notices stating that you changed the files and the date of any change.
- b) You must cause any work that you distribute or publish, that in whole or in part contains or is derived from the Program or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this License.
- c) If the modified program normally reads commands interactively when run, you must cause it, when started running for such interactive use in the most ordinary way, to print or display an announcement including an appropriate copyright notice and a notice that there is no warranty (or else, saying that you provide a warranty) and that users may redistribute the program under these conditions, and telling the user how to view a copy of this License. (Exception: if the Program itself is interactive but does not normally print such an announcement, your work based on the Program is not required to print an announcement.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Program, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Program, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it. Thus, it is not the intent of this section to claim rights or contest

your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Program.

In addition, mere aggregation of another work not based on the Program with the Program (or with a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you also do one of the following:

- a) Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
- b) Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code, to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
- c) Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is allowed only for noncommercial distribution and only if you received the program in object code or executable form with such an offer, in accord with Subsection b above.)

The source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the executable. However, as a special exception, the source code distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

If distribution of executable or object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place counts as distribution of the source code, even though third parties are not

compelled to copy the source along with the object code.

4. You may not copy, modify, sublicense, or distribute the Program except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense or distribute the Program is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.

5. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Program or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Program (or any work based on the Program), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Program or works based on it.

6. Each time you redistribute the Program (or any work based on the Program), the recipient automatically receives a license from the original licensor to copy, distribute or modify the Program subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties to this License.

7. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Program at all. For example, if a patent license would not permit royalty-free redistribution of the Program by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Program.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply and the section as a whole is intended to apply in other

circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system, which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

8. If the distribution and/or use of the Program is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Program under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.

9. The Free Software Foundation may publish revised and/or new versions of the General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Program specifies a version number of this License which applies to it and “any later version”, you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of this License, you may choose any version ever published by the Free Software Foundation.

10. If you wish to incorporate parts of the Program into other free programs whose distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

NO WARRANTY

11. BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

12. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

END OF TERMS AND CONDITIONS

How to Apply These Terms to Your New Programs

If you develop a new program, and you want it to be of the greatest possible use to the public, the best way to achieve this is to make it free software which everyone can redistribute and change under these terms.

To do so, attach the following notices to the program. It is safest to attach them to the start of each source file to most effectively convey the exclusion of warranty; and each file should have at least the "copyright" line and a pointer to where the full notice is found.

<one line to give the program's name and a brief idea of what it does.>

Copyright (C) <year> <name of author>

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA.

Also add information on how to contact you by electronic and paper mail.

If the program is interactive, make it output a short notice like this when it starts in an interactive mode:

Gnomovision version 69, Copyright (C) year name of author

Gnomovision comes with ABSOLUTELY NO WARRANTY; for details type `show w'.

This is free software, and you are welcome to redistribute it under certain conditions; type `show c' for details.

The hypothetical commands `show w' and `show c' should show the appropriate parts of the General Public License. Of course, the commands you use may be called something other than `show w' and `show c'; they could even be mouse-clicks or menu items—whatever suits your program.

You should also get your employer (if you work as a programmer) or your school, if any, to sign a “copyright disclaimer” for the program, if necessary. Here is a sample; alter the names:

Yoyodyne, Inc., hereby disclaims all copyright interest in the program

`Gnomovision' (which makes passes at compilers) written by James Hacker.

<signature of Ty Coon>, 1 April 1989

Ty Coon, President of Vice

This General Public License does not permit incorporating your program into proprietary programs. If your program is a subroutine library, you may consider it more useful to permit linking proprietary applications with the library. If this is what you want to do, use the GNU Lesser General Public License instead of this License.

BSP - iptables:

GNU GENERAL PUBLIC LICENSE

Version 2, June 1991

Copyright (C) 1989, 1991 Free Software Foundation, Inc.,

51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA

Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change free

software—to make sure the software is free for all its users. This General Public License applies to most of the Free Software Foundation’s software and to any other program whose authors commit to using it. (Some other Free Software Foundation software is covered by the GNU Lesser General Public License instead.) You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs; and that you know you can do these things. To protect your rights, we need to make restrictions that forbid anyone to deny you these rights or to ask you to surrender the rights. These restrictions translate to certain responsibilities for you if you distribute copies of the software, or if you modify it.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must give the recipients all the rights that you have. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

We protect your rights with two steps: (1) copyright the software, and (2) offer you this license which gives you legal permission to copy, distribute and/or modify the software.

Also, for each author’s protection and ours, we want to make certain that everyone understands that there is no warranty for this free software. If the software is modified by someone else and passed on, we want its recipients to know that what they have is not the original, so that any problems introduced by others will not reflect on the original authors’ reputations.

Finally, any free program is threatened constantly by software patents. We wish to avoid the danger that redistributors of a free program will individually obtain patent licenses, in effect making the program proprietary. To prevent this, we have made it clear that any patent must be licensed for everyone’s free use or not licensed at all. The precise terms and conditions for copying, distribution and modification follow.

GNU GENERAL PUBLIC LICENSE

TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

0. This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License. The “Program”, below, refers to any such program or work, and a “work based on the Program” means either the Program or any derivative work under copyright law: that is to say, a work containing the Program or a portion of it, either verbatim or with modifications and/or translated into another language. (Hereinafter, translation is included without limitation in the term “modification”.) Each licensee is addressed as “you”. Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running the Program is not restricted, and the output from the Program is covered only if its contents constitute a work based on the Program (independent of having been made by running the Program). Whether that is true depends on what the Program does.

1. You may copy and distribute verbatim copies of the Program’s source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and give any other recipients of the Program a copy of this License along with the Program.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Program or any portion of it, thus forming a work based on the Program, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:

- a) You must cause the modified files to carry prominent notices stating that you changed the files and the date of any change.
- b) You must cause any work that you distribute or publish, that in whole or in part contains or is derived from the Program or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this License.
- c) If the modified program normally reads commands interactively when run, you must cause it, when started running for such interactive use in the most ordinary way, to print or display an

announcement including an appropriate copyright notice and a notice that there is no warranty (or else, saying that you provide a warranty) and that users may redistribute the program under these conditions, and telling the user how to view a copy of this License. (Exception: if the Program itself is interactive but does not normally print such an announcement, your work based on the Program is not required to print an announcement.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Program, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Program, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it. Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Program.

In addition, mere aggregation of another work not based on the Program with the Program (or with a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you also do one of the following:

- a) Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
- b) Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code, to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
- c) Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is

allowed only for noncommercial distribution and only if you received the program in object code or executable form with such an offer, in accord with Subsection b above.)

The source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the executable. However, as a special exception, the source code distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

If distribution of executable or object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place counts as distribution of the source code, even though third parties are not compelled to copy the source along with the object code.

4. You may not copy, modify, sublicense, or distribute the Program except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense or distribute the Program is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.

5. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Program or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Program (or any work based on the Program), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Program or works based on it.

6. Each time you redistribute the Program (or any work based on the Program), the recipient automatically receives a license from the original licensor to copy, distribute or modify the Program subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein.

You are not responsible for enforcing compliance by third parties to this License.

7. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Program at all. For example, if a patent license would not permit royalty-free redistribution of the Program by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Program.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system, which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

8. If the distribution and/or use of the Program is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Program under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.

9. The Free Software Foundation may publish revised and/or new versions

of the General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Program specifies a version number of this License which applies to it and “any later version”, you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of this License, you may choose any version ever published by the Free Software Foundation.

10. If you wish to incorporate parts of the Program into other free programs whose distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

NO WARRANTY

11. BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM “AS IS” WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

12. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

END OF TERMS AND CONDITIONS

How to Apply These Terms to Your New Programs

If you develop a new program, and you want it to be of the greatest possible use to the public, the best way to achieve this is to make it free software which everyone can redistribute and change under these terms.

To do so, attach the following notices to the program. It is safest to attach them to the start of each source file to most effectively convey the exclusion of warranty; and each file should have at least the “copyright” line and a pointer to where the full notice is found.
<one line to give the program’s name and a brief idea of what it does.>

Copyright (C) <year> <name of author>

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA.

Also add information on how to contact you by electronic and paper mail.

If the program is interactive, make it output a short notice like this when it starts in an interactive mode:

Gnomovision version 69, Copyright (C) year name of author

Gnomovision comes with ABSOLUTELY NO WARRANTY; for details type `show w`.

This is free software, and you are welcome to redistribute it under certain conditions; type `show c` for details.

The hypothetical commands `show w` and `show c` should show the appropriate parts of the General Public License. Of course, the commands you use may be called something other than `show w` and `show c`; they could even be mouse-clicks or menu items—whatever suits your program.

You should also get your employer (if you work as a programmer) or your school, if any, to sign a “copyright disclaimer” for the program, if necessary. Here is a sample; alter the names:

Yoyodyne, Inc., hereby disclaims all copyright interest in the program

`Gnomovision' (which makes passes at compilers) written by James Hacker.

<signature of Ty Coon>, 1 April 1989

Ty Coon, President of Vice

This General Public License does not permit incorporating your program into proprietary programs. If your program is a subroutine library, you may consider it more useful to permit linking proprietary applications with the library. If this is what you want to do, use the GNU Lesser General Public License instead of this License.

BSP - json-c:

Copyright (c) 2009-2012 Eric Haszlakiewicz

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

Copyright (c) 2004, 2005 Metaparadigm Pte Ltd

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM,

OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

BSP - libcurl:

COPYRIGHT AND PERMISSION NOTICE

Copyright (c) 1996 - 2020, Daniel Stenberg, <daniel@haxx.se>, and many contributors, see the THANKS file.

All rights reserved.

Permission to use, copy, modify, and distribute this software for any purpose with or without fee is hereby granted, provided that the above copyright notice and this permission notice appear in all copies.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OF THIRD PARTY RIGHTS. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

Except as contained in this notice, the name of a copyright holder shall not be used in advertising or otherwise to promote the sale, use or other dealings in this Software without prior written authorization of the copyright holder.

BSP - libevent:

Libevent is available for use under the following license, commonly known as the 3-clause (or "modified") BSD license:

=====

Copyright (c) 2000-2007 Niels Provos <provos@citi.umich.edu>

Copyright (c) 2007-2012 Niels Provos and Nick Mathewson

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. The name of the author may not be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR ``AS IS'' AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

=====

Portions of Libevent are based on works by others, also made available by them under the three-clause BSD license above. The copyright notices are available in the corresponding source files; the license is as above. Here's a list:

log.c:

Copyright (c) 2000 Dug Song <dugsong@monkey.org>

Copyright (c) 1993 The Regents of the University of California.

strlcpy.c:

Copyright (c) 1998 Todd C. Miller <Todd.Miller@courtesan.com>

win32select.c:

Copyright (c) 2003 Michael A. Davis <mike@datanerds.net>

evport.c:

Copyright (c) 2007 Sun Microsystems

ht-internal.h:

Copyright (c) 2002 Christopher Clark

minheap-internal.h:

Copyright (c) 2006 Maxim Yegorushkin <maxim.yegorushkin@gmail.com>

=====

The arc4module is available under the following, sometimes called the "OpenBSD" license:

Copyright (c) 1996, David Mazieres <dm@uun.org>

Copyright (c) 2008, Damien Miller <djm@openbsd.org>

Permission to use, copy, modify, and distribute this software for any purpose with or without fee is hereby granted, provided that the above copyright notice and this permission notice appear in all copies.

THE SOFTWARE IS PROVIDED "AS IS" AND THE AUTHOR DISCLAIMS ALL WARRANTIES WITH REGARD TO THIS SOFTWARE INCLUDING ALL IMPLIED WARRANTIES OF

MERCHANTABILITY AND FITNESS. IN NO EVENT SHALL THE AUTHOR BE LIABLE FOR ANY SPECIAL, DIRECT, INDIRECT, OR CONSEQUENTIAL DAMAGES OR ANY DAMAGES WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS, WHETHER IN AN ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE.

=====

The Windows timer code is based on code from libutp, which is distributed under this license, sometimes called the “MIT” license.

Copyright (c) 2010 BitTorrent, Inc.

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the “Software”), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED “AS IS”, WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

BSP - libfcgi:

This FastCGI application library source and object code (the “Software”) and its documentation (the “Documentation”) are copyrighted by Open Market, Inc (“Open Market”). The following terms apply to all files associated with the Software and Documentation unless explicitly disclaimed in individual files.

Open Market permits you to use, copy, modify, distribute, and license this Software and the Documentation for any purpose, provided that existing copyright notices are retained in all copies and that this notice is included verbatim in any distributions. No written agreement, license, or royalty fee is required for any of the authorized uses. Modifications to this Software and Documentation may be copyrighted by their authors and need not follow the licensing

terms described here. If modifications to this Software and Documentation have new licensing terms, the new terms must be clearly indicated on the first page of each file where they apply.

OPEN MARKET MAKES NO EXPRESS OR IMPLIED WARRANTY WITH RESPECT TO THE SOFTWARE OR THE DOCUMENTATION, INCLUDING WITHOUT LIMITATION ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT SHALL OPEN MARKET BE LIABLE TO YOU OR ANY THIRD PARTY FOR ANY DAMAGES ARISING FROM OR RELATING TO THIS SOFTWARE OR THE DOCUMENTATION, INCLUDING, WITHOUT LIMITATION, ANY INDIRECT, SPECIAL OR CONSEQUENTIAL DAMAGES OR SIMILAR DAMAGES, INCLUDING LOST PROFITS OR LOST DATA, EVEN IF OPEN MARKET HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THE SOFTWARE AND DOCUMENTATION ARE PROVIDED "AS IS". OPEN MARKET HAS NO LIABILITY IN CONTRACT, TORT, NEGLIGENCE OR OTHERWISE ARISING OUT OF THIS SOFTWARE OR THE DOCUMENTATION.

BSP - libnet:

\$Id: COPYING,v 1.1.1.1 2003/06/26 21:55:10 route Exp \$

libnet 1.1.x

Copyright (c) 1998 - 2002 Mike D. Schiffman <mike@infonexus.com>

<http://www.packetfactory.net/libnet>

LIBNET 1.1.3+ (c) 2009 - 2012 Sam Roberts <vieuxtech@gmail.com>

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR AND CONTRIBUTORS ``AS IS'' AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT

LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY
OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF
SUCH DAMAGE.

EOF

BSP - libssh2:

/* Copyright (c) 2004-2007 Sara Golemon <sarag@libssh2.org>

* Copyright (c) 2005,2006 Mikhail Gusarov <dottedmag@dottedmag.net>

* Copyright (c) 2006-2007 The Written Word, Inc.

* Copyright (c) 2007 Eli Fant <elifantu@mail.ru>

* Copyright (c) 2009-2014 Daniel Stenberg

* Copyright (C) 2008, 2009 Simon Josefsson

* All rights reserved.

*

* Redistribution and use in source and binary forms,

* with or without modification, are permitted provided

* that the following conditions are met:

*

* Redistributions of source code must retain the above

* copyright notice, this list of conditions and the

* following disclaimer.

*

* Redistributions in binary form must reproduce the above

* copyright notice, this list of conditions and the following

* disclaimer in the documentation and/or other materials

* provided with the distribution.

*

* Neither the name of the copyright holder nor the names

* of any other contributors may be used to endorse or

* promote products derived from this software without

* specific prior written permission.

*

* THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND

* CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES,

* INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES

* OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE

* ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT OWNER OR

* CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL,

* SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING,
* BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR
* SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS
* INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY,
* WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING
* NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE
* USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY
* OF SUCH DAMAGE.

*/

BSP - libupnp:

Copyright (c) 2000-2003 Intel Corporation

All rights reserved.

Redistribution and use in source and binary forms, with or without
modification, are permitted provided that the following conditions are met:

* Redistributions of source code must retain the above copyright notice,
this list of conditions and the following disclaimer.

* Redistributions in binary form must reproduce the above copyright notice,
this list of conditions and the following disclaimer in the documentation
and/or other materials provided with the distribution.

* Neither name of Intel Corporation nor the names of its contributors
may be used to endorse or promote products derived from this software
without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS
` ` AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT
LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR
A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL INTEL OR
CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL,
EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO,
PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR
PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY
OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING
NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS
SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

BSP - libzlib:

ZLIB DATA COMPRESSION LIBRARY

zlib 1.2.11 is a general purpose data compression library. All the code is

thread safe. The data format used by the zlib library is described by RFCs (Request for Comments) 1950 to 1952 in the files <http://tools.ietf.org/html/rfc1950> (zlib format), [rfc1951](http://tools.ietf.org/html/rfc1951) (deflate format) and [rfc1952](http://tools.ietf.org/html/rfc1952) (gzip format).

All functions of the compression library are documented in the file `zlib.h` (volunteer to write man pages welcome, contact zlib@gzip.org). A usage example of the library is given in the file `test/example.c` which also tests that the library is working correctly. Another example is given in the file `test/minigzip.c`. The compression library itself is composed of all source files in the root directory.

To compile all files and run the test program, follow the instructions given at the top of `Makefile.in`. In short “./configure; make test”, and if that goes well, “make install” should work for most flavors of Unix. For Windows, use one of the special makefiles in `win32/` or `contrib/vstudio/`. For VMS, use `make_vms.com`.

Questions about zlib should be sent to [<zlib@gzip.org>](mailto:zlib@gzip.org), or to Gilles Vollant [<info@winimage.com>](mailto:info@winimage.com) for the Windows DLL version. The zlib home page is <http://zlib.net/>. Before reporting a problem, please check this site to verify that you have the latest version of zlib; otherwise get the latest version and check whether the problem still exists or not.

PLEASE read the zlib FAQ http://zlib.net/zlib_faq.html before asking for help. Mark Nelson [<markn@ieee.org>](mailto:markn@ieee.org) wrote an article about zlib for the Jan. 1997 issue of Dr. Dobbs’s Journal; a copy of the article is available at <http://marknelson.us/1997/01/01/zlib-engine/>.

The changes made in version 1.2.11 are documented in the file `ChangeLog`. Unsupported third party contributions are provided in directory `contrib/`. zlib is available in Java using the `java.util.zip` package, documented at <http://java.sun.com/developer/technicalArticles/Programming/compression/>. A Perl interface to zlib written by Paul Marquess [<pmqs@cpan.org>](mailto:pmqs@cpan.org) is available at CPAN (Comprehensive Perl Archive Network) sites, including <http://search.cpan.org/~pmqs/IO-Compress-Zlib/>.

A Python interface to zlib written by A.M. Kuchling [<amk@amk.ca>](mailto:amk@amk.ca) is available in Python 1.5 and later versions, see <http://docs.python.org/library/zlib.html>. zlib is built into tcl: <http://wiki.tcl.tk/4610>.

An experimental package to read and write files in .zip format, written on top of zlib by Gilles Vollant [<info@winimage.com>](mailto:info@winimage.com), is available in the `contrib/minizip` directory of zlib.

Notes for some targets:

- For Windows DLL versions, please see win32/DLL_FAQ.txt
- For 64-bit Irix, deflate.c must be compiled without any optimization. With -O, one libpng test fails. The test works in 32 bit mode (with the -n32 compiler flag). The compiler bug has been reported to SGI.
- zlib doesn't work with gcc 2.6.3 on a DEC 3000/300LX under OSF/1 2.1 it works when compiled with cc.
- On Digital Unix 4.0D (formerly OSF/1) on AlphaServer, the cc option -std1 is necessary to get gzprintf working correctly. This is done by configure.
- zlib doesn't work on HP-UX 9.05 with some versions of /bin/cc. It works with other compilers. Use "make test" to check your compiler.
- gzopen is not supported on RISCOS or BEOS.
- For PalmOs, see <http://palmzlib.sourceforge.net/>

Acknowledgments:

The deflate format used by zlib was defined by Phil Katz. The deflate and zlib specifications were written by L. Peter Deutsch. Thanks to all the people who reported problems and suggested various improvements in zlib; they are too numerous to cite here.

Copyright notice:

(C) 1995-2017 Jean-loup Gailly and Mark Adler

This software is provided 'as-is', without any express or implied warranty. In no event will the authors be held liable for any damages arising from the use of this software.

Permission is granted to anyone to use this software for any purpose, including commercial applications, and to alter it and redistribute it freely, subject to the following restrictions:

1. The origin of this software must not be misrepresented; you must not claim that you wrote the original software. If you use this software in a product, an acknowledgment in the product documentation would be appreciated but is not required.
2. Altered source versions must be plainly marked as such, and must not be misrepresented as being the original software.
3. This notice may not be removed or altered from any source distribution.

Jean-loup Gailly Mark Adler

jloup@gzip.org madler@alumni.caltech.edu

If you use the zlib library in a product, we would appreciate *not* receiving lengthy legal documents to sign. The sources are provided for free but without warranty of any kind. The library has been entirely written by Jean-loup

Gailly and Mark Adler; it does not include third-party code.

If you redistribute modified sources, we would appreciate that you include in the file ChangeLog history information documenting your changes. Please read the FAQ for more information on the distribution of modified source versions.

BSP - linux:

The Linux Kernel is provided under:

SPDX-License-Identifier: GPL-2.0 WITH Linux-syscall-note

Being under the terms of the GNU General Public License version 2 only, according with:

LICENSES/preferred/GPL-2.0

With an explicit syscall exception, as stated at:

LICENSES/exceptions/Linux-syscall-note

In addition, other licenses may also apply. Please see:

Documentation/process/license-rules.rst

for more details.

BSP - mbedtls:

Apache License

Version 2.0, January 2004

<http://www.apache.org/licenses/>

TERMS AND CONDITIONS FOR USE, REPRODUCTION, AND DISTRIBUTION

1. Definitions.

“License” shall mean the terms and conditions for use, reproduction, and distribution as defined by Sections 1 through 9 of this document.

“Licensor” shall mean the copyright owner or entity authorized by the copyright owner that is granting the License.

“Legal Entity” shall mean the union of the acting entity and all other entities that control, are controlled by, or are under common control with that entity. For the purposes of this definition,

“control” means (i) the power, direct or indirect, to cause the direction or management of such entity, whether by contract or otherwise, or (ii) ownership of fifty percent (50%) or more of the outstanding shares, or (iii) beneficial ownership of such entity.

“You” (or “Your”) shall mean an individual or Legal Entity exercising permissions granted by this License.

“Source” form shall mean the preferred form for making modifications, including but not limited to software source code, documentation

source, and configuration files.

“Object” form shall mean any form resulting from mechanical transformation or translation of a Source form, including but not limited to compiled object code, generated documentation, and conversions to other media types.

“Work” shall mean the work of authorship, whether in Source or Object form, made available under the License, as indicated by a copyright notice that is included in or attached to the work (an example is provided in the Appendix below).

“Derivative Works” shall mean any work, whether in Source or Object form, that is based on (or derived from) the Work and for which the editorial revisions, annotations, elaborations, or other modifications represent, as a whole, an original work of authorship. For the purposes of this License, Derivative Works shall not include works that remain separable from, or merely link (or bind by name) to the interfaces of, the Work and Derivative Works thereof.

“Contribution” shall mean any work of authorship, including the original version of the Work and any modifications or additions to that Work or Derivative Works thereof, that is intentionally submitted to Licensor for inclusion in the Work by the copyright owner or by an individual or Legal Entity authorized to submit on behalf of the copyright owner. For the purposes of this definition, “submitted” means any form of electronic, verbal, or written communication sent to the Licensor or its representatives, including but not limited to communication on electronic mailing lists, source code control systems, and issue tracking systems that are managed by, or on behalf of, the Licensor for the purpose of discussing and improving the Work, but excluding communication that is conspicuously marked or otherwise designated in writing by the copyright owner as “Not a Contribution.”

“Contributor” shall mean Licensor and any individual or Legal Entity on behalf of whom a Contribution has been received by Licensor and subsequently incorporated within the Work.

2. Grant of Copyright License. Subject to the terms and conditions of this License, each Contributor hereby grants to You a perpetual, worldwide, non-exclusive, no-charge, royalty-free, irrevocable copyright license to reproduce, prepare Derivative Works of, publicly display, publicly perform, sublicense, and distribute the Work and such Derivative Works in Source or Object form.

3. Grant of Patent License. Subject to the terms and conditions of this License, each Contributor hereby grants to You a perpetual, worldwide, non-exclusive, no-charge, royalty-free, irrevocable (except as stated in this section) patent license to make, have made, use, offer to sell, sell, import, and otherwise transfer the Work, where such license applies only to those patent claims licensable by such Contributor that are necessarily infringed by their Contribution(s) alone or by combination of their Contribution(s) with the Work to which such Contribution(s) was submitted. If You institute patent litigation against any entity (including a cross-claim or counterclaim in a lawsuit) alleging that the Work or a Contribution incorporated within the Work constitutes direct or contributory patent infringement, then any patent licenses granted to You under this License for that Work shall terminate as of the date such litigation is filed.

4. Redistribution. You may reproduce and distribute copies of the Work or Derivative Works thereof in any medium, with or without modifications, and in Source or Object form, provided that You meet the following conditions:

- (a) You must give any other recipients of the Work or Derivative Works a copy of this License; and
- (b) You must cause any modified files to carry prominent notices stating that You changed the files; and
- (c) You must retain, in the Source form of any Derivative Works that You distribute, all copyright, patent, trademark, and attribution notices from the Source form of the Work, excluding those notices that do not pertain to any part of the Derivative Works; and
- (d) If the Work includes a “NOTICE” text file as part of its distribution, then any Derivative Works that You distribute must include a readable copy of the attribution notices contained within such NOTICE file, excluding those notices that do not pertain to any part of the Derivative Works, in at least one of the following places: within a NOTICE text file distributed as part of the Derivative Works; within the Source form or documentation, if provided along with the Derivative Works; or, within a display generated by the Derivative Works, if and wherever such third-party notices normally appear. The contents

of the NOTICE file are for informational purposes only and do not modify the License. You may add Your own attribution notices within Derivative Works that You distribute, alongside or as an addendum to the NOTICE text from the Work, provided that such additional attribution notices cannot be construed as modifying the License.

You may add Your own copyright statement to Your modifications and may provide additional or different license terms and conditions for use, reproduction, or distribution of Your modifications, or for any such Derivative Works as a whole, provided Your use, reproduction, and distribution of the Work otherwise complies with the conditions stated in this License.

5. Submission of Contributions. Unless You explicitly state otherwise, any Contribution intentionally submitted for inclusion in the Work by You to the Licensor shall be under the terms and conditions of this License, without any additional terms or conditions.

Notwithstanding the above, nothing herein shall supersede or modify the terms of any separate license agreement you may have executed with Licensor regarding such Contributions.

6. Trademarks. This License does not grant permission to use the trade names, trademarks, service marks, or product names of the Licensor, except as required for reasonable and customary use in describing the origin of the Work and reproducing the content of the NOTICE file.

7. Disclaimer of Warranty. Unless required by applicable law or agreed to in writing, Licensor provides the Work (and each Contributor provides its Contributions) on an “AS IS” BASIS, WITHOUT WARRANTIES OR CONDITIONS OF ANY KIND, either express or implied, including, without limitation, any warranties or conditions of TITLE, NON-INFRINGEMENT, MERCHANTABILITY, or FITNESS FOR A PARTICULAR PURPOSE. You are solely responsible for determining the appropriateness of using or redistributing the Work and assume any risks associated with Your exercise of permissions under this License.

8. Limitation of Liability. In no event and under no legal theory, whether in tort (including negligence), contract, or otherwise, unless required by applicable law (such as deliberate and grossly negligent acts) or agreed to in writing, shall any Contributor be liable to You for damages, including any direct, indirect, special, incidental, or consequential damages of any character arising as a

result of this License or out of the use or inability to use the Work (including but not limited to damages for loss of goodwill, work stoppage, computer failure or malfunction, or any and all other commercial damages or losses), even if such Contributor has been advised of the possibility of such damages.

9. Accepting Warranty or Additional Liability. While redistributing the Work or Derivative Works thereof, You may choose to offer, and charge a fee for, acceptance of support, warranty, indemnity, or other liability obligations and/or rights consistent with this License. However, in accepting such obligations, You may act only on Your own behalf and on Your sole responsibility, not on behalf of any other Contributor, and only if You agree to indemnify, defend, and hold each Contributor harmless for any liability incurred by, or claims asserted against, such Contributor by reason of your accepting any such warranty or additional liability.

END OF TERMS AND CONDITIONS

APPENDIX: How to apply the Apache License to your work.

To apply the Apache License to your work, attach the following boilerplate notice, with the fields enclosed by brackets “[]” replaced with your own identifying information. (Don’t include the brackets!) The text should be enclosed in the appropriate comment syntax for the file format. We also recommend that a file or class name and description of purpose be included on the same “printed page” as the copyright notice for easier identification within third-party archives.

Copyright [yyyy] [name of copyright owner]

Licensed under the Apache License, Version 2.0 (the “License”);
you may not use this file except in compliance with the License.

You may obtain a copy of the License at

<http://www.apache.org/licenses/LICENSE-2.0>

Unless required by applicable law or agreed to in writing, software distributed under the License is distributed on an “AS IS” BASIS, WITHOUT WARRANTIES OR CONDITIONS OF ANY KIND, either express or implied. See the License for the specific language governing permissions and limitations under the License.

BSP - mtd:

GNU GENERAL PUBLIC LICENSE

Version 2, June 1991

Copyright (C) 1989, 1991 Free Software Foundation, Inc.

59 Temple Place, Suite 330, Boston, MA 02111-1307 USA

Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change free software—to make sure the software is free for all its users. This General Public License applies to most of the Free Software Foundation's software and to any other program whose authors commit to using it. (Some other Free Software Foundation software is covered by the GNU Library General Public License instead.) You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs; and that you know you can do these things.

To protect your rights, we need to make restrictions that forbid anyone to deny you these rights or to ask you to surrender the rights. These restrictions translate to certain responsibilities for you if you distribute copies of the software, or if you modify it.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must give the recipients all the rights that you have. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

We protect your rights with two steps: (1) copyright the software, and (2) offer you this license which gives you legal permission to copy, distribute and/or modify the software.

Also, for each author's protection and ours, we want to make certain that everyone understands that there is no warranty for this free software. If the software is modified by someone else and passed on, we want its recipients to know that what they have is not the original, so that any problems introduced by others will not reflect on the original

authors' reputations.

Finally, any free program is threatened constantly by software patents. We wish to avoid the danger that redistributors of a free program will individually obtain patent licenses, in effect making the program proprietary. To prevent this, we have made it clear that any patent must be licensed for everyone's free use or not licensed at all. The precise terms and conditions for copying, distribution and modification follow.

GNU GENERAL PUBLIC LICENSE

TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

0. This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License. The "Program", below, refers to any such program or work, and a "work based on the Program" means either the Program or any derivative work under copyright law: that is to say, a work containing the Program or a portion of it, either verbatim or with modifications and/or translated into another language. (Hereinafter, translation is included without limitation in the term "modification".) Each licensee is addressed as "you". Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running the Program is not restricted, and the output from the Program is covered only if its contents constitute a work based on the Program (independent of having been made by running the Program). Whether that is true depends on what the Program does.

1. You may copy and distribute verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and give any other recipients of the Program a copy of this License along with the Program.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Program or any portion of it, thus forming a work based on the Program, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:

- a) You must cause the modified files to carry prominent notices stating that you changed the files and the date of any change.
- b) You must cause any work that you distribute or publish, that in whole or in part contains or is derived from the Program or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this License.
- c) If the modified program normally reads commands interactively when run, you must cause it, when started running for such interactive use in the most ordinary way, to print or display an announcement including an appropriate copyright notice and a notice that there is no warranty (or else, saying that you provide a warranty) and that users may redistribute the program under these conditions, and telling the user how to view a copy of this License. (Exception: if the Program itself is interactive but does not normally print such an announcement, your work based on the Program is not required to print an announcement.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Program, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Program, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it. Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Program.

In addition, mere aggregation of another work not based on the Program with the Program (or with a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you also do one of the following:

- a) Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections

1 and 2 above on a medium customarily used for software interchange; or,

b) Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code, to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,

c) Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is allowed only for noncommercial distribution and only if you received the program in object code or executable form with such an offer, in accord with Subsection b above.)

The source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the executable. However, as a special exception, the source code distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

If distribution of executable or object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place counts as distribution of the source code, even though third parties are not compelled to copy the source along with the object code.

4. You may not copy, modify, sublicense, or distribute the Program except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense or distribute the Program is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.

5. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Program or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by

modifying or distributing the Program (or any work based on the Program), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Program or works based on it.

6. Each time you redistribute the Program (or any work based on the Program), the recipient automatically receives a license from the original licensor to copy, distribute or modify the Program subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties to this License.

7. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Program at all. For example, if a patent license would not permit royalty-free redistribution of the Program by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Program.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system, which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to

be a consequence of the rest of this License.

8. If the distribution and/or use of the Program is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Program under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.

9. The Free Software Foundation may publish revised and/or new versions of the General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Program specifies a version number of this License which applies to it and “any later version”, you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of this License, you may choose any version ever published by the Free Software Foundation.

10. If you wish to incorporate parts of the Program into other free programs whose distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

NO WARRANTY

11. BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM “AS IS” WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

12. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR

REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

END OF TERMS AND CONDITIONS

How to Apply These Terms to Your New Programs

If you develop a new program, and you want it to be of the greatest possible use to the public, the best way to achieve this is to make it free software which everyone can redistribute and change under these terms.

To do so, attach the following notices to the program. It is safest to attach them to the start of each source file to most effectively convey the exclusion of warranty; and each file should have at least the “copyright” line and a pointer to where the full notice is found.

<one line to give the program’s name and a brief idea of what it does.>

Copyright (C) 19yy <name of author>

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA

Also add information on how to contact you by electronic and paper mail.

If the program is interactive, make it output a short notice like this when it starts in an interactive mode:

Gnomovision version 69, Copyright (C) 19yy name of author

Gnomovision comes with ABSOLUTELY NO WARRANTY; for details type `show w’.

This is free software, and you are welcome to redistribute it under certain conditions; type `show c’ for details.

The hypothetical commands `show w’ and `show c’ should show the appropriate parts of the General Public License. Of course, the commands you use may

be called something other than `show w' and `show c'; they could even be mouse-clicks or menu items—whatever suits your program.

You should also get your employer (if you work as a programmer) or your school, if any, to sign a “copyright disclaimer” for the program, if necessary. Here is a sample; alter the names:

Yoyodyne, Inc., hereby disclaims all copyright interest in the program
`Gnomovision' (which makes passes at compilers) written by James Hacker.
<signature of Ty Coon>, 1 April 1989

Ty Coon, President of Vice

This General Public License does not permit incorporating your program into proprietary programs. If your program is a subroutine library, you may consider it more useful to permit linking proprietary applications with the library. If this is what you want to do, use the GNU Library General Public License instead of this License.

BSP - netsnmp:

Various copyrights apply to this package, listed in various separate parts below. Please make sure that you read all the parts.

— Part 1: CMU/UCD copyright notice: (BSD like) —

Copyright 1989, 1991, 1992 by Carnegie Mellon University

Derivative Work - 1996, 1998-2000

Copyright 1996, 1998-2000 The Regents of the University of California

All Rights Reserved

Permission to use, copy, modify and distribute this software and its documentation for any purpose and without fee is hereby granted, provided that the above copyright notice appears in all copies and that both that copyright notice and this permission notice appear in supporting documentation, and that the name of CMU and The Regents of the University of California not be used in advertising or publicity pertaining to distribution of the software without specific written permission.

CMU AND THE REGENTS OF THE UNIVERSITY OF CALIFORNIA DISCLAIM ALL WARRANTIES WITH REGARD TO THIS SOFTWARE, INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS. IN NO EVENT SHALL CMU OR THE REGENTS OF THE UNIVERSITY OF CALIFORNIA BE LIABLE FOR ANY SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES OR ANY DAMAGES WHATSOEVER RESULTING FROM THE LOSS OF USE, DATA OR PROFITS, WHETHER IN AN ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING OUT OF OR IN

CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE.

--- Part 2: Networks Associates Technology, Inc copyright notice (BSD) ---

Copyright (c) 2001-2003, Networks Associates Technology, Inc

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- * Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

- * Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

- * Neither the name of the Networks Associates Technology, Inc nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS ``AS IS'' AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDERS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

--- Part 3: Cambridge Broadband Ltd. copyright notice (BSD) ---

Portions of this code are copyright (c) 2001-2003, Cambridge Broadband Ltd.

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- * Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

- * Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

- * The name of Cambridge Broadband Ltd. may not be used to endorse or promote products derived from this software without specific prior

written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDER ``AS IS'' AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDER BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

--- Part 4: Sun Microsystems, Inc. copyright notice (BSD) ---

Copyright (c) 2003 Sun Microsystems, Inc., 4150 Network Circle, Santa Clara, California 95054, U.S.A. All rights reserved.

Use is subject to license terms below.

This distribution may include materials developed by third parties.

Sun, Sun Microsystems, the Sun logo and Solaris are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- * Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

- * Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

- * Neither the name of the Sun Microsystems, Inc. nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS ``AS IS'' AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDERS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY,

WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

— Part 5: Sparta, Inc copyright notice (BSD) —

Copyright (c) 2003-2013, Sparta, Inc

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- * Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- * Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- * Neither the name of Sparta, Inc nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS ``AS IS'' AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDERS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

— Part 6: Cisco/BUPTNIC copyright notice (BSD) —

Copyright (c) 2004, Cisco, Inc and Information Network

Center of Beijing University of Posts and Telecommunications.

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- * Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- * Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

* Neither the name of Cisco, Inc, Beijing University of Posts and Telecommunications, nor the names of their contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS ``AS IS'' AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDERS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

--- Part 7: Fabasoft R&D Software GmbH & Co KG copyright notice (BSD) ---

Copyright (c) Fabasoft R&D Software GmbH & Co KG, 2003

oss@fabasoft.com

Author: Bernhard Penz <bernhard.penz@fabasoft.com>

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

* Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

* Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

* The name of Fabasoft R&D Software GmbH & Co KG or any of its subsidiaries, brand or product names may not be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDER ``AS IS'' AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDER BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE

OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

— Part 8: Apple Inc. copyright notice (BSD) —

Copyright (c) 2007 Apple Inc. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. Neither the name of Apple Inc. (“Apple”) nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY APPLE AND ITS CONTRIBUTORS “AS IS” AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL APPLE OR ITS CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

— Part 9: ScienceLogic, LLC copyright notice (BSD) —

Copyright (c) 2009, ScienceLogic, LLC

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- * Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- * Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the

documentation and/or other materials provided with the distribution.

* Neither the name of ScienceLogic, LLC nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS ``AS IS'' AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDERS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

— Part 10: Lennart Poettering copyright notice (BSD-like) —

Copyright 2010 Lennart Poettering

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the “Software”), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED “AS IS”, WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

— Part 11: IETF copyright notice (BSD) —

Copyright (c) 2013 IETF Trust and the persons identified as authors of the code. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- * Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- * Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- * Neither the name of Internet Society, IETF or IETF Trust, nor the names of specific contributors, may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS ``AS IS'' AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT OWNER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

--- Part 12: Arista Networks copyright notice (BSD) ---

Copyright (c) 2013, Arista Networks, Inc.

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- * Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- * Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- * Neither the name of Arista Networks, Inc. nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS

“AS IS” AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDERS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

— Part 13: VMware, Inc. copyright notice (BSD) —

Copyright (c) 2016, VMware, Inc.

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- * Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

- * Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

- * Neither the name of VMware, Inc. nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS “AS IS” AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDERS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

— Part 14: USC/Information Sciences Institute copyright notice (BSD) —

Copyright (c) 2017-2018, Information Sciences Institute

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- * Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

- * Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

- * Neither the name of Information Sciences Institute nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS ``AS IS'' AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDERS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

BSP - ntp:

This file is automatically generated from html/copyright.html

Copyright Notice

jpg "Clone me," says Dolly sheepishly.

Last update: 4-Feb-2020 23:47 UTC

The following copyright notice applies to all files collectively called the Network Time Protocol Version 4 Distribution. Unless specifically declared otherwise in an individual file, this entire notice applies as if the text was explicitly included in the file.

* *

* Copyright (c) University of Delaware 1992-2015 *

* *

* Permission to use, copy, modify, and distribute this software and *

* its documentation for any purpose with or without fee is hereby *

* granted, provided that the above copyright notice appears in all *
* copies and that both the copyright notice and this permission *
* notice appear in supporting documentation, and that the name *
* University of Delaware not be used in advertising or publicity *
* pertaining to distribution of the software without specific, *
* written prior permission. The University of Delaware makes no *
* representations about the suitability this software for any *
* purpose. It is provided “as is” without express or implied *
* warranty. *

* *

Content starting in 2011 from Harlan Stenn, Danny Mayer, and Martin
Burnicki is:

* *

* Copyright (c) Network Time Foundation 2011-2020 *

* *

* All Rights Reserved *

* *

* Redistribution and use in source and binary forms, with or without *
* modification, are permitted provided that the following conditions *
* are met: *

- * 1. Redistributions of source code must retain the above copyright *
* notice, this list of conditions and the following disclaimer. *
- * 2. Redistributions in binary form must reproduce the above *
* copyright notice, this list of conditions and the following *
* disclaimer in the documentation and/or other materials provided *
* with the distribution. *

* *

* THIS SOFTWARE IS PROVIDED BY THE AUTHORS ``AS IS’ AND ANY EXPRESS *
* OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED *
* WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE *
* ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHORS OR CONTRIBUTORS BE *
* LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR *
* CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT *
* OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR *
* BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF *
* LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT *

* (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE *

* USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH *

* DAMAGE. *

The following individuals contributed in part to the Network Time Protocol Distribution Version 4 and are acknowledged as authors of this work.

1. [1]Takao Abe <takao_abe@xurb.jp> Clock driver for JJY receivers
2. [2]Mark Andrews <mark_andrews@isc.org> Leitch atomic clock controller
3. [3]Bernd Altmeier <altmeier@atlsoft.de> hopf Elektronik serial line and PCI-bus devices
4. [4]Viraj Bais <vbais@mailman1.intel.com> and [5]Clayton Kirkwood <kirkwood@striderfm.intel.com> port to WindowsNT 3.5
5. [6]Michael Barone <michael.barone@lmco.com> GPSVME fixes
6. [7]Karl Berry <karl@owl.HQ.ileaf.com> syslog to file option
7. [8]Greg Brackley <greg.brackley@bigfoot.com> Major rework of WINNT port. Clean up recvbuf and iosignal code into separate modules.
8. [9]Marc Brett <Marc.Brett@westgeo.com> Magnavox GPS clock driver
9. [10]Piete Brooks <Piete.Brooks@cl.cam.ac.uk> MSF clock driver, Trimble PARSE support
10. [11]Nelson B Bolyard <nelson@bolyard.me> update and complete broadcast and crypto features in sntp
11. [12]Jean-Francois Boudreault <Jean-Francois.Boudreault@viagenie.qc.ca> IPv6 support
12. [13]Reg Clemens <reg@dwf.com> Oncore driver (Current maintainer)
13. [14]Steve Clift <clift@ml.csiro.au> OMEGA clock driver
14. [15]Casey Crellin <casey@csc.co.za> vxWorks (Tornado) port and help with target configuration
15. [16]Sven Dietrich <sven_dietrich@trimble.com> Palisade reference clock driver, NT adj. residuals, integrated Greg's Winnt port.
16. [17]John A. Dundas III <dundas@salt.jpl.nasa.gov> Apple A/UX port
17. [18]Torsten Duwe <duwe@immd4.informatik.uni-erlangen.de> Linux port
18. [19]Dennis Ferguson <dennis@mrbill.canet.ca> foundation code for NTP Version 2 as specified in RFC-1119
19. [20]John Hay <jhay@icomtek.csiro.co.za> IPv6 support and testing
20. [21]Dave Hart <davehart@davehart.com> General maintenance, Windows port interpolation rewrite

21. [22]Claas Hilbrecht <neoclock4x@linum.com> NeoClock4X clock driver
22. [23]Glenn Hollinger <glenn@herald.usask.ca> GOES clock driver
23. [24]Mike Iglesias <iglesias@uci.edu> DEC Alpha port
24. [25]Jim Jagielski <jim@jagubox.gsfc.nasa.gov> A/UX port
25. [26]Jeff Johnson <jbj@chatham.usdesign.com> massive prototyping overhaul
26. [27]Hans Lambermont <Hans.Lambermont@nl.origin-it.com> or
[28]<H.Lambermont@chello.nl> ntpswEEP
27. [29]Poul-Henning Kamp <phk@FreeBSD.ORG> Oncore driver (Original author)
28. [30]Frank Kardel [31]<kardel (at) ntp (dot) org> PARSE <GENERIC> (driver 14 reference clocks), STREAMS modules for PARSE, support scripts, syslog cleanup, dynamic interface handling
29. [32]Johannes Maximilian Kuehn <kuehn@ntp.org> Rewrote snTP to comply with NTPv4 specification, ntpq saveconfig
30. [33]William L. Jones <jones@hermes.chpc.utexas.edu> RS/6000 AIX modifications, HPUX modifications
31. [34]Dave Katz <dkatz@cisco.com> RS/6000 AIX port
32. [35]Craig Leres <leres@ee.lbl.gov> 4.4BSD port, ppsclock, Magnavox GPS clock driver
33. [36]George Lindholm <lindholm@ucs.ubc.ca> SunOS 5.1 port
34. [37]Louis A. Mamakos <louie@ni.umd.edu> MD5-based authentication
35. [38]Lars H. Mathiesen <thorinn@diku.dk> adaptation of foundation code for Version 3 as specified in RFC-1305
36. [39]Danny Mayer <mayer@ntp.org> Network I/O, Windows Port, Code Maintenance
37. [40]David L. Mills <mills@udel.edu> Version 4 foundation, precision kernel; clock drivers: 1, 3, 4, 6, 7, 11, 13, 18, 19, 22, 36
38. [41]Wolfgang Moeller <moeller@gwdgv1.dnet.gwdg.de> VMS port
39. [42]Jeffrey Mogul <mogul@pa.dec.com> ntptrace utility
40. [43]Tom Moore <tmoore@fieval.daytonoh.ncr.com> i386 svr4 port
41. [44]Kamal A Mostafa <kamal@whence.com> SCO OpenServer port
42. [45]Derek Mulcahy <derek@toybox.demon.co.uk> and [46]Damon Hart-Davis <d@hd.org> ARCRON MSF clock driver
43. [47]Rob Neal <neal@ntp.org> Bancomm refclock and config/parse code maintenance
44. [48]Rainer Pruy <Rainer.Pruy@informatik.uni-erlangen.de> monitoring/trap scripts, statistics file handling

- 45. [49]Dirce Richards <dirce@zk3.dec.com> Digital UNIX V4.0 port
- 46. [50]Wilfredo S nchez <wsanchez@apple.com> added support for NetInfo
- 47. [51]Nick Sayer <mrapple@quack.kfu.com> SunOS streams modules
- 48. [52]Jack Sasportas <jack@innovativeinternet.com> Saved a Lot of space on the stuff in the html/pic/ subdirectory
- 49. [53]Ray Schnitzler <schnitz@unipress.com> Unixware1 port
- 50. [54]Michael Shields <shields@tembel.org> USNO clock driver
- 51. [55]Jeff Steinman <jss@pebbles.jpl.nasa.gov> Datum PTS clock driver
- 52. [56]Harlan Stenn <harlan@pfcs.com> GNU automake/autoconfigure makeover, various other bits (see the ChangeLog)
- 53. [57]Kenneth Stone <ken@sdd.hp.com> HP-UX port
- 54. [58]Ajit Thyagarajan <ajit@ee.udel.edu>IP multicast/anycast support
- 55. [59]Tomoaki TSURUOKA <tsuruoka@nc.fukuoka-u.ac.jp>TRAK clock driver
- 56. [60]Brian Utterback <brian.utterback@oracle.com> General codebase, Solaris issues
- 57. [61]Loganaden Velvindron <loganaden@gmail.com> Sandboxing (libseccomp) support
- 58. [62]Paul A Vixie <vixie@vix.com> TrueTime GPS driver, generic TrueTime clock driver
- 59. [63]Ulrich Windl <Ulrich.Windl@rz.uni-regensburg.de> corrected and validated HTML documents according to the HTML DTD

References

- 1. mailto:%20takao_abe@xurb.jp
- 2. mailto:%20mark_andrews@isc.org
- 3. <mailto:%20altmeier@atlsoft.de>
- 4. <mailto:%20vbais@mailman1.intel.co>
- 5. <mailto:%20kirkwood@striderfm.intel.com>
- 6. <mailto:%20michael.barone@lmco.com>
- 7. <mailto:%20karl@owl.HQ.ileaf.com>
- 8. <mailto:%20greg.brackley@bigfoot.com>
- 9. <mailto:%20Marc.Brett@westgeo.com>
- 10. <mailto:%20Piete.Brooks@cl.cam.ac.uk>
- 11. <mailto:%20nelson@bolyard.me>
- 12. <mailto:%20Jean-Francois.Boudreault@viagenie.qc.ca>
- 13. <mailto:%20reg@dwf.com>
- 14. <mailto:%20clift@ml.csiro.au>
- 15. <mailto:%20casey@csc.co.za>

16. mailto:%20Sven_Dietrich@trimble.COM
17. <mailto:%20dundas@salt.jpl.nasa.gov>
18. <mailto:%20duwe@immd4.informatik.uni-erlangen.de>
19. <mailto:%20dennis@mrbill.canet.ca>
20. <mailto:%20jhay@icomtek.csir.co.za>
21. <mailto:%20davehart@davehart.com>
22. <mailto:%20neoclock4x@linum.com>
23. <mailto:%20glenn@herald.usask.ca>
24. <mailto:%20iglesias@uci.edu>
25. <mailto:%20jagubox.gsfc.nasa.gov>
26. <mailto:%20jbj@chatham.usdesign.com>
27. <mailto:%20Hans.Lambermont@nl.origin-it.com>
28. <mailto:H.Lambermont@chello.nl>
29. <mailto:%20phk@FreeBSD.ORG>
30. <http://www4.informatik.uni-erlangen.de/~kardel>
31. <mailto:%20kardel%20%28at%29%20ntp%20%28dot%29%20org>
32. <mailto:kuehn@ntp.org>
33. <mailto:%20jones@hermes.chpc.utexas.edu>
34. <mailto:%20dkatz@cisco.com>
35. <mailto:%20leres@ee.lbl.gov>
36. <mailto:%20lindholm@ucs.ubc.ca>
37. <mailto:%20louie@ni.umd.edu>
38. <mailto:%20thorinn@diku.dk>
39. <mailto:%20mayer@ntp.org>
40. <mailto:%20mills@udel.edu>
41. <mailto:%20moeller@gwdgv1.dnet.gwdg.de>
42. <mailto:%20mogul@pa.dec.com>
43. <mailto:%20tmoore@fivel.daytonoh.ncr.com>
44. <mailto:%20kamal@whence.com>
45. <mailto:%20derek@toybox.demon.co.uk>
46. <mailto:%20d@hd.org>
47. <mailto:%20neal@ntp.org>
48. <mailto:%20Rainer.Pruy@informatik.uni-erlangen.de>
49. <mailto:%20dirce@zk3.dec.com>
50. <mailto:%20wsanchez@apple.com>
51. <mailto:%20mrapple@quack.kfu.com>
52. <mailto:%20jack@innovativeinternet.com>
53. <mailto:%20schnitz@unipress.com>

- 54. <mailto:%20shields@tembel.org>
- 55. <mailto:%20pebbles.jpl.nasa.gov>
- 56. <mailto:%20harlan@pfcs.com>
- 57. <mailto:%20ken@sdd.hp.com>
- 58. <mailto:%20ajit@ee.udel.edu>
- 59. <mailto:%20tsuruoka@nc.fukuoka-u.ac.jp>
- 60. <mailto:%20brian.utterback@oracle.com>
- 61. <mailto:%20loganaden@gmail.com>
- 62. <mailto:%20vixie@vix.com>
- 63. <mailto:%20Ulrich.Windl@rz.uni-regensburg.de>

BSP - pciutils:

GNU GENERAL PUBLIC LICENSE

Version 2, June 1991

Copyright (C) 1989, 1991 Free Software Foundation, Inc.,
51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA

Everyone is permitted to copy and distribute verbatim copies
of this license document, but changing it is not allowed.

Preamble

The licenses for most software are designed to take away your
freedom to share and change it. By contrast, the GNU General Public
License is intended to guarantee your freedom to share and change free
software—to make sure the software is free for all its users. This
General Public License applies to most of the Free Software
Foundation's software and to any other program whose authors commit to
using it. (Some other Free Software Foundation software is covered by
the GNU Lesser General Public License instead.) You can apply it to
your programs, too.

When we speak of free software, we are referring to freedom, not
price. Our General Public Licenses are designed to make sure that you
have the freedom to distribute copies of free software (and charge for
this service if you wish), that you receive source code or can get it
if you want it, that you can change the software or use pieces of it
in new free programs; and that you know you can do these things.

To protect your rights, we need to make restrictions that forbid
anyone to deny you these rights or to ask you to surrender the rights.

These restrictions translate to certain responsibilities for you if you
distribute copies of the software, or if you modify it.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must give the recipients all the rights that you have. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

We protect your rights with two steps: (1) copyright the software, and (2) offer you this license which gives you legal permission to copy, distribute and/or modify the software.

Also, for each author's protection and ours, we want to make certain that everyone understands that there is no warranty for this free software. If the software is modified by someone else and passed on, we want its recipients to know that what they have is not the original, so that any problems introduced by others will not reflect on the original authors' reputations.

Finally, any free program is threatened constantly by software patents. We wish to avoid the danger that redistributors of a free program will individually obtain patent licenses, in effect making the program proprietary. To prevent this, we have made it clear that any patent must be licensed for everyone's free use or not licensed at all. The precise terms and conditions for copying, distribution and modification follow.

GNU GENERAL PUBLIC LICENSE

TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

0. This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License. The "Program", below, refers to any such program or work, and a "work based on the Program" means either the Program or any derivative work under copyright law: that is to say, a work containing the Program or a portion of it, either verbatim or with modifications and/or translated into another language. (Hereinafter, translation is included without limitation in the term "modification".) Each licensee is addressed as "you". Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running the Program is not restricted, and the output from the Program is covered only if its contents constitute a work based on the Program (independent of having been made by running the Program). Whether that is true depends on what the Program does.

1. You may copy and distribute verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and give any other recipients of the Program a copy of this License along with the Program.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Program or any portion of it, thus forming a work based on the Program, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:

a) You must cause the modified files to carry prominent notices stating that you changed the files and the date of any change.

b) You must cause any work that you distribute or publish, that in whole or in part contains or is derived from the Program or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this License.

c) If the modified program normally reads commands interactively when run, you must cause it, when started running for such interactive use in the most ordinary way, to print or display an announcement including an appropriate copyright notice and a notice that there is no warranty (or else, saying that you provide a warranty) and that users may redistribute the program under these conditions, and telling the user how to view a copy of this License. (Exception: if the Program itself is interactive but does not normally print such an announcement, your work based on the Program is not required to print an announcement.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Program, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Program, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Program.

In addition, mere aggregation of another work not based on the Program with the Program (or with a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you also do one of the following:

- a) Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
- b) Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code, to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
- c) Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is allowed only for noncommercial distribution and only if you received the program in object code or executable form with such an offer, in accord with Subsection b above.)

The source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the executable. However, as a special exception, the source code distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

If distribution of executable or object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place counts as

distribution of the source code, even though third parties are not compelled to copy the source along with the object code.

4. You may not copy, modify, sublicense, or distribute the Program except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense or distribute the Program is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.

5. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Program or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Program (or any work based on the Program), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Program or works based on it.

6. Each time you redistribute the Program (or any work based on the Program), the recipient automatically receives a license from the original licensor to copy, distribute or modify the Program subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties to this License.

7. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Program at all. For example, if a patent license would not permit royalty-free redistribution of the Program by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Program.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to

apply and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system, which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

8. If the distribution and/or use of the Program is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Program under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.

9. The Free Software Foundation may publish revised and/or new versions of the General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Program specifies a version number of this License which applies to it and “any later version”, you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of this License, you may choose any version ever published by the Free Software Foundation.

10. If you wish to incorporate parts of the Program into other free programs whose distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and

of promoting the sharing and reuse of software generally.

NO WARRANTY

11. BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM “AS IS” WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

12. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

END OF TERMS AND CONDITIONS

How to Apply These Terms to Your New Programs

If you develop a new program, and you want it to be of the greatest possible use to the public, the best way to achieve this is to make it free software which everyone can redistribute and change under these terms.

To do so, attach the following notices to the program. It is safest to attach them to the start of each source file to most effectively convey the exclusion of warranty; and each file should have at least the “copyright” line and a pointer to where the full notice is found.

<one line to give the program’s name and a brief idea of what it does.>

Copyright (C) <year> <name of author>

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the

GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA.

Also add information on how to contact you by electronic and paper mail.

If the program is interactive, make it output a short notice like this when it starts in an interactive mode:

Gnomovision version 69, Copyright (C) year name of author

Gnomovision comes with ABSOLUTELY NO WARRANTY; for details type `show w'.

This is free software, and you are welcome to redistribute it under certain conditions; type `show c' for details.

The hypothetical commands `show w' and `show c' should show the appropriate parts of the General Public License. Of course, the commands you use may be called something other than `show w' and `show c'; they could even be mouse-clicks or menu items—whatever suits your program.

You should also get your employer (if you work as a programmer) or your school, if any, to sign a “copyright disclaimer” for the program, if necessary. Here is a sample; alter the names:

Yoyodyne, Inc., hereby disclaims all copyright interest in the program

`Gnomovision' (which makes passes at compilers) written by James Hacker.

<signature of Ty Coon>, 1 April 1989

Ty Coon, President of Vice

This General Public License does not permit incorporating your program into proprietary programs. If your program is a subroutine library, you may consider it more useful to permit linking proprietary applications with the library. If this is what you want to do, use the GNU Lesser General Public License instead of this License.

BSP - strace:

Copyright (c) 1991, 1992 Paul Kranenburg <pk@cs.few.eur.nl>

Copyright (c) 1993 Branko Lankester <branko@hacktic.nl>

Copyright (c) 1993 Ulrich Pegelow <pegelow@moorea.uni-muenster.de>

Copyright (c) 1995, 1996 Michael Elizabeth Chastain <mec@duracef.shout.net>

Copyright (c) 1993, 1994, 1995, 1996 Rick Sladkey <jrs@world.std.com>

Copyright (c) 1998-2001 Wichert Akkerman <wakkerma@deephackmode.org>

Copyright (c) 2001-2019 The strace developers.

All rights reserved.

strace is free software; you can redistribute it and/or modify it

under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2.1 of the License, or (at your option) any later version.

strace is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See LGPL-2.1-or-later for more details. strace test suite is provided under the terms of the GNU General Public License version 2 or later, see tests/COPYING for more details.

BSP - uboot:

GNU GENERAL PUBLIC LICENSE

Version 2, June 1991

Copyright (C) 1989, 1991 Free Software Foundation, Inc.,
51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA

Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change free software—to make sure the software is free for all its users. This General Public License applies to most of the Free Software Foundation's software and to any other program whose authors commit to using it. (Some other Free Software Foundation software is covered by the GNU Lesser General Public License instead.) You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs; and that you know you can do these things.

To protect your rights, we need to make restrictions that forbid anyone to deny you these rights or to ask you to surrender the rights. These restrictions translate to certain responsibilities for you if you distribute copies of the software, or if you modify it.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must give the recipients all the rights that

you have. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

We protect your rights with two steps: (1) copyright the software, and (2) offer you this license which gives you legal permission to copy, distribute and/or modify the software.

Also, for each author's protection and ours, we want to make certain that everyone understands that there is no warranty for this free software. If the software is modified by someone else and passed on, we want its recipients to know that what they have is not the original, so that any problems introduced by others will not reflect on the original authors' reputations.

Finally, any free program is threatened constantly by software patents. We wish to avoid the danger that redistributors of a free program will individually obtain patent licenses, in effect making the program proprietary. To prevent this, we have made it clear that any patent must be licensed for everyone's free use or not licensed at all. The precise terms and conditions for copying, distribution and modification follow.

GNU GENERAL PUBLIC LICENSE

TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

0. This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License. The "Program", below, refers to any such program or work, and a "work based on the Program" means either the Program or any derivative work under copyright law: that is to say, a work containing the Program or a portion of it, either verbatim or with modifications and/or translated into another language. (Hereinafter, translation is included without limitation in the term "modification".) Each licensee is addressed as "you". Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running the Program is not restricted, and the output from the Program is covered only if its contents constitute a work based on the Program (independent of having been made by running the Program). Whether that is true depends on what the Program does.

1. You may copy and distribute verbatim copies of the Program's source code as you receive it, in any medium, provided that you

conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and give any other recipients of the Program a copy of this License along with the Program.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Program or any portion of it, thus forming a work based on the Program, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:

a) You must cause the modified files to carry prominent notices stating that you changed the files and the date of any change.

b) You must cause any work that you distribute or publish, that in whole or in part contains or is derived from the Program or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this License.

c) If the modified program normally reads commands interactively when run, you must cause it, when started running for such interactive use in the most ordinary way, to print or display an announcement including an appropriate copyright notice and a notice that there is no warranty (or else, saying that you provide a warranty) and that users may redistribute the program under these conditions, and telling the user how to view a copy of this License. (Exception: if the Program itself is interactive but does not normally print such an announcement, your work based on the Program is not required to print an announcement.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Program, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Program, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it. Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to

exercise the right to control the distribution of derivative or collective works based on the Program.

In addition, mere aggregation of another work not based on the Program with the Program (or with a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you also do one of the following:

- a) Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
- b) Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code, to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
- c) Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is allowed only for noncommercial distribution and only if you received the program in object code or executable form with such an offer, in accord with Subsection b above.)

The source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the executable. However, as a special exception, the source code distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

If distribution of executable or object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place counts as distribution of the source code, even though third parties are not compelled to copy the source along with the object code.

4. You may not copy, modify, sublicense, or distribute the Program except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense or distribute the Program is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.

5. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Program or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Program (or any work based on the Program), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Program or works based on it.

6. Each time you redistribute the Program (or any work based on the Program), the recipient automatically receives a license from the original licensor to copy, distribute or modify the Program subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties to this License.

7. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Program at all. For example, if a patent license would not permit royalty-free redistribution of the Program by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Program.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system, which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

8. If the distribution and/or use of the Program is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Program under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.

9. The Free Software Foundation may publish revised and/or new versions of the General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Program specifies a version number of this License which applies to it and “any later version”, you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of this License, you may choose any version ever published by the Free Software Foundation.

10. If you wish to incorporate parts of the Program into other free programs whose distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

NO WARRANTY

11. BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

12. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

END OF TERMS AND CONDITIONS

How to Apply These Terms to Your New Programs

If you develop a new program, and you want it to be of the greatest possible use to the public, the best way to achieve this is to make it free software which everyone can redistribute and change under these terms.

To do so, attach the following notices to the program. It is safest to attach them to the start of each source file to most effectively convey the exclusion of warranty; and each file should have at least the "copyright" line and a pointer to where the full notice is found.

<one line to give the program's name and a brief idea of what it does.>

Copyright (C) <year> <name of author>

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along

with this program; if not, write to the Free Software Foundation, Inc.,

51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA.

Also add information on how to contact you by electronic and paper mail.

If the program is interactive, make it output a short notice like this

when it starts in an interactive mode:

Gnomovision version 69, Copyright (C) year name of author

Gnomovision comes with ABSOLUTELY NO WARRANTY; for details type `show w'.

This is free software, and you are welcome to redistribute it

under certain conditions; type `show c' for details.

The hypothetical commands `show w' and `show c' should show the appropriate parts of the General Public License. Of course, the commands you use may be called something other than `show w' and `show c'; they could even be mouse-clicks or menu items—whatever suits your program.

You should also get your employer (if you work as a programmer) or your school, if any, to sign a “copyright disclaimer” for the program, if necessary. Here is a sample; alter the names:

Yoyodyne, Inc., hereby disclaims all copyright interest in the program

`Gnomovision' (which makes passes at compilers) written by James Hacker.

<signature of Ty Coon>, 1 April 1989

Ty Coon, President of Vice

This General Public License does not permit incorporating your program into proprietary programs. If your program is a subroutine library, you may consider it more useful to permit linking proprietary applications with the library. If this is what you want to do, use the GNU Lesser General Public License instead of this License.

BSP - uboot-tools:

GNU GENERAL PUBLIC LICENSE

Version 2, June 1991

Copyright (C) 1989, 1991 Free Software Foundation, Inc.,

51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA

Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change free software—to make sure the software is free for all its users. This

General Public License applies to most of the Free Software Foundation's software and to any other program whose authors commit to using it. (Some other Free Software Foundation software is covered by the GNU Lesser General Public License instead.) You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs; and that you know you can do these things. To protect your rights, we need to make restrictions that forbid anyone to deny you these rights or to ask you to surrender the rights. These restrictions translate to certain responsibilities for you if you distribute copies of the software, or if you modify it.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must give the recipients all the rights that you have. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

We protect your rights with two steps: (1) copyright the software, and (2) offer you this license which gives you legal permission to copy, distribute and/or modify the software.

Also, for each author's protection and ours, we want to make certain that everyone understands that there is no warranty for this free software. If the software is modified by someone else and passed on, we want its recipients to know that what they have is not the original, so that any problems introduced by others will not reflect on the original authors' reputations.

Finally, any free program is threatened constantly by software patents. We wish to avoid the danger that redistributors of a free program will individually obtain patent licenses, in effect making the program proprietary. To prevent this, we have made it clear that any patent must be licensed for everyone's free use or not licensed at all. The precise terms and conditions for copying, distribution and modification follow.

GNU GENERAL PUBLIC LICENSE

TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

0. This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License. The “Program”, below, refers to any such program or work, and a “work based on the Program” means either the Program or any derivative work under copyright law: that is to say, a work containing the Program or a portion of it, either verbatim or with modifications and/or translated into another language. (Hereinafter, translation is included without limitation in the term “modification”.) Each licensee is addressed as “you”. Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running the Program is not restricted, and the output from the Program is covered only if its contents constitute a work based on the Program (independent of having been made by running the Program). Whether that is true depends on what the Program does.

1. You may copy and distribute verbatim copies of the Program’s source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and give any other recipients of the Program a copy of this License along with the Program.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Program or any portion of it, thus forming a work based on the Program, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:

- a) You must cause the modified files to carry prominent notices stating that you changed the files and the date of any change.
- b) You must cause any work that you distribute or publish, that in whole or in part contains or is derived from the Program or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this License.
- c) If the modified program normally reads commands interactively when run, you must cause it, when started running for such interactive use in the most ordinary way, to print or display an announcement including an appropriate copyright notice and a

notice that there is no warranty (or else, saying that you provide a warranty) and that users may redistribute the program under these conditions, and telling the user how to view a copy of this License. (Exception: if the Program itself is interactive but does not normally print such an announcement, your work based on the Program is not required to print an announcement.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Program, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Program, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it. Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Program.

In addition, mere aggregation of another work not based on the Program with the Program (or with a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you also do one of the following:

- a) Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
- b) Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code, to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
- c) Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is allowed only for noncommercial distribution and only if you

received the program in object code or executable form with such an offer, in accord with Subsection b above.)

The source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the executable. However, as a special exception, the source code distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

If distribution of executable or object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place counts as distribution of the source code, even though third parties are not compelled to copy the source along with the object code.

4. You may not copy, modify, sublicense, or distribute the Program except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense or distribute the Program is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.

5. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Program or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Program (or any work based on the Program), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Program or works based on it.

6. Each time you redistribute the Program (or any work based on the Program), the recipient automatically receives a license from the original licensor to copy, distribute or modify the Program subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties to

this License.

7. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Program at all. For example, if a patent license would not permit royalty-free redistribution of the Program by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Program.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system, which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

8. If the distribution and/or use of the Program is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Program under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.

9. The Free Software Foundation may publish revised and/or new versions of the General Public License from time to time. Such new versions will

be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Program specifies a version number of this License which applies to it and “any later version”, you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of this License, you may choose any version ever published by the Free Software Foundation.

10. If you wish to incorporate parts of the Program into other free programs whose distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

NO WARRANTY

11. BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM “AS IS” WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

12. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

END OF TERMS AND CONDITIONS

How to Apply These Terms to Your New Programs

If you develop a new program, and you want it to be of the greatest

possible use to the public, the best way to achieve this is to make it free software which everyone can redistribute and change under these terms.

To do so, attach the following notices to the program. It is safest to attach them to the start of each source file to most effectively convey the exclusion of warranty; and each file should have at least the “copyright” line and a pointer to where the full notice is found.

<one line to give the program’s name and a brief idea of what it does.>

Copyright (C) <year> <name of author>

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA.

Also add information on how to contact you by electronic and paper mail.

If the program is interactive, make it output a short notice like this when it starts in an interactive mode:

Gnomovision version 69, Copyright (C) year name of author

Gnomovision comes with ABSOLUTELY NO WARRANTY; for details type `show w’.

This is free software, and you are welcome to redistribute it under certain conditions; type `show c’ for details.

The hypothetical commands `show w’ and `show c’ should show the appropriate parts of the General Public License. Of course, the commands you use may be called something other than `show w’ and `show c’; they could even be mouse-clicks or menu items—whatever suits your program.

You should also get your employer (if you work as a programmer) or your school, if any, to sign a “copyright disclaimer” for the program, if necessary. Here is a sample; alter the names:

Yoyodyne, Inc., hereby disclaims all copyright interest in the program

`Gnomovision’ (which makes passes at compilers) written by James Hacker.

<signature of Ty Coon>, 1 April 1989

Ty Coon, President of Vice

This General Public License does not permit incorporating your program into

proprietary programs. If your program is a subroutine library, you may consider it more useful to permit linking proprietary applications with the library. If this is what you want to do, use the GNU Lesser General Public License instead of this License.

BSP - xz-embedded:

Licensing of XZ Embedded

=====

All the files in this package have been written by Lasse Collin and/or Igor Pavlov. All these files have been put into the public domain. You can do whatever you want with these files. As usual, this software is provided “as is”, without any warranty.

FRR - c-ares:

c-ares license

Copyright (c) 2007 - 2018, Daniel Stenberg with many contributors, see AUTHORS file.

Copyright 1998 by the Massachusetts Institute of Technology.

Permission to use, copy, modify, and distribute this software and its documentation for any purpose and without fee is hereby granted, provided that the above copyright notice appear in all copies and that both that copyright notice and this permission notice appear in supporting documentation, and that the name of M.I.T. not be used in advertising or publicity pertaining to distribution of the software without specific, written prior permission.

M.I.T. makes no representations about the suitability of this software for any purpose. It is provided “as is” without express or implied warranty.

FRR - frr:

GNU GENERAL PUBLIC LICENSE

Version 2, June 1991

Copyright (C) 1989, 1991 Free Software Foundation, Inc.,
51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA

Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change free

software—to make sure the software is free for all its users. This General Public License applies to most of the Free Software Foundation’s software and to any other program whose authors commit to using it. (Some other Free Software Foundation software is covered by the GNU Lesser General Public License instead.) You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs; and that you know you can do these things. To protect your rights, we need to make restrictions that forbid anyone to deny you these rights or to ask you to surrender the rights. These restrictions translate to certain responsibilities for you if you distribute copies of the software, or if you modify it.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must give the recipients all the rights that you have. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

We protect your rights with two steps: (1) copyright the software, and (2) offer you this license which gives you legal permission to copy, distribute and/or modify the software.

Also, for each author’s protection and ours, we want to make certain that everyone understands that there is no warranty for this free software. If the software is modified by someone else and passed on, we want its recipients to know that what they have is not the original, so that any problems introduced by others will not reflect on the original authors’ reputations.

Finally, any free program is threatened constantly by software patents. We wish to avoid the danger that redistributors of a free program will individually obtain patent licenses, in effect making the program proprietary. To prevent this, we have made it clear that any patent must be licensed for everyone’s free use or not licensed at all. The precise terms and conditions for copying, distribution and modification follow.

GNU GENERAL PUBLIC LICENSE

TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

0. This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License. The “Program”, below, refers to any such program or work, and a “work based on the Program” means either the Program or any derivative work under copyright law: that is to say, a work containing the Program or a portion of it, either verbatim or with modifications and/or translated into another language. (Hereinafter, translation is included without limitation in the term “modification”.) Each licensee is addressed as “you”. Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running the Program is not restricted, and the output from the Program is covered only if its contents constitute a work based on the Program (independent of having been made by running the Program). Whether that is true depends on what the Program does.

1. You may copy and distribute verbatim copies of the Program’s source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and give any other recipients of the Program a copy of this License along with the Program.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Program or any portion of it, thus forming a work based on the Program, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:

- a) You must cause the modified files to carry prominent notices stating that you changed the files and the date of any change.
- b) You must cause any work that you distribute or publish, that in whole or in part contains or is derived from the Program or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this License.
- c) If the modified program normally reads commands interactively when run, you must cause it, when started running for such interactive use in the most ordinary way, to print or display an

announcement including an appropriate copyright notice and a notice that there is no warranty (or else, saying that you provide a warranty) and that users may redistribute the program under these conditions, and telling the user how to view a copy of this License. (Exception: if the Program itself is interactive but does not normally print such an announcement, your work based on the Program is not required to print an announcement.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Program, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Program, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it. Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Program.

In addition, mere aggregation of another work not based on the Program with the Program (or with a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you also do one of the following:

- a) Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
- b) Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code, to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
- c) Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is

allowed only for noncommercial distribution and only if you received the program in object code or executable form with such an offer, in accord with Subsection b above.)

The source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the executable. However, as a special exception, the source code distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

If distribution of executable or object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place counts as distribution of the source code, even though third parties are not compelled to copy the source along with the object code.

4. You may not copy, modify, sublicense, or distribute the Program except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense or distribute the Program is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.

5. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Program or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Program (or any work based on the Program), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Program or works based on it.

6. Each time you redistribute the Program (or any work based on the Program), the recipient automatically receives a license from the original licensor to copy, distribute or modify the Program subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein.

You are not responsible for enforcing compliance by third parties to this License.

7. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Program at all. For example, if a patent license would not permit royalty-free redistribution of the Program by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Program.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system, which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

8. If the distribution and/or use of the Program is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Program under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.

9. The Free Software Foundation may publish revised and/or new versions

of the General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Program specifies a version number of this License which applies to it and “any later version”, you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of this License, you may choose any version ever published by the Free Software Foundation.

10. If you wish to incorporate parts of the Program into other free programs whose distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

NO WARRANTY

11. BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM “AS IS” WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

12. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

END OF TERMS AND CONDITIONS

How to Apply These Terms to Your New Programs

If you develop a new program, and you want it to be of the greatest possible use to the public, the best way to achieve this is to make it free software which everyone can redistribute and change under these terms.

To do so, attach the following notices to the program. It is safest to attach them to the start of each source file to most effectively convey the exclusion of warranty; and each file should have at least the “copyright” line and a pointer to where the full notice is found.
<one line to give the program’s name and a brief idea of what it does.>

Copyright (C) <year> <name of author>

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA.

Also add information on how to contact you by electronic and paper mail.

If the program is interactive, make it output a short notice like this when it starts in an interactive mode:

Gnomovision version 69, Copyright (C) year name of author

Gnomovision comes with ABSOLUTELY NO WARRANTY; for details type `show w`.

This is free software, and you are welcome to redistribute it under certain conditions; type `show c` for details.

The hypothetical commands `show w` and `show c` should show the appropriate parts of the General Public License. Of course, the commands you use may be called something other than `show w` and `show c`; they could even be mouse-clicks or menu items—whatever suits your program.

You should also get your employer (if you work as a programmer) or your school, if any, to sign a “copyright disclaimer” for the program, if necessary. Here is a sample; alter the names:

Yoyodyne, Inc., hereby disclaims all copyright interest in the program

`Gnomovision' (which makes passes at compilers) written by James Hacker.

<signature of Ty Coon>, 1 April 1989

Ty Coon, President of Vice

This General Public License does not permit incorporating your program into proprietary programs. If your program is a subroutine library, you may consider it more useful to permit linking proprietary applications with the library. If this is what you want to do, use the GNU Lesser General Public License instead of this License.

FRR - json-c:

Copyright (c) 2009-2012 Eric Haszlakiewicz

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

Copyright (c) 2004, 2005 Metaparadigm Pte Ltd

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM,

OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

Toolchain - glibc:

GNU GENERAL PUBLIC LICENSE

Version 2, June 1991

Copyright (C) 1989, 1991 Free Software Foundation, Inc.,
51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA

Everyone is permitted to copy and distribute verbatim copies
of this license document, but changing it is not allowed.

Preamble

The licenses for most software are designed to take away your
freedom to share and change it. By contrast, the GNU General Public
License is intended to guarantee your freedom to share and change free
software—to make sure the software is free for all its users. This
General Public License applies to most of the Free Software
Foundation's software and to any other program whose authors commit to
using it. (Some other Free Software Foundation software is covered by
the GNU Lesser General Public License instead.) You can apply it to
your programs, too.

When we speak of free software, we are referring to freedom, not
price. Our General Public Licenses are designed to make sure that you
have the freedom to distribute copies of free software (and charge for
this service if you wish), that you receive source code or can get it
if you want it, that you can change the software or use pieces of it
in new free programs; and that you know you can do these things.

To protect your rights, we need to make restrictions that forbid
anyone to deny you these rights or to ask you to surrender the rights.

These restrictions translate to certain responsibilities for you if you
distribute copies of the software, or if you modify it.

For example, if you distribute copies of such a program, whether
gratis or for a fee, you must give the recipients all the rights that
you have. You must make sure that they, too, receive or can get the
source code. And you must show them these terms so they know their
rights.

We protect your rights with two steps: (1) copyright the software, and
(2) offer you this license which gives you legal permission to copy,
distribute and/or modify the software.

Also, for each author's protection and ours, we want to make certain that everyone understands that there is no warranty for this free software. If the software is modified by someone else and passed on, we want its recipients to know that what they have is not the original, so that any problems introduced by others will not reflect on the original authors' reputations.

Finally, any free program is threatened constantly by software patents. We wish to avoid the danger that redistributors of a free program will individually obtain patent licenses, in effect making the program proprietary. To prevent this, we have made it clear that any patent must be licensed for everyone's free use or not licensed at all. The precise terms and conditions for copying, distribution and modification follow.

GNU GENERAL PUBLIC LICENSE

TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

0. This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License. The "Program", below, refers to any such program or work, and a "work based on the Program" means either the Program or any derivative work under copyright law: that is to say, a work containing the Program or a portion of it, either verbatim or with modifications and/or translated into another language. (Hereinafter, translation is included without limitation in the term "modification".) Each licensee is addressed as "you". Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running the Program is not restricted, and the output from the Program is covered only if its contents constitute a work based on the Program (independent of having been made by running the Program). Whether that is true depends on what the Program does.

1. You may copy and distribute verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and give any other recipients of the Program a copy of this License along with the Program.

You may charge a fee for the physical act of transferring a copy, and

you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Program or any portion of it, thus forming a work based on the Program, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:

a) You must cause the modified files to carry prominent notices stating that you changed the files and the date of any change.

b) You must cause any work that you distribute or publish, that in whole or in part contains or is derived from the Program or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this License.

c) If the modified program normally reads commands interactively when run, you must cause it, when started running for such interactive use in the most ordinary way, to print or display an announcement including an appropriate copyright notice and a notice that there is no warranty (or else, saying that you provide a warranty) and that users may redistribute the program under these conditions, and telling the user how to view a copy of this License. (Exception: if the Program itself is interactive but does not normally print such an announcement, your work based on the Program is not required to print an announcement.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Program, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Program, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it. Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Program.

In addition, mere aggregation of another work not based on the Program with the Program (or with a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you also do one of the following:

- a) Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
- b) Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code, to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
- c) Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is allowed only for noncommercial distribution and only if you received the program in object code or executable form with such an offer, in accord with Subsection b above.)

The source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the executable. However, as a special exception, the source code distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

If distribution of executable or object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place counts as distribution of the source code, even though third parties are not compelled to copy the source along with the object code.

4. You may not copy, modify, sublicense, or distribute the Program except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense or distribute the Program is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such

parties remain in full compliance.

5. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Program or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Program (or any work based on the Program), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Program or works based on it.

6. Each time you redistribute the Program (or any work based on the Program), the recipient automatically receives a license from the original licensor to copy, distribute or modify the Program subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties to this License.

7. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Program at all. For example, if a patent license would not permit royalty-free redistribution of the Program by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Program.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system, which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed

through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

8. If the distribution and/or use of the Program is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Program under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.

9. The Free Software Foundation may publish revised and/or new versions of the General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Program specifies a version number of this License which applies to it and “any later version”, you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of this License, you may choose any version ever published by the Free Software Foundation.

10. If you wish to incorporate parts of the Program into other free programs whose distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

NO WARRANTY

11. BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM “AS IS” WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS

TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

12. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

END OF TERMS AND CONDITIONS

How to Apply These Terms to Your New Programs

If you develop a new program, and you want it to be of the greatest possible use to the public, the best way to achieve this is to make it free software which everyone can redistribute and change under these terms.

To do so, attach the following notices to the program. It is safest to attach them to the start of each source file to most effectively convey the exclusion of warranty; and each file should have at least the “copyright” line and a pointer to where the full notice is found.
<one line to give the program’s name and a brief idea of what it does.>

Copyright (C) <year> <name of author>

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA.

Also add information on how to contact you by electronic and paper mail.

If the program is interactive, make it output a short notice like this when it starts in an interactive mode:

Gnomovision version 69, Copyright (C) year name of author

Gnomovision comes with ABSOLUTELY NO WARRANTY; for details type `show w'.

This is free software, and you are welcome to redistribute it under certain conditions; type `show c' for details.

The hypothetical commands `show w' and `show c' should show the appropriate parts of the General Public License. Of course, the commands you use may be called something other than `show w' and `show c'; they could even be mouse-clicks or menu items—whatever suits your program.

You should also get your employer (if you work as a programmer) or your school, if any, to sign a “copyright disclaimer” for the program, if necessary. Here is a sample; alter the names:

Yoyodyne, Inc., hereby disclaims all copyright interest in the program
`Gnomovision' (which makes passes at compilers) written by James Hacker.

<signature of Ty Coon>, 1 April 1989

Ty Coon, President of Vice

This General Public License does not permit incorporating your program into proprietary programs. If your program is a subroutine library, you may consider it more useful to permit linking proprietary applications with the library. If this is what you want to do, use the GNU Lesser General Public License instead of this License.

Toolchain - libstdc++:

GNU GENERAL PUBLIC LICENSE

Version 3, 29 June 2007

Copyright (C) 2007 Free Software Foundation, Inc. <<http://fsf.org/>>

Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

Preamble

The GNU General Public License is a free, copyleft license for software and other kinds of works.

The licenses for most software and other practical works are designed to take away your freedom to share and change the works. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change all versions of a program—to make sure it remains free software for all its users. We, the Free Software Foundation, use the GNU General Public License for most of our software; it applies also to any other work released this way by its authors. You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not

price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for them if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs, and that you know you can do these things.

To protect your rights, we need to prevent others from denying you these rights or asking you to surrender the rights. Therefore, you have certain responsibilities if you distribute copies of the software, or if you modify it: responsibilities to respect the freedom of others.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must pass on to the recipients the same freedoms that you received. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

Developers that use the GNU GPL protect your rights with two steps:

(1) assert copyright on the software, and (2) offer you this License giving you legal permission to copy, distribute and/or modify it.

For the developers' and authors' protection, the GPL clearly explains that there is no warranty for this free software. For both users' and authors' sake, the GPL requires that modified versions be marked as changed, so that their problems will not be attributed erroneously to authors of previous versions.

Some devices are designed to deny users access to install or run modified versions of the software inside them, although the manufacturer can do so. This is fundamentally incompatible with the aim of protecting users' freedom to change the software. The systematic pattern of such abuse occurs in the area of products for individuals to use, which is precisely where it is most unacceptable. Therefore, we have designed this version of the GPL to prohibit the practice for those products. If such problems arise substantially in other domains, we stand ready to extend this provision to those domains in future versions of the GPL, as needed to protect the freedom of users.

Finally, every program is threatened constantly by software patents.

States should not allow patents to restrict development and use of software on general-purpose computers, but in those that do, we wish to avoid the special danger that patents applied to a free program could make it effectively proprietary. To prevent this, the GPL assures that patents cannot be used to render the program non-free.

The precise terms and conditions for copying, distribution and modification follow.

TERMS AND CONDITIONS

0. Definitions.

“This License” refers to version 3 of the GNU General Public License.

“Copyright” also means copyright-like laws that apply to other kinds of works, such as semiconductor masks.

“The Program” refers to any copyrightable work licensed under this License. Each licensee is addressed as “you”. “Licensees” and “recipients” may be individuals or organizations.

To “modify” a work means to copy from or adapt all or part of the work in a fashion requiring copyright permission, other than the making of an exact copy. The resulting work is called a “modified version” of the earlier work or a work “based on” the earlier work.

A “covered work” means either the unmodified Program or a work based on the Program.

To “propagate” a work means to do anything with it that, without permission, would make you directly or secondarily liable for infringement under applicable copyright law, except executing it on a computer or modifying a private copy. Propagation includes copying, distribution (with or without modification), making available to the public, and in some countries other activities as well.

To “convey” a work means any kind of propagation that enables other parties to make or receive copies. Mere interaction with a user through a computer network, with no transfer of a copy, is not conveying.

An interactive user interface displays “Appropriate Legal Notices” to the extent that it includes a convenient and prominently visible feature that (1) displays an appropriate copyright notice, and (2) tells the user that there is no warranty for the work (except to the extent that warranties are provided), that licensees may convey the work under this License, and how to view a copy of this License. If the interface presents a list of user commands or options, such as a menu, a prominent item in the list meets this criterion.

1. Source Code.

The “source code” for a work means the preferred form of the work for making modifications to it. “Object code” means any non-source form of a work.

A “Standard Interface” means an interface that either is an official

standard defined by a recognized standards body, or, in the case of interfaces specified for a particular programming language, one that is widely used among developers working in that language.

The “System Libraries” of an executable work include anything, other than the work as a whole, that (a) is included in the normal form of packaging a Major Component, but which is not part of that Major Component, and (b) serves only to enable use of the work with that Major Component, or to implement a Standard Interface for which an implementation is available to the public in source code form. A “Major Component”, in this context, means a major essential component (kernel, window system, and so on) of the specific operating system (if any) on which the executable work runs, or a compiler used to produce the work, or an object code interpreter used to run it.

The “Corresponding Source” for a work in object code form means all the source code needed to generate, install, and (for an executable work) run the object code and to modify the work, including scripts to control those activities. However, it does not include the work’s System Libraries, or general-purpose tools or generally available free programs which are used unmodified in performing those activities but which are not part of the work. For example, Corresponding Source includes interface definition files associated with source files for the work, and the source code for shared libraries and dynamically linked subprograms that the work is specifically designed to require, such as by intimate data communication or control flow between those subprograms and other parts of the work.

The Corresponding Source need not include anything that users can regenerate automatically from other parts of the Corresponding Source.

The Corresponding Source for a work in source code form is that same work.

2. Basic Permissions.

All rights granted under this License are granted for the term of copyright on the Program, and are irrevocable provided the stated conditions are met. This License explicitly affirms your unlimited permission to run the unmodified Program. The output from running a covered work is covered by this License only if the output, given its content, constitutes a covered work. This License acknowledges your rights of fair use or other equivalent, as provided by copyright law.

You may make, run and propagate covered works that you do not convey, without conditions so long as your license otherwise remains in force. You may convey covered works to others for the sole purpose of having them make modifications exclusively for you, or provide you with facilities for running those works, provided that you comply with the terms of this License in conveying all material for which you do not control copyright. Those thus making or running the covered works for you must do so exclusively on your behalf, under your direction and control, on terms that prohibit them from making any copies of your copyrighted material outside their relationship with you. Conveying under any other circumstances is permitted solely under the conditions stated below. Sublicensing is not allowed; section 10 makes it unnecessary.

3. Protecting Users' Legal Rights From Anti-Circumvention Law.

No covered work shall be deemed part of an effective technological measure under any applicable law fulfilling obligations under article 11 of the WIPO copyright treaty adopted on 20 December 1996, or similar laws prohibiting or restricting circumvention of such measures.

When you convey a covered work, you waive any legal power to forbid circumvention of technological measures to the extent such circumvention is effected by exercising rights under this License with respect to the covered work, and you disclaim any intention to limit operation or modification of the work as a means of enforcing, against the work's users, your or third parties' legal rights to forbid circumvention of technological measures.

4. Conveying Verbatim Copies.

You may convey verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice; keep intact all notices stating that this License and any non-permissive terms added in accord with section 7 apply to the code; keep intact all notices of the absence of any warranty; and give all recipients a copy of this License along with the Program.

You may charge any price or no price for each copy that you convey, and you may offer support or warranty protection for a fee.

5. Conveying Modified Source Versions.

You may convey a work based on the Program, or the modifications to

produce it from the Program, in the form of source code under the terms of section 4, provided that you also meet all of these conditions:

a) The work must carry prominent notices stating that you modified it, and giving a relevant date.

b) The work must carry prominent notices stating that it is released under this License and any conditions added under section 7. This requirement modifies the requirement in section 4 to “keep intact all notices”.

c) You must license the entire work, as a whole, under this License to anyone who comes into possession of a copy. This License will therefore apply, along with any applicable section 7 additional terms, to the whole of the work, and all its parts, regardless of how they are packaged. This License gives no permission to license the work in any other way, but it does not invalidate such permission if you have separately received it.

d) If the work has interactive user interfaces, each must display Appropriate Legal Notices; however, if the Program has interactive interfaces that do not display Appropriate Legal Notices, your work need not make them do so.

A compilation of a covered work with other separate and independent works, which are not by their nature extensions of the covered work, and which are not combined with it such as to form a larger program, in or on a volume of a storage or distribution medium, is called an “aggregate” if the compilation and its resulting copyright are not used to limit the access or legal rights of the compilation’s users beyond what the individual works permit. Inclusion of a covered work in an aggregate does not cause this License to apply to the other parts of the aggregate.

6. Conveying Non-Source Forms.

You may convey a covered work in object code form under the terms of sections 4 and 5, provided that you also convey the machine-readable Corresponding Source under the terms of this License, in one of these ways:

a) Convey the object code in, or embodied in, a physical product (including a physical distribution medium), accompanied by the Corresponding Source fixed on a durable physical medium customarily used for software interchange.

b) Convey the object code in, or embodied in, a physical product

(including a physical distribution medium), accompanied by a written offer, valid for at least three years and valid for as long as you offer spare parts or customer support for that product model, to give anyone who possesses the object code either (1) a copy of the Corresponding Source for all the software in the product that is covered by this License, on a durable physical medium customarily used for software interchange, for a price no more than your reasonable cost of physically performing this conveying of source, or (2) access to copy the Corresponding Source from a network server at no charge.

c) Convey individual copies of the object code with a copy of the written offer to provide the Corresponding Source. This alternative is allowed only occasionally and noncommercially, and only if you received the object code with such an offer, in accord with subsection 6b.

d) Convey the object code by offering access from a designated place (gratis or for a charge), and offer equivalent access to the Corresponding Source in the same way through the same place at no further charge. You need not require recipients to copy the Corresponding Source along with the object code. If the place to copy the object code is a network server, the Corresponding Source may be on a different server (operated by you or a third party) that supports equivalent copying facilities, provided you maintain clear directions next to the object code saying where to find the Corresponding Source. Regardless of what server hosts the Corresponding Source, you remain obligated to ensure that it is available for as long as needed to satisfy these requirements.

e) Convey the object code using peer-to-peer transmission, provided you inform other peers where the object code and Corresponding Source of the work are being offered to the general public at no charge under subsection 6d.

A separable portion of the object code, whose source code is excluded from the Corresponding Source as a System Library, need not be included in conveying the object code work.

A “User Product” is either (1) a “consumer product”, which means any tangible personal property which is normally used for personal, family, or household purposes, or (2) anything designed or sold for incorporation into a dwelling. In determining whether a product is a consumer product,

doubtful cases shall be resolved in favor of coverage. For a particular product received by a particular user, “normally used” refers to a typical or common use of that class of product, regardless of the status of the particular user or of the way in which the particular user actually uses, or expects or is expected to use, the product. A product is a consumer product regardless of whether the product has substantial commercial, industrial or non-consumer uses, unless such uses represent the only significant mode of use of the product.

“Installation Information” for a User Product means any methods, procedures, authorization keys, or other information required to install and execute modified versions of a covered work in that User Product from a modified version of its Corresponding Source. The information must suffice to ensure that the continued functioning of the modified object code is in no case prevented or interfered with solely because modification has been made.

If you convey an object code work under this section in, or with, or specifically for use in, a User Product, and the conveying occurs as part of a transaction in which the right of possession and use of the User Product is transferred to the recipient in perpetuity or for a fixed term (regardless of how the transaction is characterized), the Corresponding Source conveyed under this section must be accompanied by the Installation Information. But this requirement does not apply if neither you nor any third party retains the ability to install modified object code on the User Product (for example, the work has been installed in ROM).

The requirement to provide Installation Information does not include a requirement to continue to provide support service, warranty, or updates for a work that has been modified or installed by the recipient, or for the User Product in which it has been modified or installed. Access to a network may be denied when the modification itself materially and adversely affects the operation of the network or violates the rules and protocols for communication across the network.

Corresponding Source conveyed, and Installation Information provided, in accord with this section must be in a format that is publicly documented (and with an implementation available to the public in source code form), and must require no special password or key for unpacking, reading or copying.

7. Additional Terms.

“Additional permissions” are terms that supplement the terms of this License by making exceptions from one or more of its conditions.

Additional permissions that are applicable to the entire Program shall be treated as though they were included in this License, to the extent that they are valid under applicable law. If additional permissions apply only to part of the Program, that part may be used separately under those permissions, but the entire Program remains governed by this License without regard to the additional permissions.

When you convey a copy of a covered work, you may at your option remove any additional permissions from that copy, or from any part of it. (Additional permissions may be written to require their own removal in certain cases when you modify the work.) You may place additional permissions on material, added by you to a covered work, for which you have or can give appropriate copyright permission.

Notwithstanding any other provision of this License, for material you add to a covered work, you may (if authorized by the copyright holders of that material) supplement the terms of this License with terms:

- a) Disclaiming warranty or limiting liability differently from the terms of sections 15 and 16 of this License; or
- b) Requiring preservation of specified reasonable legal notices or author attributions in that material or in the Appropriate Legal Notices displayed by works containing it; or
- c) Prohibiting misrepresentation of the origin of that material, or requiring that modified versions of such material be marked in reasonable ways as different from the original version; or
- d) Limiting the use for publicity purposes of names of licensors or authors of the material; or
- e) Declining to grant rights under trademark law for use of some trade names, trademarks, or service marks; or
- f) Requiring indemnification of licensors and authors of that material by anyone who conveys the material (or modified versions of it) with contractual assumptions of liability to the recipient, for any liability that these contractual assumptions directly impose on those licensors and authors.

All other non-permissive additional terms are considered “further restrictions” within the meaning of section 10. If the Program as you received it, or any part of it, contains a notice stating that it is governed by this License along with a term that is a further

restriction, you may remove that term. If a license document contains a further restriction but permits relicensing or conveying under this License, you may add to a covered work material governed by the terms of that license document, provided that the further restriction does not survive such relicensing or conveying.

If you add terms to a covered work in accord with this section, you must place, in the relevant source files, a statement of the additional terms that apply to those files, or a notice indicating where to find the applicable terms.

Additional terms, permissive or non-permissive, may be stated in the form of a separately written license, or stated as exceptions; the above requirements apply either way.

8. Termination.

You may not propagate or modify a covered work except as expressly provided under this License. Any attempt otherwise to propagate or modify it is void, and will automatically terminate your rights under this License (including any patent licenses granted under the third paragraph of section 11).

However, if you cease all violation of this License, then your license from a particular copyright holder is reinstated (a) provisionally, unless and until the copyright holder explicitly and finally terminates your license, and (b) permanently, if the copyright holder fails to notify you of the violation by some reasonable means prior to 60 days after the cessation.

Moreover, your license from a particular copyright holder is reinstated permanently if the copyright holder notifies you of the violation by some reasonable means, this is the first time you have received notice of violation of this License (for any work) from that copyright holder, and you cure the violation prior to 30 days after your receipt of the notice.

Termination of your rights under this section does not terminate the licenses of parties who have received copies or rights from you under this License. If your rights have been terminated and not permanently reinstated, you do not qualify to receive new licenses for the same material under section 10.

9. Acceptance Not Required for Having Copies.

You are not required to accept this License in order to receive or run a copy of the Program. Ancillary propagation of a covered work

occurring solely as a consequence of using peer-to-peer transmission to receive a copy likewise does not require acceptance. However, nothing other than this License grants you permission to propagate or modify any covered work. These actions infringe copyright if you do not accept this License. Therefore, by modifying or propagating a covered work, you indicate your acceptance of this License to do so.

10. Automatic Licensing of Downstream Recipients.

Each time you convey a covered work, the recipient automatically receives a license from the original licensors, to run, modify and propagate that work, subject to this License. You are not responsible for enforcing compliance by third parties with this License.

An “entity transaction” is a transaction transferring control of an organization, or substantially all assets of one, or subdividing an organization, or merging organizations. If propagation of a covered work results from an entity transaction, each party to that transaction who receives a copy of the work also receives whatever licenses to the work the party’s predecessor in interest had or could give under the previous paragraph, plus a right to possession of the Corresponding Source of the work from the predecessor in interest, if the predecessor has it or can get it with reasonable efforts.

You may not impose any further restrictions on the exercise of the rights granted or affirmed under this License. For example, you may not impose a license fee, royalty, or other charge for exercise of rights granted under this License, and you may not initiate litigation (including a cross-claim or counterclaim in a lawsuit) alleging that any patent claim is infringed by making, using, selling, offering for sale, or importing the Program or any portion of it.

11. Patents.

A “contributor” is a copyright holder who authorizes use under this License of the Program or a work on which the Program is based. The work thus licensed is called the contributor’s “contributor version”.

A contributor’s “essential patent claims” are all patent claims owned or controlled by the contributor, whether already acquired or hereafter acquired, that would be infringed by some manner, permitted by this License, of making, using, or selling its contributor version, but do not include claims that would be infringed only as a consequence of further modification of the contributor version. For purposes of this definition, “control” includes the right to grant

patent sublicenses in a manner consistent with the requirements of this License.

Each contributor grants you a non-exclusive, worldwide, royalty-free patent license under the contributor's essential patent claims, to make, use, sell, offer for sale, import and otherwise run, modify and propagate the contents of its contributor version.

In the following three paragraphs, a "patent license" is any express agreement or commitment, however denominated, not to enforce a patent (such as an express permission to practice a patent or covenant not to sue for patent infringement). To "grant" such a patent license to a party means to make such an agreement or commitment not to enforce a patent against the party.

If you convey a covered work, knowingly relying on a patent license, and the Corresponding Source of the work is not available for anyone to copy, free of charge and under the terms of this License, through a publicly available network server or other readily accessible means, then you must either (1) cause the Corresponding Source to be so available, or (2) arrange to deprive yourself of the benefit of the patent license for this particular work, or (3) arrange, in a manner consistent with the requirements of this License, to extend the patent license to downstream recipients. "Knowingly relying" means you have actual knowledge that, but for the patent license, your conveying the covered work in a country, or your recipient's use of the covered work in a country, would infringe one or more identifiable patents in that country that you have reason to believe are valid.

If, pursuant to or in connection with a single transaction or arrangement, you convey, or propagate by procuring conveyance of, a covered work, and grant a patent license to some of the parties receiving the covered work authorizing them to use, propagate, modify or convey a specific copy of the covered work, then the patent license you grant is automatically extended to all recipients of the covered work and works based on it.

A patent license is "discriminatory" if it does not include within the scope of its coverage, prohibits the exercise of, or is conditioned on the non-exercise of one or more of the rights that are specifically granted under this License. You may not convey a covered work if you are a party to an arrangement with a third party that is in the business of distributing software, under which you make payment

to the third party based on the extent of your activity of conveying the work, and under which the third party grants, to any of the parties who would receive the covered work from you, a discriminatory patent license (a) in connection with copies of the covered work conveyed by you (or copies made from those copies), or (b) primarily for and in connection with specific products or compilations that contain the covered work, unless you entered into that arrangement, or that patent license was granted, prior to 28 March 2007.

Nothing in this License shall be construed as excluding or limiting any implied license or other defenses to infringement that may otherwise be available to you under applicable patent law.

12. No Surrender of Others' Freedom.

If conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot convey a covered work so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not convey it at all. For example, if you agree to terms that obligate you to collect a royalty for further conveying from those to whom you convey the Program, the only way you could satisfy both those terms and this License would be to refrain entirely from conveying the Program.

13. Use with the GNU Affero General Public License.

Notwithstanding any other provision of this License, you have permission to link or combine any covered work with a work licensed under version 3 of the GNU Affero General Public License into a single combined work, and to convey the resulting work. The terms of this License will continue to apply to the part which is the covered work, but the special requirements of the GNU Affero General Public License, section 13, concerning interaction through a network will apply to the combination as such.

14. Revised Versions of this License.

The Free Software Foundation may publish revised and/or new versions of the GNU General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Program specifies that a certain numbered version of the GNU General Public License “or any later version” applies to it, you have the

option of following the terms and conditions either of that numbered version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of the GNU General Public License, you may choose any version ever published by the Free Software Foundation.

If the Program specifies that a proxy can decide which future versions of the GNU General Public License can be used, that proxy's public statement of acceptance of a version permanently authorizes you to choose that version for the Program.

Later license versions may give you additional or different permissions. However, no additional obligations are imposed on any author or copyright holder as a result of your choosing to follow a later version.

15. Disclaimer of Warranty.

THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

16. Limitation of Liability.

IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MODIFIES AND/OR CONVEYS THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

17. Interpretation of Sections 15 and 16.

If the disclaimer of warranty and limitation of liability provided above cannot be given local legal effect according to their terms, reviewing courts shall apply local law that most closely approximates an absolute waiver of all civil liability in connection with the Program, unless a warranty or assumption of liability accompanies a

copy of the Program in return for a fee.

END OF TERMS AND CONDITIONS

How to Apply These Terms to Your New Programs

If you develop a new program, and you want it to be of the greatest possible use to the public, the best way to achieve this is to make it free software which everyone can redistribute and change under these terms.

To do so, attach the following notices to the program. It is safest to attach them to the start of each source file to most effectively state the exclusion of warranty; and each file should have at least the “copyright” line and a pointer to where the full notice is found.

<one line to give the program’s name and a brief idea of what it does.>

Copyright (C) <year> <name of author>

This program is free software: you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation, either version 3 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program. If not, see <<http://www.gnu.org/licenses/>>.

Also add information on how to contact you by electronic and paper mail.

If the program does terminal interaction, make it output a short notice like this when it starts in an interactive mode:

<program> Copyright (C) <year> <name of author>

This program comes with ABSOLUTELY NO WARRANTY; for details type `show w`.

This is free software, and you are welcome to redistribute it under certain conditions; type `show c` for details.

The hypothetical commands `show w` and `show c` should show the appropriate parts of the General Public License. Of course, your program’s commands might be different; for a GUI interface, you would use an “about box”.

You should also get your employer (if you work as a programmer) or school, if any, to sign a “copyright disclaimer” for the program, if necessary.

For more information on this, and how to apply and follow the GNU GPL, see <<http://www.gnu.org/licenses/>>.

The GNU General Public License does not permit incorporating your program into proprietary programs. If your program is a subroutine library, you

may consider it more useful to permit linking proprietary applications with the library. If this is what you want to do, use the GNU Lesser General Public License instead of this License. But first, please read <http://www.gnu.org/philosophy/why-not-lgpl.html>.

Toolchain - linux-headers:

The Linux Kernel is provided under:

SPDX-License-Identifier: GPL-2.0 WITH Linux-syscall-note

Being under the terms of the GNU General Public License version 2 only, according with:

LICENSES/preferred/GPL-2.0

With an explicit syscall exception, as stated at:

LICENSES/exceptions/Linux-syscall-note

In addition, other licenses may also apply. Please see:

Documentation/process/license-rules.rst

for more details.

Toolchain - uclibc:

GNU LESSER GENERAL PUBLIC LICENSE

Version 2.1, February 1999

Copyright (C) 1991, 1999 Free Software Foundation, Inc.

51 Franklin St, Fifth Floor, Boston, MA 02110-1301 USA

Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

[This is the first released version of the Lesser GPL. It also counts as the successor of the GNU Library Public License, version 2, hence the version number 2.1.]

Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public Licenses are intended to guarantee your freedom to share and change free software—to make sure the software is free for all its users.

This license, the Lesser General Public License, applies to some specially designated software packages—typically libraries—of the Free Software Foundation and other authors who decide to use it. You can use it too, but we suggest you first think carefully about whether this license or the ordinary General Public License is the better strategy to use in any particular case, based on the explanations below.

When we speak of free software, we are referring to freedom of use, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish); that you receive source code or can get it if you want it; that you can change the software and use pieces of it in new free programs; and that you are informed that you can do these things.

To protect your rights, we need to make restrictions that forbid distributors to deny you these rights or to ask you to surrender these rights. These restrictions translate to certain responsibilities for you if you distribute copies of the library or if you modify it.

For example, if you distribute copies of the library, whether gratis or for a fee, you must give the recipients all the rights that we gave you. You must make sure that they, too, receive or can get the source code. If you link other code with the library, you must provide complete object files to the recipients, so that they can relink them with the library after making changes to the library and recompiling it. And you must show them these terms so they know their rights.

We protect your rights with a two-step method: (1) we copyright the library, and (2) we offer you this license, which gives you legal permission to copy, distribute and/or modify the library.

To protect each distributor, we want to make it very clear that there is no warranty for the free library. Also, if the library is modified by someone else and passed on, the recipients should know that what they have is not the original version, so that the original author's reputation will not be affected by problems that might be introduced by others.

Finally, software patents pose a constant threat to the existence of any free program. We wish to make sure that a company cannot effectively restrict the users of a free program by obtaining a restrictive license from a patent holder. Therefore, we insist that any patent license obtained for a version of the library must be consistent with the full freedom of use specified in this license.

Most GNU software, including some libraries, is covered by the ordinary GNU General Public License. This license, the GNU Lesser General Public License, applies to certain designated libraries, and is quite different from the ordinary General Public License. We use this license for certain libraries in order to permit linking those

libraries into non-free programs.

When a program is linked with a library, whether statically or using a shared library, the combination of the two is legally speaking a combined work, a derivative of the original library. The ordinary General Public License therefore permits such linking only if the entire combination fits its criteria of freedom. The Lesser General Public License permits more lax criteria for linking other code with the library.

We call this license the “Lesser” General Public License because it does Less to protect the user’s freedom than the ordinary General Public License. It also provides other free software developers Less of an advantage over competing non-free programs. These disadvantages are the reason we use the ordinary General Public License for many libraries. However, the Lesser license provides advantages in certain special circumstances.

For example, on rare occasions, there may be a special need to encourage the widest possible use of a certain library, so that it becomes a de-facto standard. To achieve this, non-free programs must be allowed to use the library. A more frequent case is that a free library does the same job as widely used non-free libraries. In this case, there is little to gain by limiting the free library to free software only, so we use the Lesser General Public License.

In other cases, permission to use a particular library in non-free programs enables a greater number of people to use a large body of free software. For example, permission to use the GNU C Library in non-free programs enables many more people to use the whole GNU operating system, as well as its variant, the GNU/Linux operating system.

Although the Lesser General Public License is Less protective of the users’ freedom, it does ensure that the user of a program that is linked with the Library has the freedom and the wherewithal to run that program using a modified version of the Library.

The precise terms and conditions for copying, distribution and modification follow. Pay close attention to the difference between a “work based on the library” and a “work that uses the library”. The former contains code derived from the library, whereas the latter must be combined with the library in order to run.

GNU LESSER GENERAL PUBLIC LICENSE

TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

0. This License Agreement applies to any software library or other program which contains a notice placed by the copyright holder or other authorized party saying it may be distributed under the terms of this Lesser General Public License (also called “this License”).

Each licensee is addressed as “you”.

A “library” means a collection of software functions and/or data prepared so as to be conveniently linked with application programs (which use some of those functions and data) to form executables.

The “Library”, below, refers to any such software library or work which has been distributed under these terms. A “work based on the Library” means either the Library or any derivative work under copyright law: that is to say, a work containing the Library or a portion of it, either verbatim or with modifications and/or translated straightforwardly into another language. (Hereinafter, translation is included without limitation in the term “modification”.)

“Source code” for a work means the preferred form of the work for making modifications to it. For a library, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the library.

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running a program using the Library is not restricted, and output from such a program is covered only if its contents constitute a work based on the Library (independent of the use of the Library in a tool for writing it). Whether that is true depends on what the Library does and what the program that uses the Library does.

1. You may copy and distribute verbatim copies of the Library’s complete source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and distribute a copy of this License along with the Library.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Library or any portion of it, thus forming a work based on the Library, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:

- a) The modified work must itself be a software library.
- b) You must cause the files modified to carry prominent notices stating that you changed the files and the date of any change.
- c) You must cause the whole of the work to be licensed at no charge to all third parties under the terms of this License.
- d) If a facility in the modified Library refers to a function or a table of data to be supplied by an application program that uses the facility, other than as an argument passed when the facility is invoked, then you must make a good faith effort to ensure that, in the event an application does not supply such function or table, the facility still operates, and performs whatever part of its purpose remains meaningful.

(For example, a function in a library to compute square roots has a purpose that is entirely well-defined independent of the application. Therefore, Subsection 2d requires that any application-supplied function or table used by this function must be optional: if the application does not supply it, the square root function must still compute square roots.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Library, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Library, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Library.

In addition, mere aggregation of another work not based on the Library with the Library (or with a work based on the Library) on a volume of

a storage or distribution medium does not bring the other work under the scope of this License.

3. You may opt to apply the terms of the ordinary GNU General Public License instead of this License to a given copy of the Library. To do this, you must alter all the notices that refer to this License, so that they refer to the ordinary GNU General Public License, version 2, instead of to this License. (If a newer version than version 2 of the ordinary GNU General Public License has appeared, then you can specify that version instead if you wish.) Do not make any other change in these notices.

Once this change is made in a given copy, it is irreversible for that copy, so the ordinary GNU General Public License applies to all subsequent copies and derivative works made from that copy.

This option is useful when you wish to copy part of the code of the Library into a program that is not a library.

4. You may copy and distribute the Library (or a portion or derivative of it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange.

If distribution of object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place satisfies the requirement to distribute the source code, even though third parties are not compelled to copy the source along with the object code.

5. A program that contains no derivative of any portion of the Library, but is designed to work with the Library by being compiled or linked with it, is called a “work that uses the Library”. Such a work, in isolation, is not a derivative work of the Library, and therefore falls outside the scope of this License.

However, linking a “work that uses the Library” with the Library creates an executable that is a derivative of the Library (because it contains portions of the Library), rather than a “work that uses the library”. The executable is therefore covered by this License.

Section 6 states terms for distribution of such executables.

When a “work that uses the Library” uses material from a header file that is part of the Library, the object code for the work may be a

derivative work of the Library even though the source code is not.

Whether this is true is especially significant if the work can be linked without the Library, or if the work is itself a library. The threshold for this to be true is not precisely defined by law.

If such an object file uses only numerical parameters, data structure layouts and accessors, and small macros and small inline functions (ten lines or less in length), then the use of the object file is unrestricted, regardless of whether it is legally a derivative work. (Executables containing this object code plus portions of the Library will still fall under Section 6.)

Otherwise, if the work is a derivative of the Library, you may distribute the object code for the work under the terms of Section 6.

Any executables containing that work also fall under Section 6, whether or not they are linked directly with the Library itself.

6. As an exception to the Sections above, you may also combine or link a “work that uses the Library” with the Library to produce a work containing portions of the Library, and distribute that work under terms of your choice, provided that the terms permit modification of the work for the customer’s own use and reverse engineering for debugging such modifications.

You must give prominent notice with each copy of the work that the Library is used in it and that the Library and its use are covered by this License. You must supply a copy of this License. If the work during execution displays copyright notices, you must include the copyright notice for the Library among them, as well as a reference directing the user to the copy of this License. Also, you must do one of these things:

a) Accompany the work with the complete corresponding machine-readable source code for the Library including whatever changes were used in the work (which must be distributed under Sections 1 and 2 above); and, if the work is an executable linked with the Library, with the complete machine-readable “work that uses the Library”, as object code and/or source code, so that the user can modify the Library and then relink to produce a modified executable containing the modified Library. (It is understood that the user who changes the contents of definitions files in the Library will not necessarily be able to recompile the application to use the modified definitions.)

b) Use a suitable shared library mechanism for linking with the Library. A suitable mechanism is one that (1) uses at run time a copy of the library already present on the user's computer system, rather than copying library functions into the executable, and (2) will operate properly with a modified version of the library, if the user installs one, as long as the modified version is interface-compatible with the version that the work was made with.

c) Accompany the work with a written offer, valid for at least three years, to give the same user the materials specified in Subsection 6a, above, for a charge no more than the cost of performing this distribution.

d) If distribution of the work is made by offering access to copy from a designated place, offer equivalent access to copy the above specified materials from the same place.

e) Verify that the user has already received a copy of these materials or that you have already sent this user a copy.

For an executable, the required form of the “work that uses the Library” must include any data and utility programs needed for reproducing the executable from it. However, as a special exception, the materials to be distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

It may happen that this requirement contradicts the license restrictions of other proprietary libraries that do not normally accompany the operating system. Such a contradiction means you cannot use both them and the Library together in an executable that you distribute.

7. You may place library facilities that are a work based on the Library side-by-side in a single library together with other library facilities not covered by this License, and distribute such a combined library, provided that the separate distribution of the work based on the Library and of the other library facilities is otherwise permitted, and provided that you do these two things:

a) Accompany the combined library with a copy of the same work based on the Library, uncombined with any other library facilities. This must be distributed under the terms of the

Sections above.

b) Give prominent notice with the combined library of the fact that part of it is a work based on the Library, and explaining where to find the accompanying uncombined form of the same work.

8. You may not copy, modify, sublicense, link with, or distribute the Library except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense, link with, or distribute the Library is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.

9. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Library or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Library (or any work based on the Library), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Library or works based on it.

10. Each time you redistribute the Library (or any work based on the Library), the recipient automatically receives a license from the original licensor to copy, distribute, link with or modify the Library subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties with this License.

11. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Library at all. For example, if a patent license would not permit royalty-free redistribution of the Library by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Library.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply, and the section as a whole is intended to apply in other circumstances. It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

12. If the distribution and/or use of the Library is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Library under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.

13. The Free Software Foundation may publish revised and/or new versions of the Lesser General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns. Each version is given a distinguishing version number. If the Library specifies a version number of this License which applies to it and “any later version”, you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Library does not specify a license version number, you may choose any version ever published by the Free Software Foundation.

14. If you wish to incorporate parts of the Library into other free programs whose distribution conditions are incompatible with these, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our

decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

NO WARRANTY

15. BECAUSE THE LIBRARY IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE LIBRARY, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE LIBRARY “AS IS” WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE LIBRARY IS WITH YOU. SHOULD THE LIBRARY PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

16. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE LIBRARY AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE LIBRARY (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE LIBRARY TO OPERATE WITH ANY OTHER SOFTWARE), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

END OF TERMS AND CONDITIONS

How to Apply These Terms to Your New Libraries

If you develop a new library, and you want it to be of the greatest possible use to the public, we recommend making it free software that everyone can redistribute and change. You can do so by permitting redistribution under these terms (or, alternatively, under the terms of the ordinary General Public License).

To apply these terms, attach the following notices to the library. It is safest to attach them to the start of each source file to most effectively convey the exclusion of warranty; and each file should have at least the “copyright” line and a pointer to where the full notice is found.

<one line to give the library’s name and a brief idea of what it does.>

Copyright (C) <year> <name of author>

This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public

License as published by the Free Software Foundation; either version 2.1 of the License, or (at your option) any later version.

This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

You should have received a copy of the GNU Lesser General Public License along with this library; if not, write to the Free Software Foundation, Inc., 51 Franklin St, Fifth Floor, Boston, MA 02110-1301 USA
Also add information on how to contact you by electronic and paper mail.
You should also get your employer (if you work as a programmer) or your school, if any, to sign a “copyright disclaimer” for the library, if necessary. Here is a sample; alter the names:
Yoyodyne, Inc., hereby disclaims all copyright interest in the library `Frob' (a library for tweaking knobs) written by James Random Hacker.
<signature of Ty Coon>, 1 April 1990
Ty Coon, President of Vice
That's all there is to it!

RedBoot - RedBoot:

GNU GENERAL PUBLIC LICENSE

Version 2, June 1991

Copyright (C) 1989, 1991 Free Software Foundation, Inc.

59 Temple Place, Suite 330, Boston, MA 02111-1307 USA

Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change free software—to make sure the software is free for all its users. This General Public License applies to most of the Free Software Foundation's software and to any other program whose authors commit to using it. (Some other Free Software Foundation software is covered by the GNU Library General Public License instead.) You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you

have the freedom to distribute copies of free software (and charge for this service if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs; and that you know you can do these things.

To protect your rights, we need to make restrictions that forbid anyone to deny you these rights or to ask you to surrender the rights.

These restrictions translate to certain responsibilities for you if you distribute copies of the software, or if you modify it.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must give the recipients all the rights that you have. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

We protect your rights with two steps: (1) copyright the software, and (2) offer you this license which gives you legal permission to copy, distribute and/or modify the software.

Also, for each author's protection and ours, we want to make certain that everyone understands that there is no warranty for this free software. If the software is modified by someone else and passed on, we want its recipients to know that what they have is not the original, so that any problems introduced by others will not reflect on the original authors' reputations.

Finally, any free program is threatened constantly by software patents. We wish to avoid the danger that redistributors of a free program will individually obtain patent licenses, in effect making the program proprietary. To prevent this, we have made it clear that any patent must be licensed for everyone's free use or not licensed at all.

The precise terms and conditions for copying, distribution and modification follow.

GNU GENERAL PUBLIC LICENSE

TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

0. This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License. The "Program", below, refers to any such program or work, and a "work based on the Program" means either the Program or any derivative work under copyright law: that is to say, a work containing the Program or a portion of it, either verbatim or with modifications and/or translated into another

language. (Hereinafter, translation is included without limitation in the term “modification”.) Each licensee is addressed as “you”. Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running the Program is not restricted, and the output from the Program is covered only if its contents constitute a work based on the Program (independent of having been made by running the Program). Whether that is true depends on what the Program does.

1. You may copy and distribute verbatim copies of the Program’s source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and give any other recipients of the Program a copy of this License along with the Program.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Program or any portion of it, thus forming a work based on the Program, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:

a) You must cause the modified files to carry prominent notices stating that you changed the files and the date of any change.

b) You must cause any work that you distribute or publish, that in whole or in part contains or is derived from the Program or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this License.

c) If the modified program normally reads commands interactively when run, you must cause it, when started running for such interactive use in the most ordinary way, to print or display an announcement including an appropriate copyright notice and a notice that there is no warranty (or else, saying that you provide a warranty) and that users may redistribute the program under these conditions, and telling the user how to view a copy of this License. (Exception: if the Program itself is interactive but does not normally print such an announcement, your work based on the Program is not required to print an announcement.)

These requirements apply to the modified work as a whole. If

identifiable sections of that work are not derived from the Program, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Program, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it. Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Program.

In addition, mere aggregation of another work not based on the Program with the Program (or with a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you also do one of the following:

- a) Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
- b) Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code, to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
- c) Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is allowed only for noncommercial distribution and only if you received the program in object code or executable form with such an offer, in accord with Subsection b above.)

The source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the executable. However, as a

special exception, the source code distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

If distribution of executable or object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place counts as distribution of the source code, even though third parties are not compelled to copy the source along with the object code.

4. You may not copy, modify, sublicense, or distribute the Program except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense or distribute the Program is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.

5. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Program or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Program (or any work based on the Program), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Program or works based on it.

6. Each time you redistribute the Program (or any work based on the Program), the recipient automatically receives a license from the original licensor to copy, distribute or modify the Program subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties to this License.

7. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this

License and any other pertinent obligations, then as a consequence you may not distribute the Program at all. For example, if a patent license would not permit royalty-free redistribution of the Program by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Program.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system, which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

8. If the distribution and/or use of the Program is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Program under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.

9. The Free Software Foundation may publish revised and/or new versions of the General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Program specifies a version number of this License which applies to it and “any later version”, you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of

this License, you may choose any version ever published by the Free Software Foundation.

10. If you wish to incorporate parts of the Program into other free programs whose distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

NO WARRANTY

11. BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM “AS IS” WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

12. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

END OF TERMS AND CONDITIONS

How to Apply These Terms to Your New Programs

If you develop a new program, and you want it to be of the greatest possible use to the public, the best way to achieve this is to make it free software which everyone can redistribute and change under these terms.

To do so, attach the following notices to the program. It is safest to attach them to the start of each source file to most effectively convey the exclusion of warranty; and each file should have at least the “copyright” line and a pointer to where the full notice is found.

<one line to give the program’s name and a brief idea of what it does.>

Copyright (C) <year> <name of author>

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA Also add information on how to contact you by electronic and paper mail.

If the program is interactive, make it output a short notice like this when it starts in an interactive mode:

Gnomovision version 69, Copyright (C) year name of author

Gnomovision comes with ABSOLUTELY NO WARRANTY; for details type `show w'.

This is free software, and you are welcome to redistribute it under certain conditions; type `show c' for details.

The hypothetical commands `show w' and `show c' should show the appropriate parts of the General Public License. Of course, the commands you use may be called something other than `show w' and `show c'; they could even be mouse-clicks or menu items—whatever suits your program.

You should also get your employer (if you work as a programmer) or your school, if any, to sign a “copyright disclaimer” for the program, if necessary. Here is a sample; alter the names:

Yoyodyne, Inc., hereby disclaims all copyright interest in the program

`Gnomovision' (which makes passes at compilers) written by James Hacker.

<signature of Ty Coon>, 1 April 1989

Ty Coon, President of Vice

This General Public License does not permit incorporating your program into proprietary programs. If your program is a subroutine library, you may consider it more useful to permit linking proprietary applications with the library. If this is what you want to do, use the GNU Library General Public License instead of this License.
